



CYCLONIC SUCTION



700W POWER



2L CAPACITY



5M CORDED



WASHABLE FILTER



LIGHTWEIGHT



TORNADO CYLINDER

700W CYCLONIC VACUUM

User Manual



*Please refer to the warranty section for terms of your extended guarantee.

*Terms and conditions apply.

IMPORTANT SAFEGUARDS

 
When using electrical appliances, basic safety precautions should always be followed. These instructions should be saved for future reference:

- Read and familiarise yourself with all operating instructions before using this Vacuum Cleaner.
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years when it is energised or cooling down.
- Do not immerse the appliance or its cord in water or any other liquids.
- Do not leave the appliance unattended during use.
- Do not leave the appliance unattended whilst connected to the mains supply.
- Do not use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place user at serious risk.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard
- Do not allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- This appliance is intended for household use only and should not be used for industrial purposes.
- Do not use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- Do not use this appliance for anything other than its intended use.
- Do not push objects into any openings as damage to the appliance and/or electric shock may occur.
- Unplug after each use. Grasp the plug, not the cord.




- Do not pull or carry the Vacuum Cleaner by the electrical cord, use the handle provided.
- Ensure fingers and other objects are never placed in any part of the vacuum cleaner. Clothing or hair may become trapped if the vacuum is used improperly.
- Keep hair, loose clothing, jewellery, fingers and all parts of the body away from openings and moving parts.
- Keep all air vents clear and free of dust, lint, hair and anything else that may reduce airflow.
- Avoid directing the appliance towards naked flames as the air discharged may extinguish gas fires or pilot lights and may disturb ashes in open fires.
- Do not Vacuum water or any other liquids with this vacuum.
- Do not Vacuum hot ashes or lit cigarettes, etc.

Description of Parts – Vacuum Cleaner (rear view)

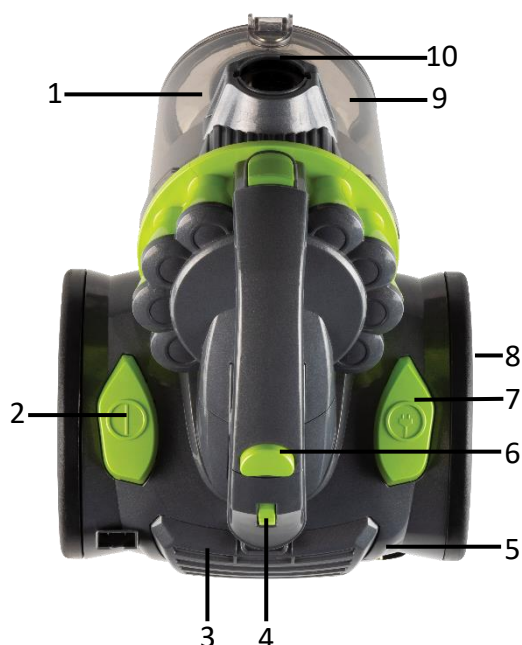


1. Cyclonic filter assembly
2. On/off button
3. Rear air outlet & Hepa filter
4. Power/speed controller
5. Mains cable & plug
6. Cylinder release button
7. Cable retract button (press to retract cable)
8. Wheel(s)
9. Dust compartment
10. Air intake/hose connector
11. Floor tool
12. Crevice & Upholstery multi tool
13. Flexible hose
14. Hose connector
15. Air control valve
16. Hose tool connector
17. Telescopic Tube

 Description of Parts – Accessories

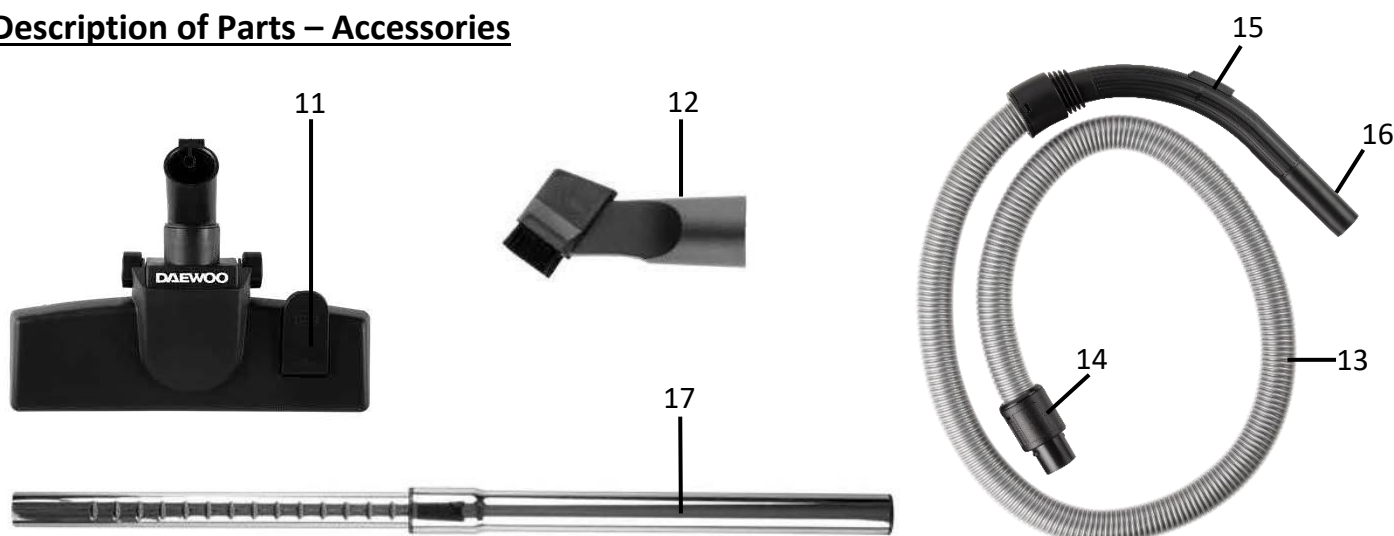

Description of Parts – Cylinder detail

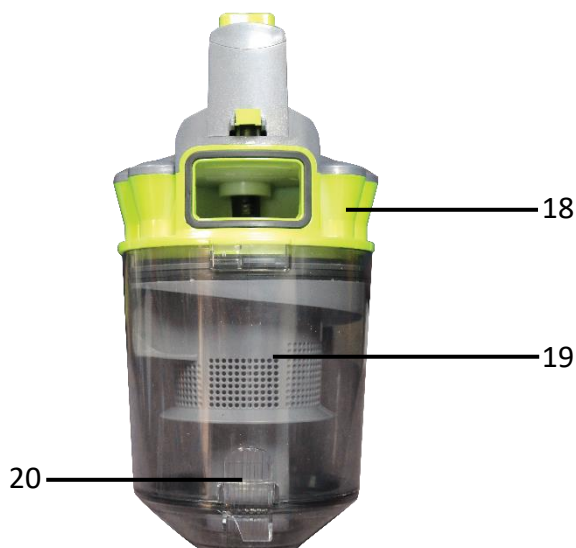 


- 18. Filter cover
- 19. Cyclonic filter
- 20. Dust release catch

Assembling Your Vacuum Cleaner

CAUTION Ensure that the vacuum cleaner is not connected to the mains supply before using the attachments.

Attaching the Flexible Hose (13) to the vacuum

 
Attach the **Flexible Hose (13)** to the vacuum cleaner by pushing the **Hose Connector (14)** into the **Air Intake (10)** and rotating anticlockwise, arrowed below:

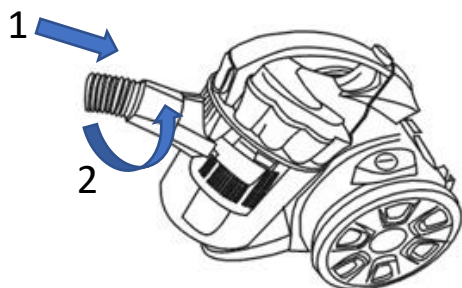

NB to remove the hose, rotate the **Hose Connector (14)** clockwise and pull out.

Attaching the Telescopic Tube (17) and Floor Tool (11)

 1. Push the **Telescopic Tube (17)** onto the **Hose tool connector (16)** as shown below left:

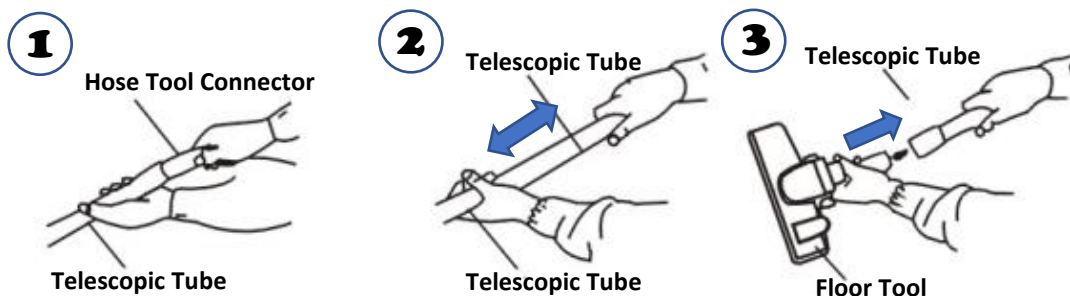


2. Extend the **Telescopic Tube (17)** to the desired length by pushing the catch down and extending.

3. Attach the **Floor Tool (11)** to the other end as shown above.



Using Your Vacuum Cleaner

 1. Pull the **Mains Cable and Plug** (5) out of the vacuum cleaner, being careful not to pull the cable out beyond the red mark but after the yellow mark.
2. Insert the mains plug into the nearest socket.
3. Press the **On/off button** (2) to power up the vacuum.

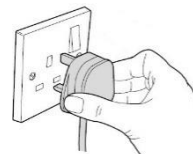

NB Adjust the lever on the **Floor Tool** (11) according to the type of floor being cleaned. Push the lever down for use on hard floors (i.e. non carpeted), pull the lever up for vacuum cleaning carpets:

 


Left: Adjust the lever on the Floor Tool for carpeted or hard floors:

Up for carpets
Down for hard floors

Using the Crevice & Upholstery multi tool (12)

Attach the **Crevice & Upholstery multi tool** (12) onto the **Telescopic Tube** (17) to clean carpet edges, upholstered furniture and hard to get at areas:

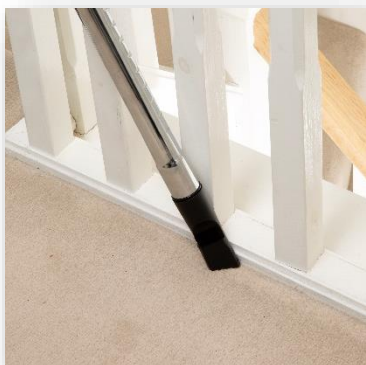

Left: Attached the Crevice & Upholstery multi tool to clean carpet edges



Right: Fold the brush down to clean hard to get at areas and upholstery.

NB If the **Telescopic Tube** (17) is not required, attach the **Crevice & Upholstery multi tool** (12) or the **Floor tool** (11) directly to the **Hose tool connector** (16) on the end of the flexible hose, this is useful whilst cleaning soft furnishings, stairs, etc. as below:



Left: Attached the Crevice & Upholstery multi tool to the Hose. Use the brush to clean upholstery.



Right: Attached the Floor tool to the Hose to clean the stairs.

 


Using the power/speed controller (4)


This control is useful for varying the suction power. Rotate the control downwards to reduce power whilst cleaning hard floors or similar and rotate upwards to increase suction power for carpets, rugs, etc.

Emptying and Cleaning Your Vacuum Cleaner

WARNING Always disconnect the cleaner from the mains power supply before cleaning.

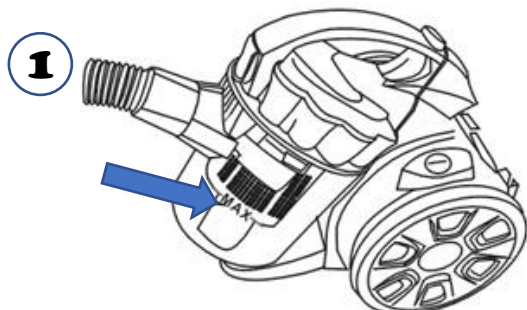


 WARNING do not continue to use your vacuum cleaner once the 'MAX' mark has been reached as permanent damage may occur to the appliance.

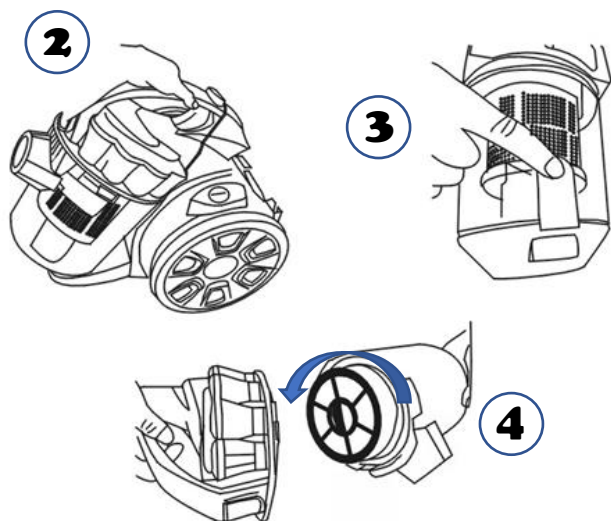



1. Once the dust level reaches the 'MAX' mark (arrowed left) on the **Dust compartment** (9) it will need emptying and the filters cleaned.
2. To empty the cleaner, press the **Cylinder release button** (6) and remove the cylinder.
3. Hold the **Dust compartment** (10) over a dust bin and pull the **Dust release catch** (20) outwards slightly to open and allow the dust to fall out of the into the bin.
4. Next twist off the **Filter cover** (18) by rotating it anticlockwise and remove.

 5. Remove the Hepa (a) and the foam (b) filter (arrowed right). Wash the filters in running water until the water runs clear. Allow the filters to dry for 24 hours before reuse.

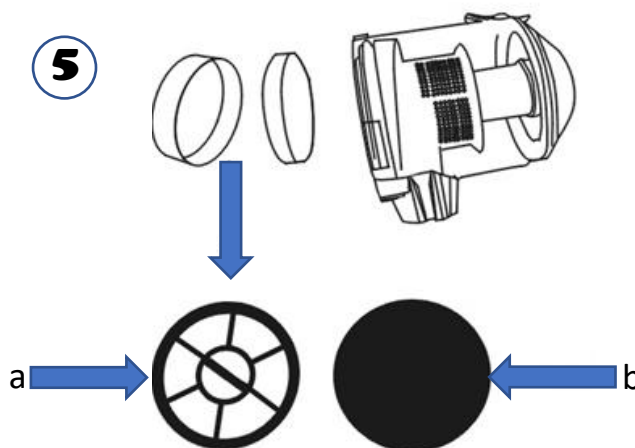

  6. Lift the **Cyclonic filter** (19) out of the **Dust compartment** (9) and again wash in running water until clean. Allow the filter to dry for 24 hours before reuse.

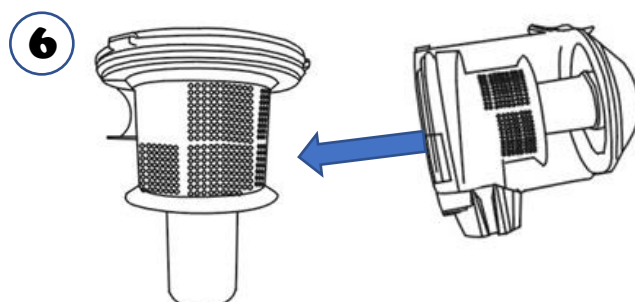

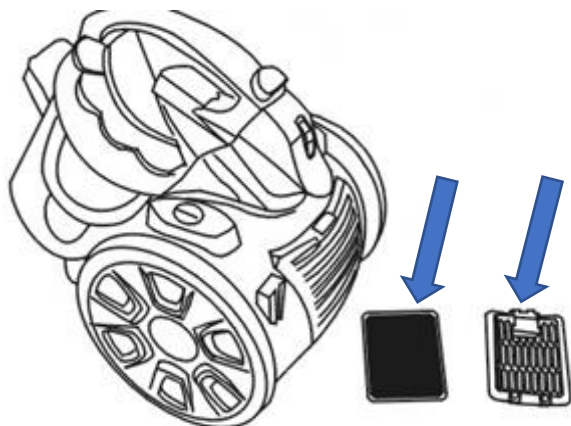7


7. Finally, remove the **Rear outlet & Hepa filter (3)** and wash the filter clean ensuring it is thoroughly dry before reuse.

 
 
Care and Use of your Vacuum Cleaner

WARNING Always disconnect the cleaner from the mains power supply before cleaning.

- Clean outside of the cleaner with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the cleaner in water or any other liquids.
- Empty the **Dust Compartment (9)** as soon as the 'MAX' line is reached.*
- Wash the Hepa, Sponge and Cyclonic Filters regularly – see table below.
- Allow all the filters to thoroughly dry out for 24 hours before reassembly and use.

***WARNING** do not continue to use your vacuum cleaner once the 'MAX' mark has been reached as permanent damage may occur to the appliance.

Recommended cleaning times

Filter Type	Recommended cleaning period
Round Hepa Filter 	• Shake out debris when you empty the dust container • Rinse under warm water once a month • Allow to dry thoroughly for 24 hours before reuse.
Round Sponge Filter 	• Occasionally remove any dust/debris as necessary. • The filter should also be rinsed under warm water once a month. • Allow to dry thoroughly for 24 hours before reuse.
Rear Outlet Hepa Filter 	• Shake out debris once a month • Rinse under warm water once every 3-6 months • Allow to dry thoroughly for 24 hours before reuse.
Cyclonic Filter 	• Shake out debris once a month • Rinse under warm water once a month. • Allow to dry thoroughly for 24 hours before reuse.

 
WARNING Ensure the filters are cleaned periodically according to the table above, failure to clean the filters regularly will severely impair the performance and permanent damage may occur to the appliance.



Fitting a new plug

The mains lead must be connected as shown below. The wires are coloured with the following code - Brown wire = Live (L), Blue wire = Neutral (N).

NB no connection must be made to the Earth (E) terminal.

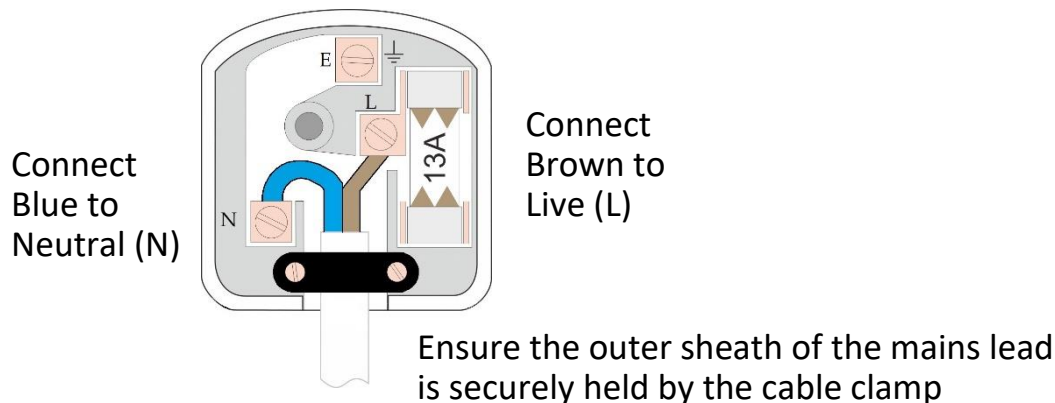

- The Blue wire must be connected to the terminal marked N or coloured Black.
- The Brown wire must be connected to the terminal marked L or coloured Red.
- Check that there are no cut or stray strands of wire inside the plug.
- Use a 13 Amp BS 1362 fuse, only use BSI or ASTA approved fuses.
- If you are in any way unsure which plug or fuse to use, always refer to a qualified electrician.
- After replacing or changing a fuse on a moulded plug, the cover must be refitted to the plug; the appliance must not be used without a fuse cover.

Technical Specification

Model Number	FLR00046
Supply Voltage	AC 220-240V ~ 50/60Hz
Rated Power	700W
Protection Class	II
Unpacked Weight (approx.)	3.8 Kgs
Dimensions (approx.)	330mm (l) x 230mm (w) x 260mm (h)
Vacuum	≥17kpa
Noise Level	79dB
Dust Compartment Capacity	2.0L

Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team at help@daewooelectricals.com or call 0161 831 7879.


● Replacement parts and accessories are guaranteed for 1 year from the date of purchase.

● It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance




Troubleshooting Guide

Problem	Possible Cause	Solution
Unit fails to turn on.	The unit may not be properly plugged in. The fuse may have tripped.	Ensure the plug is fully inserted into the socket and the socket is switched on. Check the fuse on the mains board, if it has tripped, reset it.
Low suction or poor pick-up.	Cylinder is full. Filters are clogged. Blockage in the hose.	Empty the cylinder. Check and clean the filters. Check the hose and clear if necessary.
The vacuum is making a "hissing" sound.	The airflow is restricted	Empty the cylinder. Check and clean the filters. Check the hose and clear any blockages if necessary.

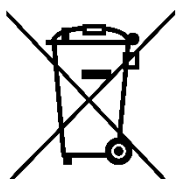 

 Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

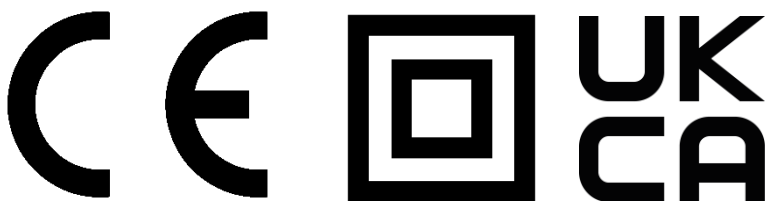



WARRANTY

Thank you for purchasing your Daewoo Vacuum.

As part of our commitment to quality we are offering you an extra 2 years warranty in addition to your 1 year guarantee.

Your Daewoo vacuum product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defects should arise due to faulty workmanship or material, your faulty vacuum should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The Guarantee is rendered invalid if the product has been resold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing) If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty* please register your purchase online within 28 days of the original purchase date by registering at www.daewoowarrantyregistration.com/warranty-registration

**Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.*

**ESG Ltd
Manchester M3 1JS**

www.esgltd.com

**Daewoo® is a registered trademark.
Produced and imported under licence by ESG Ltd**

