 


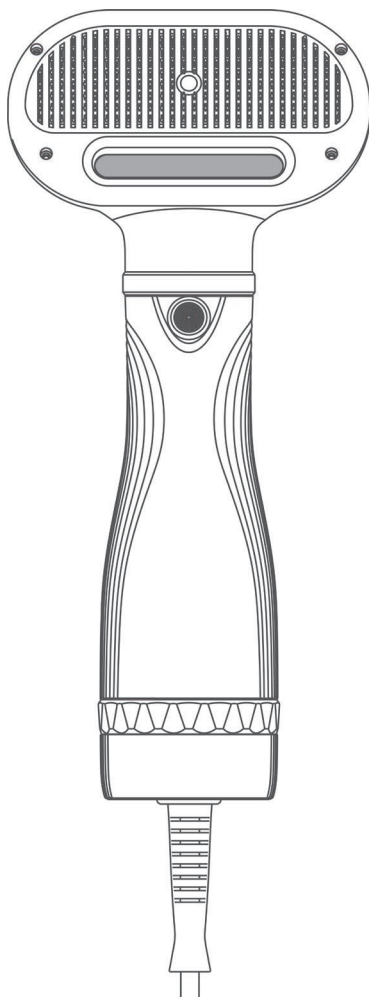

GROOMING HAIR DRYER

WITH SLICKER BRUSH

PPHRDRYSBRA

SAFETY & WARNINGS

Read all the instructions and warnings in this user guide prior to first use. Retain this user guide for future reference.




Do not use this device near areas containing water (for example, bathtubs, showers, basins)


- Ensure the voltage used by this device (AC 220-230V) matches the voltage of your power socket.
- Do not allow children to use this device.
- This device is intended for indoor household use. Do not use this device for any other purpose.
- Do not use this device in corrosive or explosive environments.
- Do not allow water or any other liquid to touch the device.
- Do not touch the device with wet hands.
- If the device malfunctions whilst in use, unplug the power cord immediately and contact [help.Kogan.com](https://www.kogan.com) for assistance.
- If the power cord is damaged, stop use and contact [help.Kogan.com](https://www.kogan.com) for assistance.
- Do not move the device by pulling hard on the power cord.
- Do not wrap the power cord around the device. This may cause damage to the power cord.
- Do not dry one specific area of pets for a prolonged period. This may cause burning to the hair.
- Do not use or store this device in damp areas.
- When in use, ensure hair is kept away from the air inlet.
- The dust filter in the air inlet prevents hair from being sucked in. Regular cleaning of the filter is recommended to ensure strong air flow from the hair dryer, and to prevent the device from being damaged.
- Ensure the device is unplugged before cleaning.

OVERVIEW


Top view

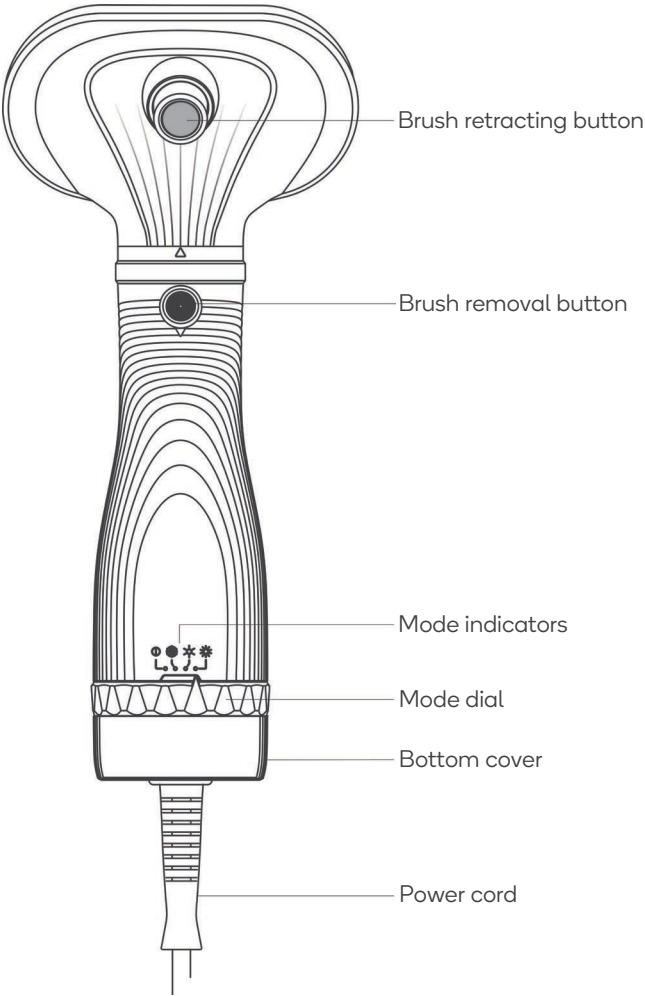

Bottom view

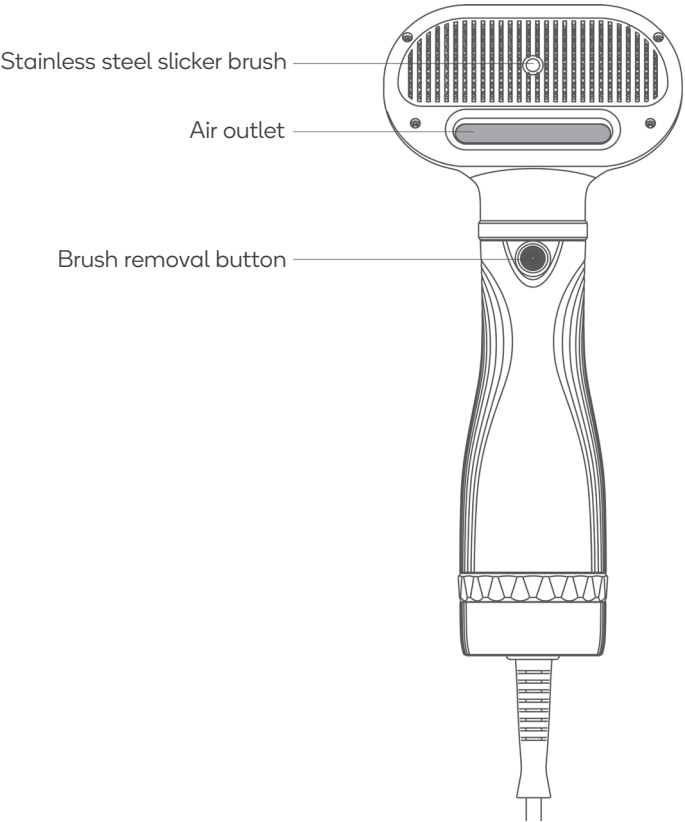

Mode indicators

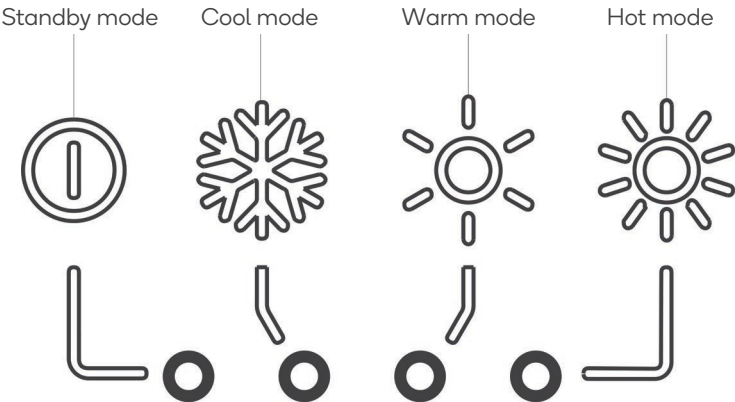

BEFORE FIRST USE

- Dry your pet with a towel. This will shorten the hair drying time significantly and make the grooming process more efficient.
- Ensure pets are comfortable with the device. Allow them to sniff the appliance while it is turned off.

OPERATION

1. Plug in the power cord into a socket and turn the switch on. The device will now enter standby with the marker pointed at the standby mode icon (⏻).
2. Turn the mode dial until the marker is aligned with the desired temperature mode. The indicator will illuminate, and the device will start blowing air from the air outlet.

Note:

The wind strength is identical for all three temperature modes.

3. Brush and dry your pet. Once finished, turn the mode dial back to the standby mode icon (⏻) to return the device into standby. Turn off the power at the socket. Press and hold the brush retracting button to retract the bristles from the brush. Remove hair from the brush.

Notes:

- Avoid drying in the same area of your pet prolonged periods as this may lead to injuries.
- If the device overheats, it will automatically power itself off. Wait and the device will restart after a couple of minutes.


CLEANING & CARE

- Unplug the device and wait till cooled before cleaning.
- To clean, wipe the body with a damp cloth. Ensure the air outlet is clear of any small hairs or foreign material.

Changing the brush and air inlet filter

If the brush head needs changing, firmly press and hold the brush removal buttons on both sides of the device and detach the brush. Attach the new brush by clipping it onto the body.

To clean the air inlet filter, unscrew the bottom cover and then remove the hair and dust from the filter. Once removed, screw the bottom cover back on.

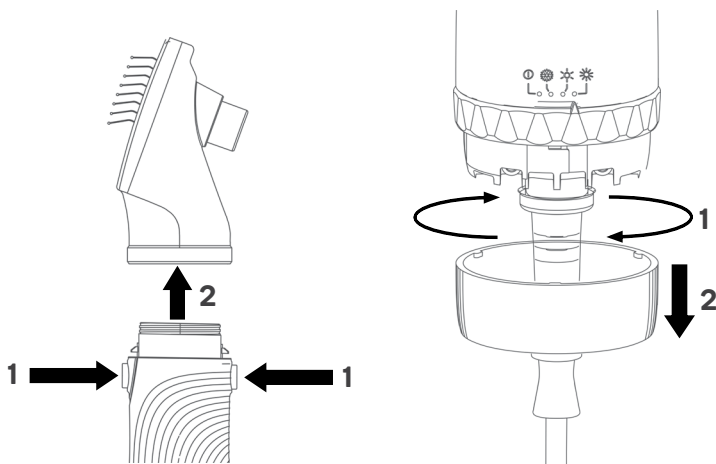

Detaching the brush head

Cleaning the air inlet filter

- Allow the device to dry before resuming use or storing.

Storage

Store the device in a safe dry place, out of reach from children.

TROUBLESHOOTING

Issue	Solution
The device does not turn on.	• Check the power socket used is working properly. • Check for damage on the power cord. If the power cord is damaged, contact help.Kogan.com for assistance.
The device suddenly turned off.	Check if anything is blocking the air inlet filter. Clean if necessary.

Disposal

	This marking indicates that this appliance should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.
---	---

SPECIFICATIONS

Voltage	AC 220~230V
Wattage	300W
Frequency	50Hz

NOTES

[illegible]

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your device, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com