


USER MANUAL

TOASTER

MT-RS2L13W

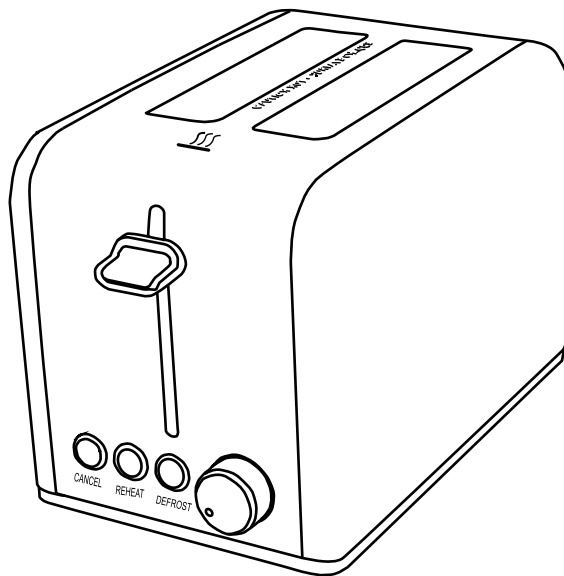

Please read the manual carefully before operating your product.
Retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- The appliance is only used for household, not for commercial use. Do not use the device outdoors. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Must not immersed in water for cleaning;
- This appliance can be used by those who have read the safety instructions and used under supervision.
- Children must not use or clean the product without supervision
- Keep the appliance and its cord out of reach of children. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The temperature of accessible surfaces may be high when the appliance is operating.
- The instructions shall state that the appliance is not intended to be operated by means of an external timer or a separate remote-control system



IMPORTANT SAFETY INSTRUCTIONS

- Please read the operating instructions carefully before using the appliance.
- Please keep these instructions, the guarantee slip. The receipt and if possible the box with inner packaging in a safe place!
- This appliance is intended exclusively for private and not for commercial use.
- Always remove the plug from the socket when the appliance is not in use or when you are attaching accessories, cleaning it or in the event of a malfunction. Switch off the appliance. Do not pull the cable, pull the plug.
- Check the cable and the appliance regularly for damage. Do not switch on the appliance if it is damaged.
- Do not repair the appliance yourself, but consult an authorized professional instead.
- Keep the appliance and the cable away from heat, direct sunlight, moisture and sharp edges.
- Never leave the appliance unsupervised if it is in use! Always switch off the appliance if you are not using it, even if only for a brief period.
- Only use original parts.
- Never submerge the appliance in water or any other liquid. Do not allow the appliance to come into contact with water or other liquids. Do not use the appliance with wet or moist hands.
- Remove the plug from the socket immediately if it is moist or wet.
- Only use the appliance for its intended purpose




Special Safety Instructions for this Appliance

- Only use the appliance if supervised (very dry bread may catch fire if toasted).
- Be careful not to touch the toaster when in use.
- Allow the toaster to cool before handling after use.
- Do not insert any forks, knives or such like in the toasting slot.
- Do not place the appliance anywhere near inflammable objects (e.g. curtains, wood, etc.)



NAMES OF MAIN PARTS

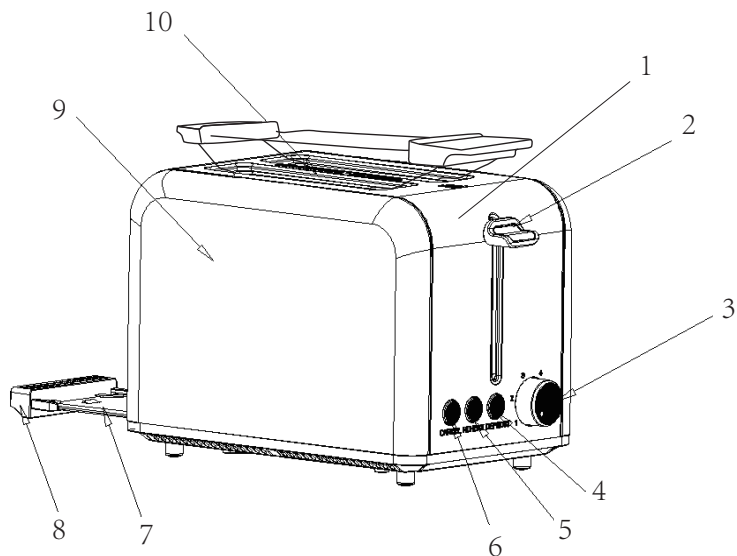

- 1.Side metal plate
- 2.Top metal plate
- 3.Loading Handle
- 4.Time knob
- 5.Defrost button

- 6.Reheat button
- 7.Cancel button
- 8.Crumb_tray
- 9.Crumb_tray handle
- 10.Rack-reheating

Model No.	Rated voltage	Rated frequency	Rated power
MT-RS2L13W	220-240V~	50/60Hz	700-850W

How to Use

1. Only connect the appliance to a correctly installed safety plug (220-240V , 50Hz).
2. Turn the selector dial clockwise to set the toasting level from lightest (stage 1) to darkest (stage 6).
3. Insert the sliced bread into the toasting slot and push the lever down until it locks.
4. The appliance will now start toasting and will switch off immediately once the set degree of toasting has been reached. The toast will pop up automatically.
5. The appliance has a heat-insulated "cool touch" casing. However, during operation the metal parts will still heat up and it is recommended to let the appliance cool before storing it away.
6. Only place 2 slices of bread into the toaster at a time (1 in each slot).
7. Surfaces near the toaster may become hot when in use.

If you wish to use the REHEAT or DEFROST functions, press the button you want to select after you have pushed the lever down

Cancel: To stop toasting prematurely

Reheat: To reheat the toast

Defrosting: To defrost and toast frozen bread

CLEANING

- Ensure that the toaster is unplugged before cleaning.
- Never place in water or any other liquid.
- To clean, unplug and allow to cool, then remove the crumb-tray by pulling it outward. Clean off remains of bread, burns, etc.
- Once the crumbs have been removed, refit the tray, ensuring that it is in the correct position.
- Wipe the mesh with a damp cloth, never use dusters or cleaning agents, as the surfaces could be harmed.



Repairs can be carried out by licensed dealers or the repair services after the end of the guarantee period, but are subject to charge.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.