



tonies®

Setup Guide



Nice to  
*meet* you!



OPEN  
HERE

 


# Welcome to the Tonie-Universe


Hi! I'm Playtime Puppy, one of the many Tonies compatible with your new Toniebox. Before you begin, I will walk you through a simple connection process. Your Toniebox will be up and running in no time!



## Setting up your Toniebox is easy! You will need:

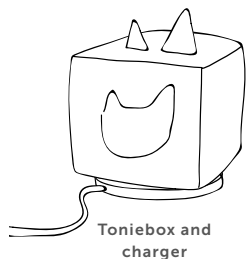

Toniebox and charger

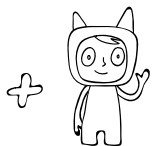 

Tonie or Creative-Tonie



Wireless network




Access to the internet



Tip: You need to keep the Toniebox within close range of your Wi-Fi signal during setup. The better the connection, the sooner you can start listening!

## Set up your Toniebox and start listening

 Before you can use your new Toniebox, you must first set it up. You'll need a smartphone, tablet or computer to get started.

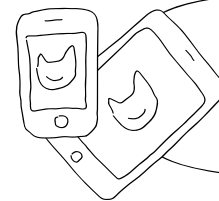

Download the free **mytonies** app and follow the step-by-step guide to set up your Toniebox.



mytonies



You can also visit  
[my.tonies.com/setup-toniebox](https://my.tonies.com/setup-toniebox)

You can always access your Tonies and Toniebox settings through your free Tonie-Account.



Find additional answers, instructions and video tutorials at:  
[support.tonies.com](https://support.tonies.com)

KEEP GOING



# ♥ FAVORITE ♥ CHILDREN'S SONGS

Hi! I'm **Playtime Puppy**.  
I like to sing songs  
that get you moving  
and grooving!



## Playtime Songs

Here's a list of songs we can sing together:

The Wheels on the Bus  
If You're Happy and You Know It  
The Muffin Man  
Jack Be Nimble  
Itsy Bitsy Spider  
Rain, Rain, Go Away  
Baby Shark  
Let's Get Ready  
Old MacDonald Had a Farm  
Mary Had a Little Lamb  
All the Little Raindrops  
Down by the Bay  
Jack and Jill  
Clean Up Song  
Bingo  
Hot Cross Buns  
One Potato, Two Potato

Pat-a-Cake  
It's Raining, It's Pouring  
The Alphabet Song  
Miss Polly  
I Wanna Be Clean/Hygiene Song  
The Ants Go Marching  
I Know an Old Lady (Who Swallowed a Fly)  
Hickory Dickory Dock  
I Had a Little Nut Tree  
Row, Row, Row Your Boat  
I'm Growing Up  
Skip to My Lou  
Peter Piper  
I'm a Little Teapot  
Oats, Peas, Beans, and Barley Grow  
Head, Shoulders, Knees, and Toes  
Skidarmarink

 
 
Running time: approx. 45 minutes

# The Toniebox makes listening *easy*.

Using the Toniebox is so simple:


## How to turn your Toniebox on

Pinch one of the ears with your thumb and forefinger or place the box on its charging station.

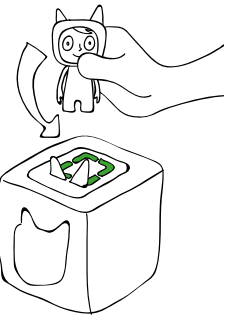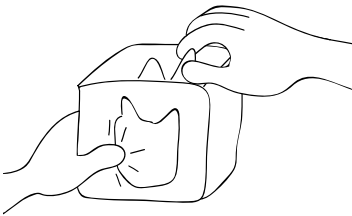

## Playing and pausing

 
When the light on your Toniebox turns green, place a Tonie on top. Want to pause the story or song? Just remove the Tonie from the Toniebox. When you place your Tonie back on, it will pick back up from the same spot as long as another Tonie hasn't been played in between.

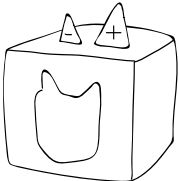

## How to turn the volume up and down

Pinch the big ear to turn up the volume of the Toniebox. Use the little ear to turn it down.

 YOU CAN SET THE  
MAXIMUM VOLUME  
AND MUCH MORE  
IN YOUR  
TONIE-ACCOUNT!

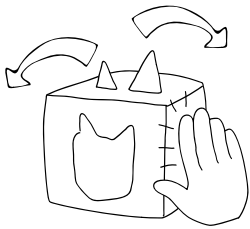


## Skip back and forth

To skip back and forth between chapters, hold your Toniebox with one hand and tap on its side with the other. To fast-forward or rewind, tilt the box to one side.

## How to charge your Toniebox

 
Even a Toniebox needs a little rest and relaxation sometimes. The LED will glow green when the battery is sufficiently charged. The LED lights up orange when the battery is low.

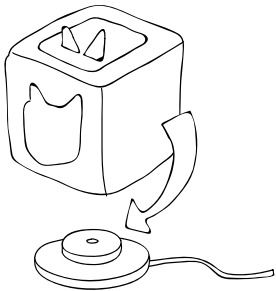

## LED display overview

The Toniebox has different LED indicators. Here's a brief overview:
 
| Color                                                                                               | LED Display Meaning                                                                                                                                                                                                                                                    |
|-----------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  Flashing green  | Factory setting: Please install                                                                                                                                                                                                                                        |
|  Green light     | Everything's good to go. The battery is sufficiently charged and the Toniebox is ready to play.                                                                                                                                                                        |
|  Pulsing blue    | The Toniebox is in connection mode and can now look for new wireless internet connections.                                                                                                                                                                             |
|  Flashing blue | This may mean the following:<br>a. The Toniebox is connected to the internet and is downloading new Tonie content.<br>b. The Toniebox is looking for available wireless internet connections before it switches into connection mode (lasts approximately 20 seconds). |
|  Orange light  | Warning – low battery! Place your Toniebox on the charging station to recharge the battery.                                                                                                                                                                            |
|  Red light     | Oops! An error has occurred. Your Toniebox will tell you which error it is in a voice message.                                                                                                                                                                         |
|  White light   | Offline mode                                                                                                                                                                                                                                                           |

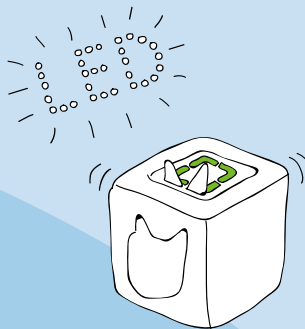

# Welcome to the Tonie- Universe

With Creative-Tonies you can upload and play your own custom content

aaarrgh!

LOVE IS IN THE AIR

BOO

I can't wait to hang out with you!

Can't sleep?

ZZzz...

I'M HAND-PAINTED

HAPPY BIRTHDAY TO YOU!

I'M COLLECTIBLE

I'M VERY STURDY

EDUCATION FAVORITES  
MUSIC  
AUDIOBOOK

Sweet dreams and lullabies await you.

Take your Toniebox with you.

With its **offline mode** the Toniebox is a great companion on road trips.

Truly!

Let's shake a leg

Songs for celebrating: Playtime Songs

1,2,3 - I'M THERE

Learning to count is more fun with friends.

RECORD YOUR OWN AUDIO CONTENT

WE ARE CREATIVE-TONIES

## Your favorites from the Disney family

ROAR!

Who will you spend storytime with?

The Toniebox is **durable and softly padded**, making it ideal for adventures on the go.

I'LL FALL ASLEEP WITH YOU

Slip into sweet dreams without interruption. **The Toniebox turns itself off** 10 minutes after stories or songs have ended.

 
# Need help?

Here are a few tips to get you started.

For additional help visit:

[support.tonies.com](https://support.tonies.com)

## Quick troubleshooting tips

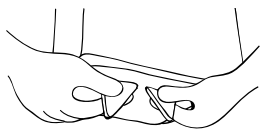

### Tip 3: Check the support code word

In the event of a more complex problem, your Toniebox will provide a code word. You can find out what it means and how to resolve the problem by calling our support line at **877-MY-TONIES** (877-698-6643) or by visiting [support.tonies.com](https://support.tonies.com)

### Tip 1: The classic restart

If your Toniebox is having a hard time, sometimes a restart will do the trick. To restart, remove your Toniebox from the charging station, turn it on its head and press both ears until you hear a sound (approximately 10 seconds).

### Tip 2: Reset the Toniebox to its factory settings

As a last resort, you can reset your Toniebox to its factory settings.

**To do this, turn both the Toniebox and its connected charging station upside down.** Press both ears of the Toniebox until you hear a sound (approximately 10 seconds).

**Warning: By resetting your Toniebox to factory settings, all network connections, contents and settings will be deleted.**

