

Quick Start Guide


Tapo Video Doorbell Camera Kit

©2022 TP-Link 7106509991 REV1.1.0

*Images may differ from your actual product.

01 / Charge the Battery

Charge the battery.

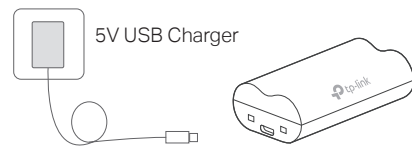


- **Charging:** Solid amber
- **Fully charged:** Solid green

Notes:


1. Charge the battery before use. This will take about 5~6 hours.
2. If you want to use the doorbell while charging the battery, we recommend purchasing another battery for your convenience.

02 / Insert the Battery

1. Use a pin to detach the doorbell.

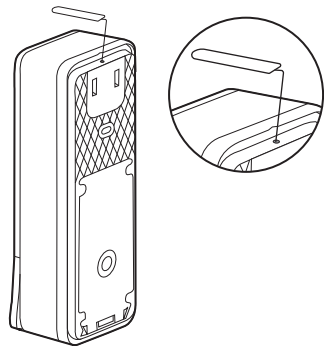

2. Insert the charged battery.

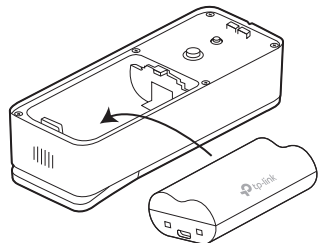

03 / Set Up the Hub and Doorbell

1. Get the Tapo app from the App Store or Google Play.



2. Follow the instructions in the Tapo app to set up your hub.



3. Follow the instructions in the Tapo app to set up your doorbell.



04 / Install the Doorbell


*Preview video on the Tapo app to find the desired installation location.

Option 1. Stick to a clean wall

1. Attach the included adhesive to the back of the bracket.




2. Stick the bracket with adhesive to a clean wall. Then attach the doorbell to the bracket.

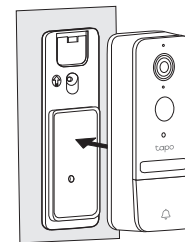


Option 2. Mount to the wall

1. Stick the mounting template to the desired mounting place. Drill two holes according to the template.

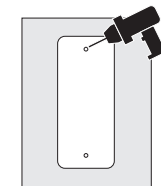


2. Insert two anchors into the holes and use the screws to affix the bracket over the anchors. Then attach the doorbell to the bracket.

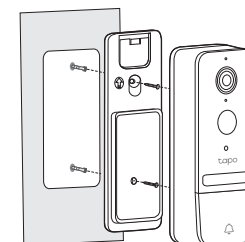

(Optional) Use 15° Mounting Wedge to Adjust Angle

To adjust the viewing angle of the doorbell, you can use the 15° mounting wedge within the package.

1. After drilling holes, insert two anchors into the holes.
2. Place the bracket above the wedge.
3. Use the screws to affix the wedge and bracket over the anchors.
4. Attach the doorbell to the bracket.

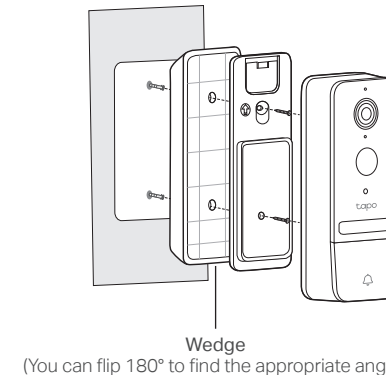


Wedge

(You can flip 180° to find the appropriate angle.)

Doorbell Appearance

Front

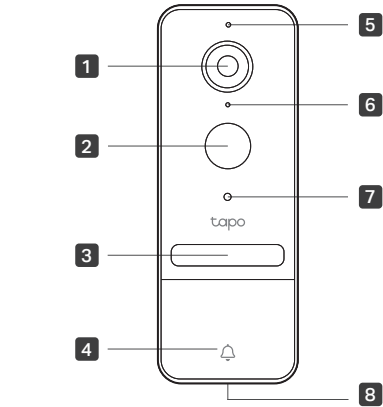

- 1

Lens
- 2

Motion Sensor
- 3

Spotlight
- 4

Ring Button
- 5

Microphone
- 6


Status LED

Indicates the status of your doorbell.
- 7

Light Sensor
- 8

Speaker

Back

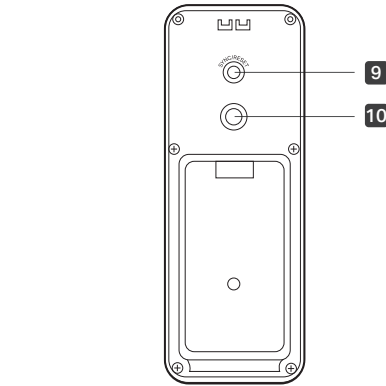

- 9

SYNC/RESET Button

Press for 1s: Pair with the hub

Press and hold for about 5s: Reset the doorbell
- 10

Anti-Theft Button

When the Anti-Theft Alarm is enabled on the Tapo app, an alarm will trigger once the doorbell is removed.

Press and hold for 5s: Pause the alarm (Continues to alarm when released)

Press and hold buttons 9+10 simultaneously for 10s: Disable the anti-theft alarm feature
- Hub Appearance
- A line drawing of a small, rectangular hub device. It has a textured top surface. On the front, there is a SYNC button (1), a power button (2), a LAN port (3), and a status LED (4). A microSD card is shown inserted into a slot on the side.
- 1

SYNC Button

Press to pair with the doorbell, or silence the hub when it rings.

2

RESET

Use a pin to press and hold for about 5 seconds until the hub LED quickly blinks red to reset the hub.

3

microSD Card Slot

Insert a microSD card* to record doorbell videos locally. Initialize the microSD card within the Tapo app first.

*microSD card not included.

4

Status LED

Indicates the status of your hub.
- Light Indications
- Hub Status LED
- | | |
|------------------------|------------------------|
| Solid red | Starting up |
| Blinking red and green | Ready for setup |
| Solid amber | Connected to router |
| Solid green | Connected to the cloud |
| Blinking green slowly | Pairing |
| Blinking red quickly | Hub resetting |
| Blinking green quickly | Hub updating |
- Doorbell Status LED
- | | |
|----------------------------|------------------------|
| Solid red | Starting up |
| Blinking red and green | Ready for pairing |
| Blinking green slowly | Pairing |
| Solid amber | Connected to the hub |
| Solid green | Connected to the cloud |
| Blinking red quickly | Doorbell resetting |
| Blinking green quickly | Doorbell updating |
| Blinking red once a minute | Low battery |
| Blinking red slowly | Offline |
- How to Remove Battery
- Use a pin to detach the doorbell and firmly pull out the battery.
- A line drawing showing a hand holding a doorbell. A pin is being used to pry open the back cover of the doorbell, which is shown partially detached. The battery is visible inside the back cover.
- Safety Information
- Do not use damaged charger or USB cable to charge the device.
 - Do not use any other chargers than those recommended.
 - Do not use the device where wireless devices are not allowed.
 - Adapter shall be easily accessible.
 - Use only power supplies which are provided by manufacturer and in the original packing of this product. If you have any questions, please don't hesitate to contact us.
 - Keep the device away from fire or hot environments. DO NOT immerse in water or any other liquid.
 - Do not disassemble, repair or modify the product.
 - Do not place near automatically controlled devices such as fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.
 - Observe restrictions on using wireless products in fuel depots, chemical plants or when blasting operations are in progress.
 - Do not use liquid to clean the product. Only use a dry cloth.
 - Never put metal objects inside the product. If a metal object enters the product turn off the circuit breaker and contact an authorised electrician.
 - This product is not intended to be used when providing medical care. Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids to determine if they are adequality shielded from external RF (radio frequency) energy.
 - Do not use this product in health care facilities. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.
 - Do not place heavy objects on top of the product.
 - When you leave the product unused for a long time unplug the product from the power outlet.
- This product may interfere with other electronic products such as TV, radios, personal computers, phones or other wireless devices.
 - Always follow the local waste and recycle laws when you get rid of the used battery.
 - Do not use the product if the casing has been broken. Danger of electric shock.
 - Never touch the product with wet hands.
 - The mounting height should not be higher than 2 meters.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.
- CAUTION!

Risk of fire or explosion
if the battery is replaced by an incorrect type
- TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC, 2011/65/EU and (EU)2015/863.

The original EU declaration of conformity may be found at <https://www.tapo.com/support/ce/>

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017.

The original UK declaration of conformity may be found at <https://www.tapo.com/support/ukca/>
- For technical support, user guides, FAQs, warranty and more, please visit www.tapo.com/support/
- Three certification logos: CE, UKCA, and RoHS.
- The Tapo logo, which is a red circle with a white 'T' inside.