

6. FIRST USE RINSING




Fill the water tank with fresh drinking water. Insert it back into the machine. Remove the drip tray.




Open the locking handle. Put the rinsing tool into the capsule holder. Insert the capsule holder into the machine. Place a large empty container underneath the coffee outlet.




Close the locking handle.

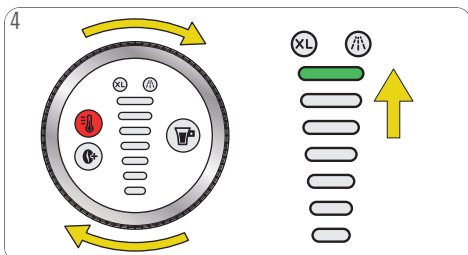


Use the control ring and select level 7 on the volume display (highest bar).

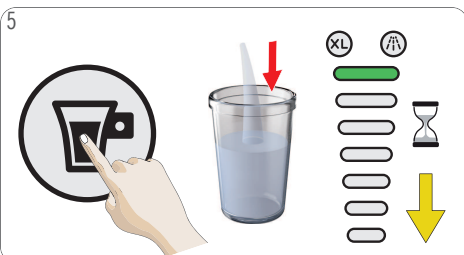

Press the start/stop button. Machine starts rinsing.

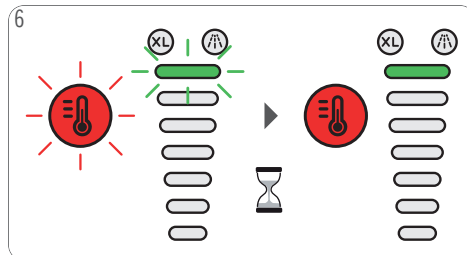


The temperature selection button and the volume display light blink for up to 8 seconds.

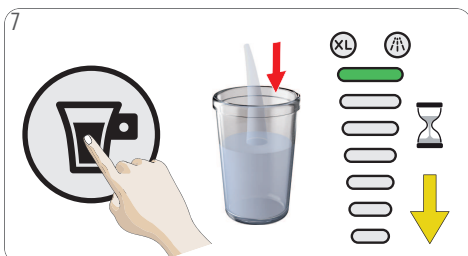

Press the start/stop button. Machine starts rinsing. Wait until the machine stops automatically. The temperature selection button and the volume display light blink for up to 8 seconds.



Open the locking handle. Pull out the capsule holder. Remove the rinsing tool. Reinsert the capsule holder.

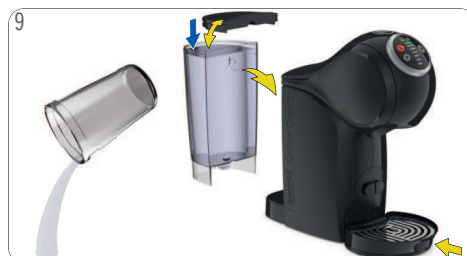

Empty the container. Fill the water tank with fresh drinking water. Insert the water tank into the machine. Reinsert the drip tray. The machine is ready to be used.