



FCC WARNING	FCC INFORMATION
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference from authorized radio communication systems. FCC Part 15.193 FCC Part 15.107	If this equipment does not meet the requirements for safety or electromagnetic compatibility, it may be subject to restriction of use or prohibition of use. The user is responsible for taking the necessary steps to ensure that the equipment is used in accordance with the applicable regulatory requirements. FCC Part 15.193 FCC Part 15.107
For changes or modifications not approved by the manufacturer, the user assumes all responsibility for any interference caused and for any safety hazards that may result. This equipment has been tested and found to comply with the requirements of Part 15 of the FCC Rules. This device may be used in conjunction with other equipment that is certified to comply with the requirements of Part 15 of the FCC Rules. The user is responsible for ensuring that the equipment is used in accordance with the applicable regulatory requirements. FCC Part 15.193 FCC Part 15.107	For changes or modifications not approved by the manufacturer, the user assumes all responsibility for any interference caused and for any safety hazards that may result. This equipment has been tested and found to comply with the requirements of Part 15 of the FCC Rules. This device may be used in conjunction with other equipment that is certified to comply with the requirements of Part 15 of the FCC Rules. The user is responsible for ensuring that the equipment is used in accordance with the applicable regulatory requirements. FCC Part 15.193 FCC Part 15.107

Need help?
Get it fixed!
sales@woodcessories.com

WOODCESSORIES®

THANKS FOR CHOOSING
WOODCESSORIES!

CHARGE SMART.
CHARGE SUSTAINABLE!

© 2023 WOODCESSORIES.COM


WOODCESSORIES®

NATURE
MEETS TECH!

BE FLEXIBLE.
CHARGE ALL YOUR Qi DEVICES!

THE 15W (MAX) CHARGING PAD IS A 20W (MAX) CHARGING PAD. IT IS NOT A 15W CHARGING PAD. IT IS A 20W CHARGING PAD.

CHARGING GUIDE

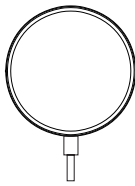

Need help?
Get it fixed!
sales@woodcessories.com

Please read the instruction carefully
before using the Wireless Charger!

INSTRUCTION

- Connect your charger to power. Use the USB-C cable and connect with a power socket or laptop. Highly recommended: Connect the USB-C cable to a 20W (or higher) power adapter. Once the charger is connected to power the LED light will flash for 3 seconds.
- Place the Single Charging Pad on a flat surface like your desk.
- Place your wireless charging enabled phone in the centre of the charger. Especially for iPhone MagSafe models or cases with built-in magnets.
- Your smartphone should start charging a second after you place it on your charger. The LED light will stay on to showcase the charging process.
- An additional, free adapter gives you the ability to switch from USB-C to USB-A ports.

RECOMMENDATION



NOTE: Connect the USB-C cable to a 20W (or higher) power adapter to enjoy 15W fast charging.

THINGS TO WATCH

- If your phone vibrates your phone might shift position. If this happens often, consider turning off vibration mode.
- Your phone might get slightly warmer while it charges. This is totally normal. You might consider moving the charger to a cooler place.
- Important: Your phone or phone case cannot carry any metal materials, which will stop the charging process, such as rings, keys, metal plates. If the LED starts to blink the FOD (Foreign Object Detection) noticed a problem. Please re-connect your charger with power if this happens.

ENJOY FAST & SUSTAINABLE CHARGING!

Color Card

Kraftpaper Card (Manual)