


GW-7472 QUICK START

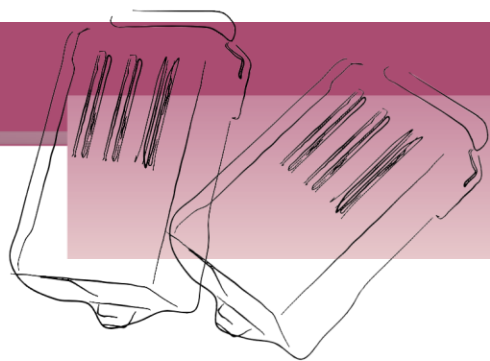

For GW-7472

English / Dec. 2014 / Version 2.1

1 What's in the shipping package?


The package includes the following items:



GW-7472



Software CD

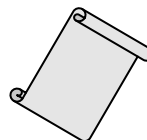

Quick Start Guide
(This Document)



CA-002
(DC connector to
2-wire power cable)

2 Installing software on your PC

■ Install GW-7472 Utility:

The software is located at:

Fieldbus_CD:\EtherNet/IP\Gateway\GW-7472\Utility

http://ftp.icpdas.com/pub/cd/fieldbus_cd/ethernetip/gateway/gw-7472/utility/


3 Connecting the Power and Host PC

1. Make sure your PC has workable network settings.
2. Disable or well configure your Windows firewall and anti-virus firewall first, else the "Network Scan" on step 4, 5 and 6 may not work. (Please contact with your system Administrator)
3. Check Init/Run DIP switch if it is on **Init** position.




4. Connect both the GW-7472 and your computer to the same sub network or the same Ethernet switch, and power the GW-7472 on.



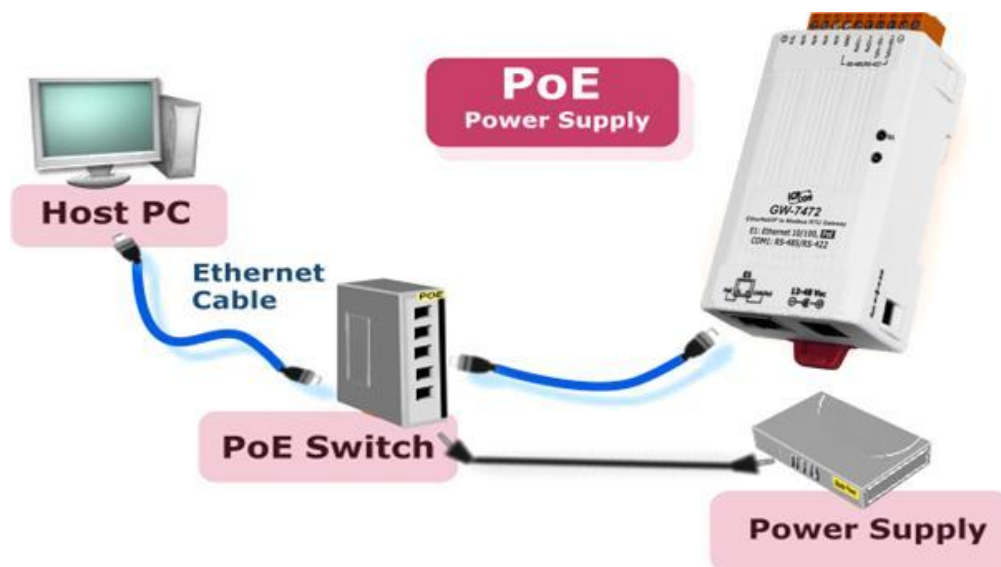

4 Searching the GW-7472


1. Double click the GW-7472 Utility shortcut on the desktop.
2. Click the "**Network Scan**" button to search your GW-7472.
3. Select "Configure" or "Diagnostic" buttons to configure or test the module

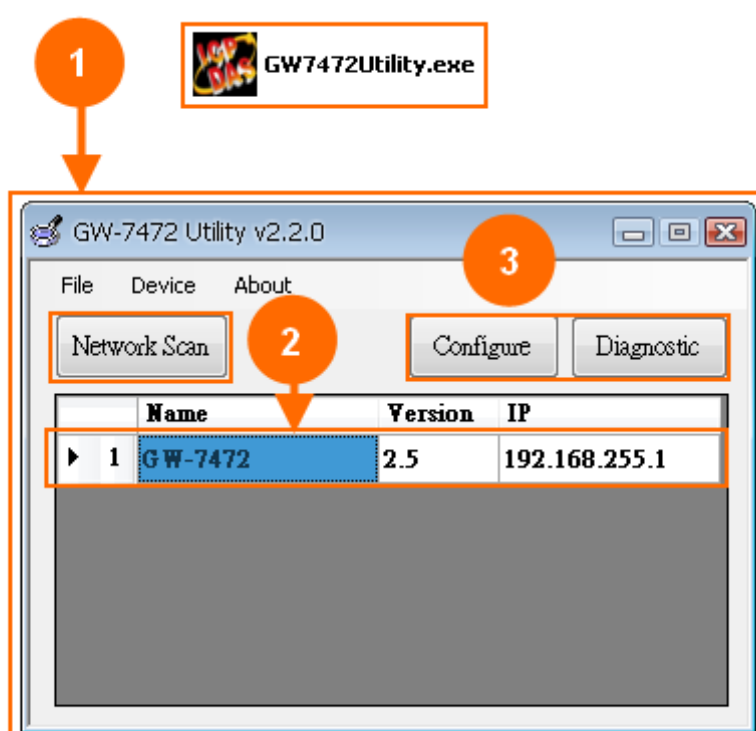

5 Module configuration

1. Double click the GW-7472 Utility shortcut on the desktop.
2. Click the "Network Scan" button to search your GW-7472.
3. Select "Configure" buttons to configure the module
4. After setting, click the "Update Settings" button to finish the

EtherNet/IP to Modbus RTU/TCP Gateway

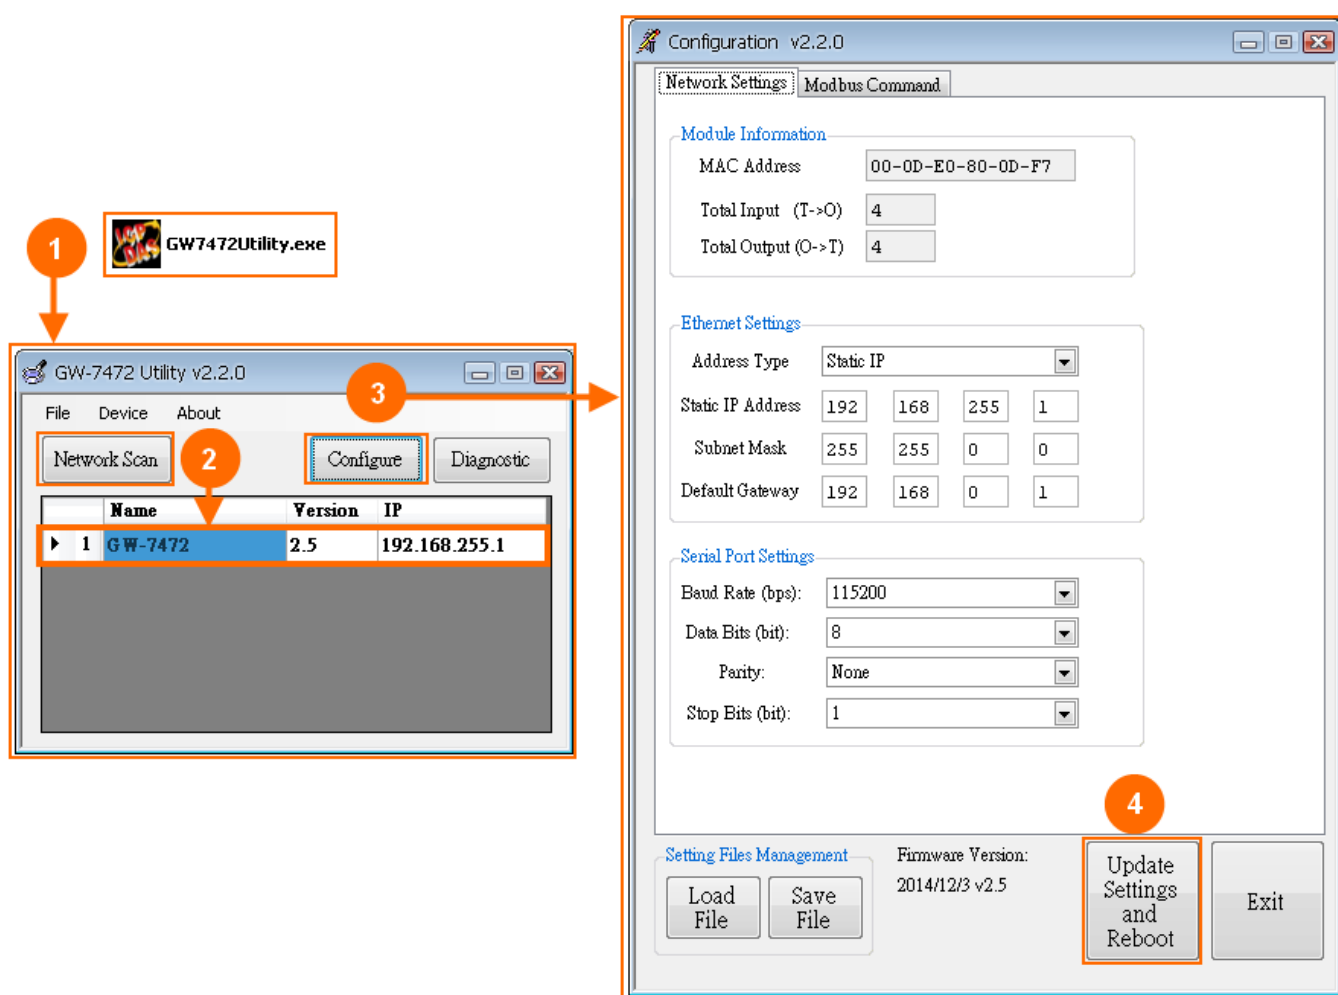


Item	Settings (Init Mode)
IP	192.168.255.1
Gateway	192.168.0.1
Mask	255.255.0.0

■ Item Descriptions:

Item	Description
Network Settings	For configuration of the <u>Address Type</u> , <u>Static IP Address</u> , <u>Subnet Mask</u> and <u>Default Gateway</u> of the GW-7472 Please refer to section “ 4.2.1 Network Settings ”
Modbus RTU Port Settings	For configuration of the <u>Baud Rate</u> , <u>Data Sizes</u> , <u>Parity</u> , <u>Stop Bits</u> , of the RS-485/RS-422 port of the GW-7472 Please refer to section “ 4.2.2 Modbus RTU Serial Port Settings ”
Modbus TCP Server IP Setting	For configuration of the IP of each Modbus TCP server. Please refer to section “ 4.2.3 Modbus TCP Server IP Settings ”
Setting File Management	For the setting files management of GW-7472. Please refer to section “ 4.2.4 Setting File Management ”
Byte Order Setting	For configuration of the order of two bytes in a word of AI and AO. Please refer to section “ 4.2.5 Byte Order Setting ”
Modbus Request Command Setting	Modbus commands to communicate with the Modbus slaves Please refer to section “ 4.2.6 Modbus Request Settings ”

6 Module Diagnostic

1. Check Init/Run switch if it is on **Run** position.
2. Reboot your GW-7472. Then, re-connect it by utility.
3. Click "Diagnostic" button to open diagnostic window.

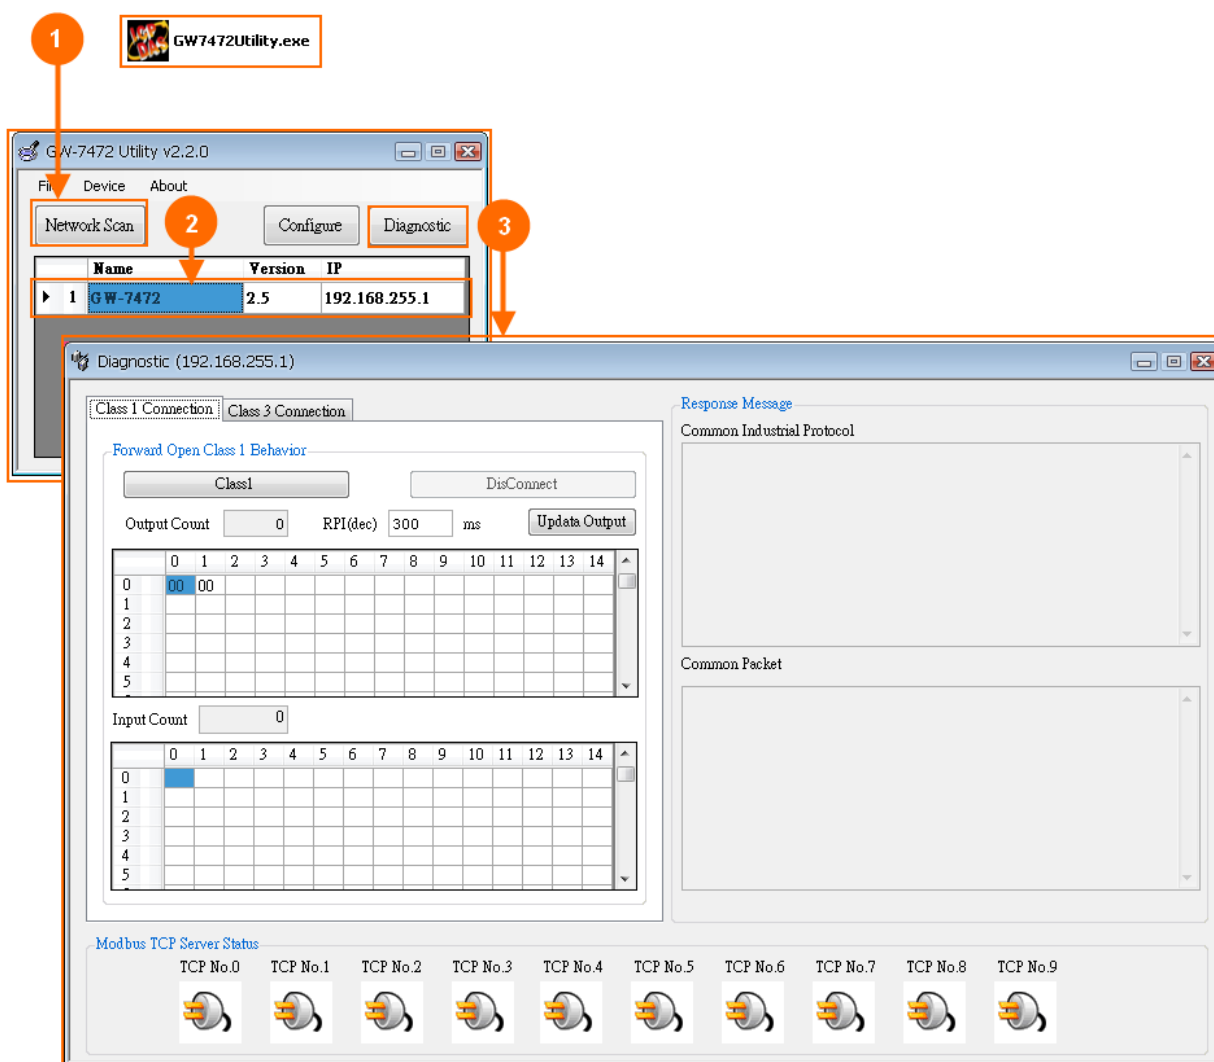

Item Descriptions:

Item	Description
UCMM/Forward Open Class 3 Behavior	Send UCMM packets or use the Forward_Open service to build the CIP class 3 connection to communicate with the GW-7472. Please refer to section “ 4.3.1 UCMM/Forward Open Class 3 Behavior ”
Forward Open Class1 Behavior	Use the Forward_Open service to build the CIP class 1 connection to communicate with the GW-7472. Please refer to section “ 4.3.2 Forward Open Class 1 Behavior ”
Response Message	EtherNet/IP packets responded from the GW-7472.
Modbus TCP Servers Status	The connection status of Modbus TCP servers. Please refer to section “ 4.3.3 Modbus TCP Servers Status ”

Related Information

- GW-7472 Product page:**
http://www.icpdas.com/products/Remote_IO/can_bus/GW-7472.htm
- GW-7472 Documentations:**
 Fieldbus_CD:\EtherNetIP\Gateway\GW-7472\Manual
http://ftp.icpdas.com/pub/cd/fieldbus_cd/ethernetip/gateway/gw-7472/manual/
- GW-7472 Utility:**
 Fieldbus_CD:\EtherNetIP\Gateway\GW-7472\Utility
http://ftp.icpdas.com/pub/cd/fieldbus_cd/ethernetip/gateway/gw-7472/utility/
- GW-7472 firmware:**
 Fieldbus_CD:\EtherNetIP\Gateway\GW-7472\firmware
http://ftp.icpdas.com/pub/cd/fieldbus_cd/ethernetip/gateway/gw-7472/firmware/