



Motion Tracking Phone Mount

Quick guide




134-29






www.sandberg.world




Overview

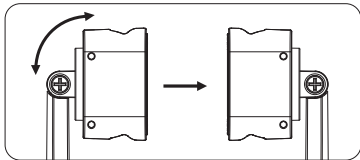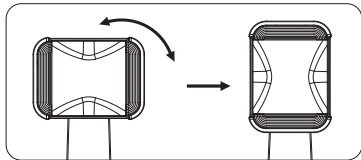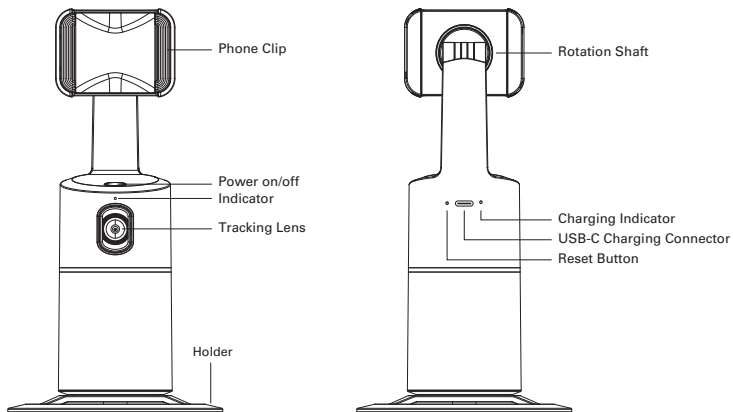


Contents

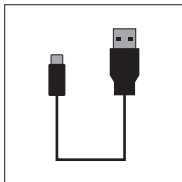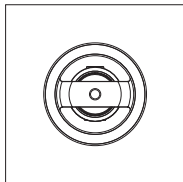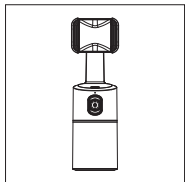

Charging

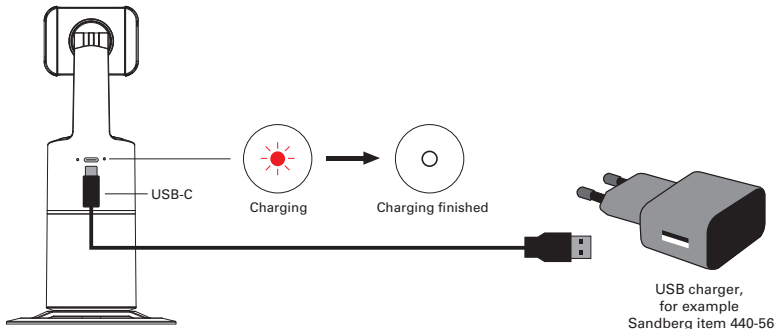


Mounting

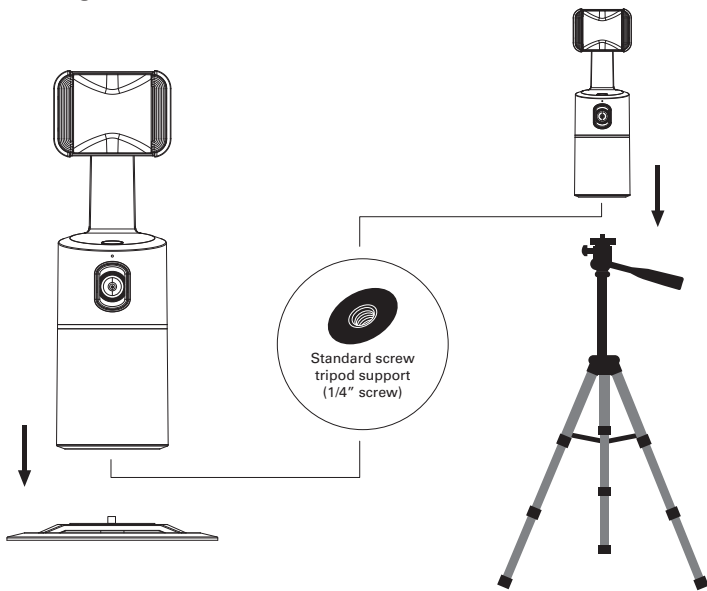


On a tripod, for example
Sandberg item no. 134-26


Function

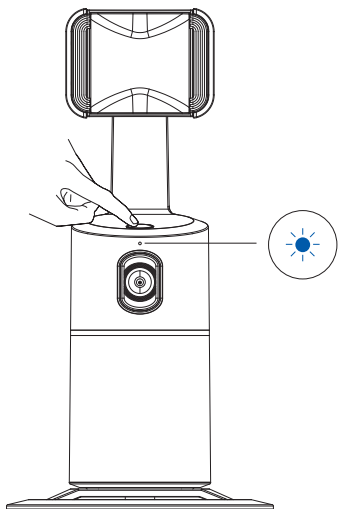


Press and hold for 3 seconds

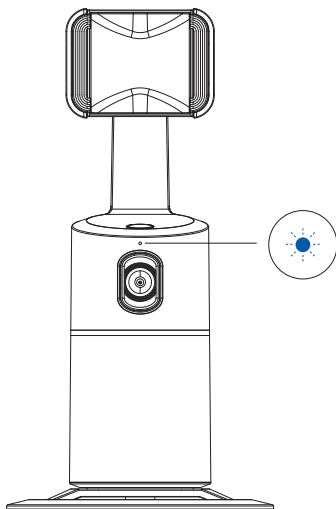


Rotation self-test. Indicator is flashing

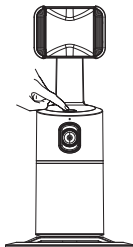


Press to pause the
motion tracking mode

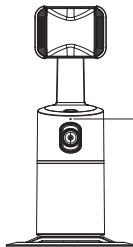

Constant light:
pausing motion tracking mode

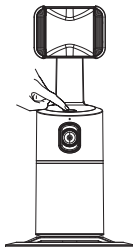

Press again to resume
the motion tracking mode

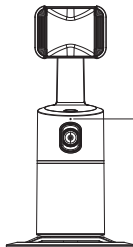

Flashing light:
motion tracking mode



Note:

1. Please don't move too fast.
2. The holder works as a human tracking and doesn't work on animals or other moving objects.





Support

<http://helpdesk.sandberg.world>

Warranty

*There is a five-year warranty on your Sandberg product.
Please read the warranty terms and register your new
Sandberg product at www.sandberg.world/warranty*

5
Years
Warranty

For information on handling electronic waste, see www.sandberg.world/weee

