 




Contact our experts
support@zebon.club

CR1018i


Alarm Clock with USB Charger
CREATE YOUR PERFECT SLEEP ENVIRONMENT

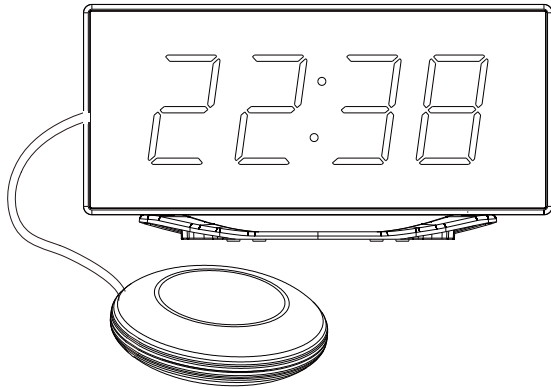

Made in China

Version 2.0

 Chapter 1 LOCATION OF CONTROLS

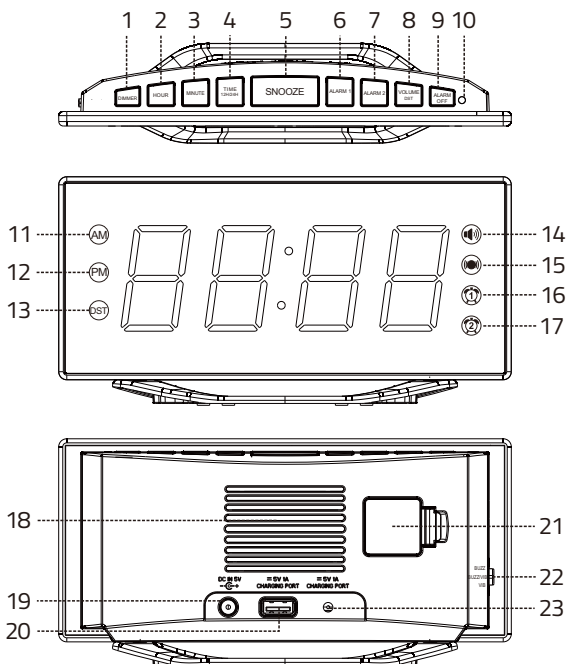


- | | | |
|-------------------------|-----------------------|------------------------|
| 1. Dimmer Button | 2. Hour Button | 3. Minute Button |
| 4. Time Button | 5. Snooze Button | 6. Alarm 1 Button |
| 7. Alarm 2 Button | 8. Volume Button | 9. Alarm OFF Button |
| 10. Red Indicator Light | 11. AM Indicator | 12. PM Indicator |
| 13. DST Indicator | 14. Ring Indicator | 15. Vibrator Indicator |
| 16. Alarm 1 Indicator | 17. Alarm 2 Indicator | 18. Speaker |
| 19. DC Input Port | 20. USB Output Port | 21. Back Up Battery |
| 22. BUZZ/VIB Switch | 23. Vibrator Jack | |

Chapter 2 POWER RESOURCES

1. Pull out of the insulator at battery compartment to activate CR2032 coin cell backup battery.

NOTE: Backup battery(included) doesn't support time display but can back up time & alarm setting.

 2. Connect the adapter line to DC jack , then plug into a 100~240V AC wall power outlet.

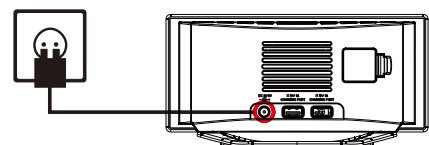

Chapter 3 TIME SETTING

1. Press **TIME** button once, display **12:00** starts flashing.
2. Press **HOURL** button to set the hour.
press **MIN** button to set the minute.
3. Press **TIME** button or **SNOOZE** button to save time or wait for another 10 seconds to confirm automatically.

To change 12H/24H time format

Hold press **TIME** button to change 12H/24H time format.

Chapter 4 ALARM SETTING

1. Press **ALARM 1** button, the alarm indicator  will light up, the display  starts flickering.
2. Press **HOURL** button to set the hour, press **MIN** button to set the minute.
3. Press **ALARM 1** button or **SNOOZE** button to save alarm time or just wait for another 10 seconds to confirm automatically.

Setting ALARM 2 is the same as ALARM 1.

Set Alarm Ring Volume

Repeat **VOLUME** button to adjust the alarm ring volume for your preference.

There is 7 levels, The sequence is as follows:

03-04-05-06-07-06-05-04-03-02-01-02.....

Turn off Alarm

When alarm goes off:

1. Press **SNOOZE** button to temporarily turn off alarm for 9 minutes. Alarm will ring every next 9 minutes.
2. Press **ALARM OFF** button to turn off alarm for 24 hours.
The alarm indicator  or  is still on, which means alarm is still activated and will ring after 24 hours.

- 03 -

Chapter 7 DIMMER

 
Repeat **DIMMER** button to adjust the brightness of display for your preference.

There is 8 levels, The sequence is as follows:

04(default)-05-06-07-06-05-04-03-02-01-OFF-01-02.....

When the OFF level is selected, the display will be completely turned off and the Red Indicator light will turn on. Then if any button is pressed again, the display screen will be restored to 04 default level instead of complete off state, and the Red indicator light will also be turned off.

NOTE: Hold press the DIMMER button, the display will be completely turned off directly.

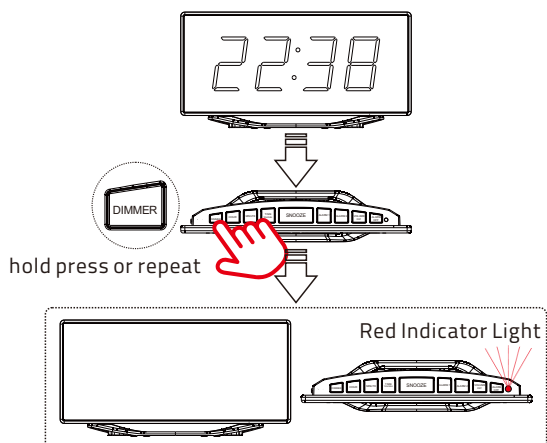

- 05 -

Cancel Alarm

1. Hold press **ALARM OFF** button to turn off alarm 1 and alarm 2 permanently. And corresponding indicator  and  will turn off.
2. Hold press **ALARM 1** button, just turn off alarm 1 permanently.  indicator will turn off.
3. Hold press **ALARM 2** button, just turn off alarm 2 permanently.  indicator will turn off.
4. If alarm 1 goes off, then hold press **ALARM OFF** or **ALARM 1**, just turn off alarm 1 permanently.  indicator will turn off.
5. If alarm 2 goes off, then hold press **ALARM OFF** or **ALARM 2**, just turn off alarm 2 permanently.  indicator will turn off.

Chapter 5 DST

Hold press **VOLUME** button to switch DST function. DST indicator will turn on.

Hold press **VOLUME** button again to turn off DST function. DST indicator will turn off.

Chapter 6 USB CHARGING

Plug charging cable into device such as phone or tablet. Device can charge both your phone or tablet at the same time. The maximum charge current is 1 Ampere.

 
- 04 -

Chapter 8 RED INDICATOR LIGHT

1. When the alarm goes off, the Red Indicator Light will flash
2. When the brightness of display is set to OFF, the Red Indicator Light will stay on

Chapter 9 Vibrator

Insert the vibrator plug into the vibrator jack of the machine.



BUZZ: Speaker will ring
BUZZ/VIB: Speaker will ring
Vibrator will vibrate
VIB: Vibrator will vibrate

- A. Wake up only by bed shaker
set alarm on — toggle switch to VIB —  indicator will light up.
- B. Wake up only by buzzer sound
Set alarm on — toggle switch to BUZZ —  indicator will light up
- C. Wake up by both Vibrator and Buzzer sound
set alarm on — toggle switch to BUZZ/VIB —  and  indicator will light up.

If you do not insert the vibrator plug into the vibrator jack of the machine, no matter you slide the switch button to VIB or BUZZ/VIB, the clock will have the buzz sound when alarm goes off.

- 06 -