

volkano

ROCKET SERIES



SUPERIOR SOUND QUALITY **BLUETOOTH SPEAKER**

PLEASE READ AND RETAIN THIS INSTRUCTION
MANUAL FOR FUTURE REFERENCE.



VK-3013-BK



FEATURES:

Bluetooth
FM Radio
Aux input
LED display screen
4 mode EQ settings
Call answering
Bass Radiators
USB

SPECIFICATIONS:

Bluetooth Version: Bluetooth 4.2
Operating Distance: Up to 10M
Output Power: 8W x 2
Distortion: < 1% (1kHz @1W)
S/N: 65dBA
Frequency Response: 90Hz – 16kHz
Input Voltage: DC 5V, micro USB port
Battery: 1800 mAh, lithium rechargeable battery
Charging Time: ≤ 5 Hours (5V/1.5A)
Playtime: 3 Hours (depends on volume)
Product Size: 390mm x 156.5mm x 197mm

INCLUDED IN THE BOX:

- Volkano Rocket Bluetooth Speaker
- Micro USB to USB charging cable
- 3.5mm audio cable
- Instruction Manual



IDENTIFYING PARTS:



1. Charging light indicator
2. DC 5V, micro USB charging port
3. On/Off switch
4. Micro SD/TF card slot
5. Aux input
6. USB port
7. Mode button
8. Track Repeat
9. Volume down
10. Volume up
11. EQ mode button
12. Previous track/rewind
13. Play/Pause and FM auto scan
14. Next track/fast-forward
15. Display LED screen



BLUETOOTH PAIRING

1. Switch the power on. The display screen will indicate “Hi” and a welcome tone will be audible.
2. Cycle to Bluetooth mode by pressing the “Mode” button until the display screen indicates “bt”, the speaker will beep twice. The Bluetooth symbol will flash, this means that the speaker is ready to pair with your Bluetooth playback device.
3. Activate the Bluetooth on your playback device and search for “Rocket”. Select “Rocket” from the device’s list to connect. You will hear a connection tone after the speaker has been paired successfully and the Bluetooth LED will stop flashing.
4. You can now playback audio through the speaker.
5. Music tracks can be selected either on the speaker or on your playback device (smartphone, computer, tablet etc.). Press the “next track/fast-forward button” to skip to the next song. Press “previous track/rewind” to play the previous song.
6. Volume can be controlled either on the speaker or on your playback device (smartphone, computer, tablet etc.). Press “volume up” or “volume down” on the speaker to adjust the volume as preferred.
7. Press the “play/pause” button on the speaker to play or stop music.

PLAYING MP3’S FROM A USB FLASH DRIVE OR MICRO SD CARD

1. Switch the power “ON”.
2. Insert USB flash disk or micro SD card into the slot. The music stored will be played automatically.
3. Music tracks can be selected with the control buttons on the speaker. Press “next track/fast-forward” or “previous track/rewind” button to select songs you would like to play.
4. To fast forward to a song section, press and hold the “next track/fast-forward” button while scrolling to your desired section. To rewind to a song section, press and hold the “previous track/rewind” to scroll back to your desired section.
5. Press “play/pause” to play or pause the music.
6. Use the “volume up” and “volume down” buttons on the speaker to adjust the volume accordingly.
7. Press “track repeat” to replay the song again when finished.



Note: In Bluetooth mode, inserting a USB flash disk will disconnect the Bluetooth and switch to playing from the USB flash disk. Press “Mode” to switch back to Bluetooth mode.

FM RADIO:

1. Use the provided audio cable as an antenna to receive a good FM radio signal.
2. Once the device has been turned on, press the “mode” button to cycle to FM radio mode.
3. Use the play/pause button to search for all available FM channels and store them automatically.
4. To navigate between radio stations, use the “next track/fast-forward” or “previous track/rewind” buttons to select radio stations.

Note: Inserting the audio cable while the speaker is in FM mode, will cause the speaker to automatically switch to Aux mode. Pressing the “mode” button again will cycle back to FM mode.

Aux-In:

1. Press “mode” to cycle the speaker to aux mode.
2. Plug the provided audio cable into the compatible device’s “line-out or headphone-out” and then into the “aux-in” of the speaker.

MAKING AND RECEIVING CALLS

- When the speaker is paired to your smartphone, you will be able to make or receive calls using the built-in microphone.
- When receiving a call, press the “play/pause” button on the speaker to answer and end calls.



DISPOSAL OF UNIT



- Please do NOT attempt to change the battery yourself. If the battery has died and you do not want us to replace your battery, you should follow the disposal instructions below:
- Never dispose of used batteries/electronics with ordinary solid wastes, since they contain toxic substances.
- Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices.

