



Clock Radio with wireless charger

MODEL: AKQI1113



User Manual



Welcome

Welcome to AKAI.

This user manual tells you all you need to know about setting up your new product.

Please take special note of any important safety and usage information presented with the  symbol.

All products brought to you by AKAI are manufactured to the highest standards of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by a comprehensive 1 Year Warranty.



Contents

 
Welcome	2
Product Overview	4
Controls and Connections	5
Operation	7
Troubleshooting	13
Specifications	14
Compliance and Responsible Disposal	15



Product Overview


What's in the box:

- A. Clock Radio
- B. Power Adaptor
- C. User Manual
- D. Warranty Certificate
- E. General Safety Warnings

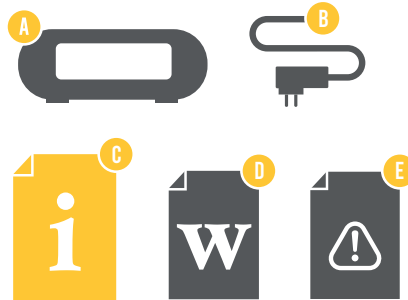

Controls and Connections

 Top view

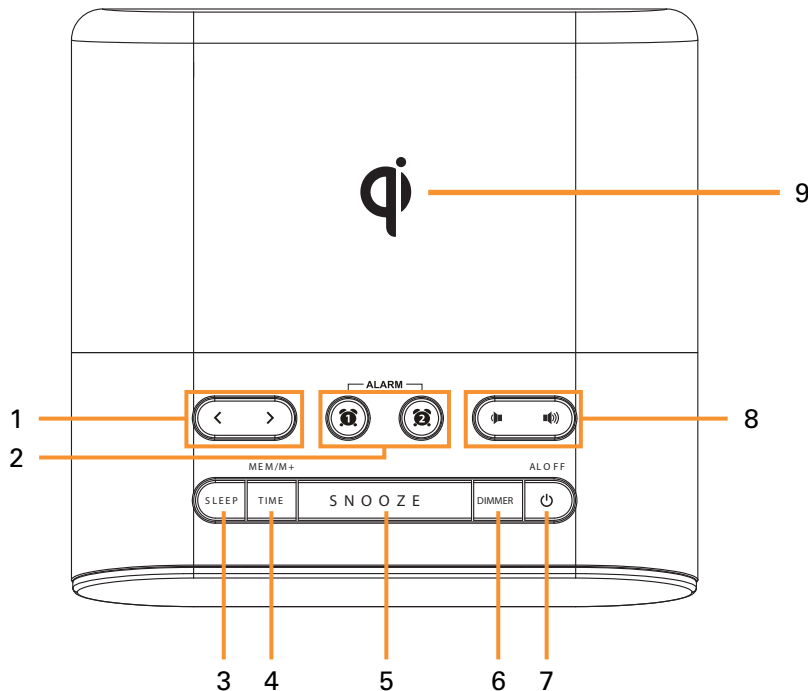


1. < button: Set the hour time/tune FM station/search previous FM station.
> button: Set the clock time/tune FM station/search next FM station
2. Alarm(1), Alarm(2) button
3. SLEEP button: set the sleep timer to turn off the radio automatically
4. TIME/MEM/M+ button: display the time at radio mode/recall preset FM station, store preset FM station
5. SNOOZE button
6. DIMMER button
7. Power/Alarm Off button
8. (Volume down button), (Volume up button)
9. Wireless charging pad

Front view



 Rear view

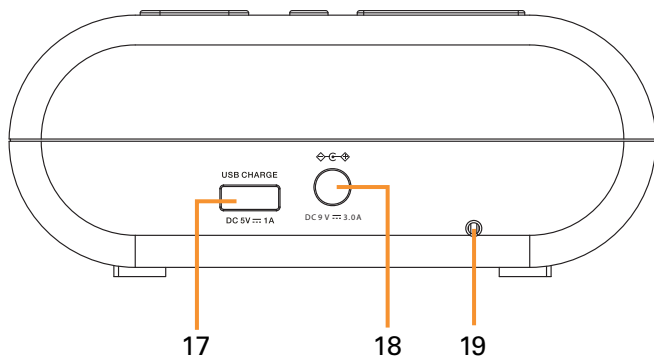

- 10. Display screen
- 11. Low battery warning indicator
- 12. Alarm (1) sound source indicator (alarm)
- 13. Alarm (1) sound source indicator (radio)
- 14. Alarm (2) sound source indicator (radio)
- 15. Alarm (2) sound source indicator (alarm)
- 16. Wireless charging indicator

- 17. USB charging port
- 18. DC IN jack
- 19. Antenna

Operation

Powering the Clock Radio

- Plug in the DC plug of the supplied adaptor to the DC IN port of the product, then plug the adaptor into a power socket.
- The display screen will light up.

Backup System

- The product has a 3V CR2032 lithium battery (not included) as a backup system. Using a screwdriver, remove the battery compartment cover on the underside of the product and insert the battery, ensuring the positive (+) is facing up.
- The product will use the battery when the power adaptor is disconnected or when the AC main power is off.
- When replacing the battery, do not disconnect the power adaptor otherwise the clock/alarm settings will be lost.

WARNING: Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns. **If swallowed, go straight to a hospital emergency room. Dispose of used batteries immediately.**



DANGER if swallowed

Setting the Time

- Press and hold the TIME button to enter the time setting mode.
- To set the time, press the ◀ button to set the hour and the ▶ button to set the minute.
- Press the TIME button to confirm the hour and minute or the it will automatically set after 5 seconds .

FM Operation

- Press the ⏻ button to turn the radio on.
- Press the ◀ and ▶ buttons to tune the station frequency.
- Press and hold the ◀ or ▶ buttons to automatically tune the next available FM station.
- Press the ⏻ button again to turn the radio off.
- Press the 🔊 button to decrease the volume, and the 🔊 button to increase the volume.

Setting Preset Stations

You can store up to 10 preset stations.

- Tune the FM stations using the ◀ or ▶ buttons.
- Press and hold the MEM/M+ button until "P01"(or the next available preset slot) shows on the display screen.
- Press and hold the MEM/M+ button to select a preset station number (P01-P10).
- Press the MEM/M+ button to confirm; the preset station has now been saved.
- To recall a preset station, press the MEM/M+ button repeatedly while listening to the current station.

Alarm Operation

To display the alarm time and turn alarms on/off

- Press the Alarm (1) or Alarm (2) buttons to show the alarm time and sound source indicator (alarm/radio) on the display screen. The corresponding sound source indicator will flash and auto set the alarm on after 5 seconds. The corresponding Alarm (1) or (2) indicator will switch on when the alarm is enabled.
- To turn off the alarm, press the Alarm (1) or Alarm (2) button repeatedly until the sound source indicators turn off.

Alarm settings

- When on clock mode (when radio is off), press and hold the Alarm (1) or Alarm (2) button to enter the alarm settings.
- To set the time, press the < to set the hour and the > button to set the minute.
- Press the corresponding Alarm (1) or Alarm (2) button to set the sound source. Press the < button to set the hour and the > button to select the sound source.
- Press the corresponding Alarm (1) or Alarm (2) button to confirm the setting, or it will auto confirm after 5 seconds.
- Note: the alarm will repeat everyday until the alarm is turned off.

Deactivating the alarms.

- Press the Alarm Off button to switch off an alarm.



Snooze alarms

- Press the snooze button to temporarily mute the alarm. The alarm will sound again when the snooze period (9 minutes) is over.
- The corresponding Alarm (1) or Alarm (2) indicator will flash on the display screen during the snooze period.
- To cancel the snooze period and alarm, press the Alarm Off button.

Sleep timer

- Set a time period for the clock radio to automatically switch off.
- Press the SLEEP button repeatedly to select a time (minutes) period (90/80/70/60/50/40/30/20/10/off).
- The clock radio will automatically switch off after the selected time period is up.
- Press the SLEEP button to check the remaining time before the clock radio switches off.
- Press the POWER button to cancel the sleep timer.


Display Information

- Press the ◀ and ▶ buttons to change between the display screen showing the clock time and the current FM radio station frequency.

Display Brightness

- Press the DIMMER button to change the display screen brightness (low/high/off).

Using Qi Wireless Charging

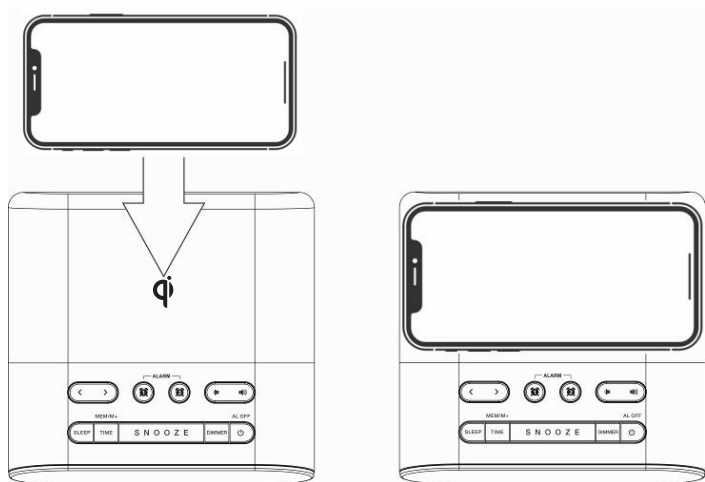

- The wireless charging function of the clock radio works only on wireless charging compatible smart phones.
- Place your smart phone facing up on the wireless charging pad. If it doesn't start charging, try adjusting the position and/or remove your smart phone case.

When the smart phone is charging, the wireless charging indicator will light up. The colour of the indicator light reflects the status of the wireless charger:

- Off - in standby mode
- Blue - charging
- Blinking red - error. If the indicator is blinking red:
 1. Check that the smart phone supports wireless charging
 2. Adjust position of the smart phone to the centre of the wireless charging pad.
 3. Remove the smart phone case, and/or check and remove any metal or other objects between the mobile phone and wireless charging pad.

USB Charging

You can charge smart phones that don't support wireless charging through the USB charging port of the clock radio. Connect your smart phone to a USB charging cable (not included) into the USB charging port on the back of the clock radio to charge.

Resetting the Clock Radio

To reset the clock radio, disconnect the AC power cord from the wall and remove the battery from the compartment. Wait around 3-5 minutes and reinsert the battery and replug the AC power cord into the wall. The times and alarms are now reset.

Troubleshooting

If you encounter any problems with your clock radio, please check this list of possible issues for a solution. If you don't find a solution here, contact After Sales Support on 1300 886 649.

Problem	Solution
Wireless charger not working	• Check that your smart phone supports wireless charging • Adjust the position of the smart phone to the centre of the wireless charging pad. • Remove the smart phone case. • Check and remove any metal or other objects between the mobile phone and wireless charging pad.
Cannot charge smart phone	• Check that the USB cable is securely connected for both the USB charging port on the radio and the smart phone. • Try another USB cable.
Display screen not showing	• Check that the DC plug is plugged into the DC IN port and the power adaptor plug is plugged into the power socket with a power source. • Press the DIMMER button to check whether the display screen is turned off.
No sound from FM radio	• Press the power button to show the radio frequency. • Press the  button.
Poor reception from FM radio, cannot find station	• Move the antenna.



Specifications

Power adaptor	Input: AC 100-240V, 50/60Hz Output: DC 9V, 3A
Audio power output	700mW
Wireless charger power output	10W Max.
Frequency range	FM 87.5 - 108MHz
Backup system battery (not included)	3V CR2032 lithium battery
Dimensions	141 (W) x 135 (D) x 58 (H) mm
Net weight	0.28kg



Compliance and Responsible Disposal



Packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

Product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

Compliance

This product complies with the Australian Safety Standard AS/NZS 62368.1 to ensure the safety of the product.



For Technical and Warranty Support

- 📞 1300 886 649
- 🌐 www.tempo.org
- ✉ info@tempo.org
- 🏠 Distributed by Tempo (Aust) Pty Ltd,
PO Box 6056, Frenchs Forest DC 2086

