

KLIPSCH® GROOVE®

McLAREN EDITION



OWNER'S MANUAL




TABLE OF CONTENTS

- 2 - INSIDE
- 3-4 - BUTTONS
- 5-6 - BATTERY CHARGE
- 7-8 - *BLUETOOTH®* WIRELESS TECHNOLOGY
- 9 - ENABLE/DISABLE FUNCTION SOUNDS
- 10-11 - AUXILIARY IN
- 12 - FACTORY RESET
- 13 - CARE AND CLEANING



INSIDE

CONTENU • CONTENIDO • INHALT • CONTENUTO • CONTEÚDO • داخل العبوة

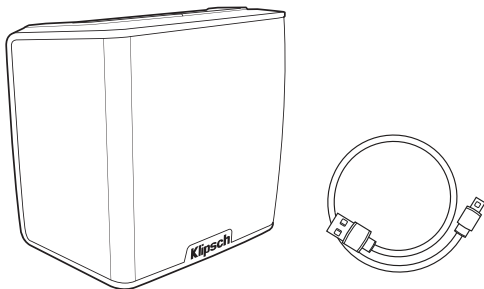


International Adapters Included.
Adaptateurs Internationaux Inclus.
Contiene Adaptadores Internacionales.

Internationale Adapter Im Lieferumfang Enthalten.
Sono Inclusi Adattatori Internazionali.
Adaptadores Internacionais Incluídos.
مرفق مهايئات دولية.

BUTTONS

CONTENU • CONTENIDO • INHALT • CONTENUTO • CONTEÚDO • الأزرار

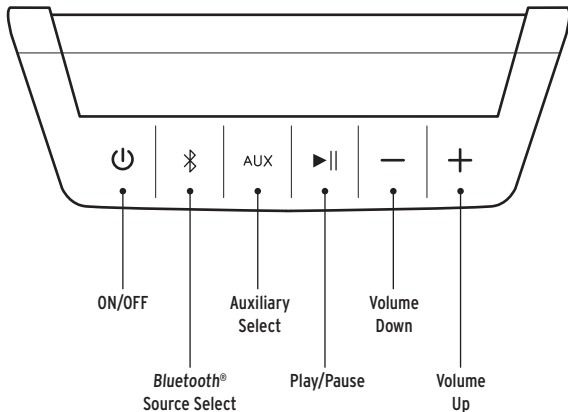



ON/OFF Sous tensio / Hors tension Encendido / Apagado Ein / Aus Accesso / Spento Ligar / Desligar تشغيل/إيقاف	Bluetooth® Source Select Sélection de la source Bluetooth® Selección de fuente Bluetooth® Bluetooth® Quellenwahl Selezione segnale Bluetooth® Seleção de fonte Bluetooth® تحديد مصدر Bluetooth®	Auxiliary Select Sélection auxiliaire Selección de auxiliar AUX-Auswahl Selezione ingresso ausiliario Seleção de auxiliar تحديد الإدخال الإضافي
Play/Pause Lecture/pause Reproducción/pausa Wiedergabe/Pause Riproduzione / Pausa Reproduzir/Pausar تشغيل/إيقاف مؤقت	Volume Down Volume bas Bajada de volumen Leiser Riduzione volume Diminuir o volume خفض مستوى الصوت	Volume Up Volume haut Subida de volumen Lauter Aumento volume Aumentar o volume رفع مستوى الصوت



BATTERY CHARGE

CHARGE BATTERIE • CARGA DE LA PILA • AKKULADESTAND • CARICA BATTERIA • CARGA DA BATERIA • شحن البطارية

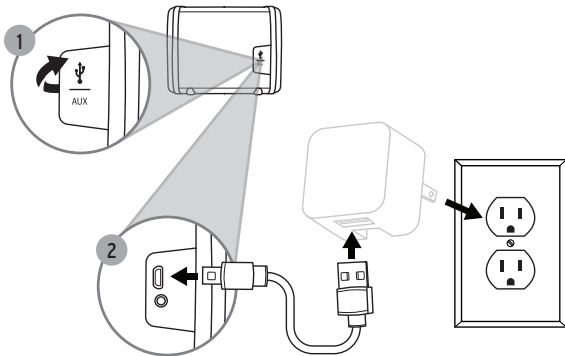

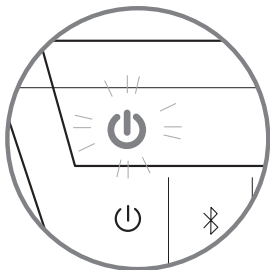

Green =  > 50%

Yellow =  < 50%


Solid Red =  < 10%

Flashing Red =  < 5%

Green Vert Verde Grün Verde Verde Verde أخضر	Yellow Jaune Amarillo Gelb Giallo Amarela أصفر	Solid Red Rouge continu Rojo continuo Dauerhaft Rot Vermelho a luce fissa Rosso costante أحمر ثابت	Flashing Red Clignotement Rouge Destella Rojo Blinkt Rot Vermelho lampeggiante Rosso intermitente أحمر وامض
--	---	---	--

BLUETOOTH® WIRELESS TECHNOLOGY

TECNOLOGÍA INALÁMBRICA *BLUETOOTH*® • CONFIGURACIÓN DE TECNOLOGIA WIRELESS *BLUETOOTH*® •
DRAHTLOSE *BLUETOOTH*®-TECHNOLOGIE-SETUP • CONFIGURAZIONE TECNOLOGIA WIRELESS *BLUETOOTH*® •
CONFIGURAÇÃO DE TECNOLOGIA SEM FIO *BLUETOOTH*® • تكنولوجيا اللاسلكية *BLUETOOTH*®

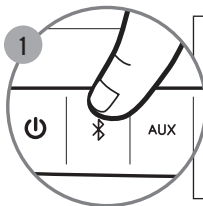

Hold 3 Seconds

Appuyer pendant 3 secondes


Mantenga oprimido durante 3 segundos

3 Sekunden gedrückt halten

Tenere premuto per 3 secondi

Manter pressionado por 3 segundos

اضغط لمدة 3 ثوان

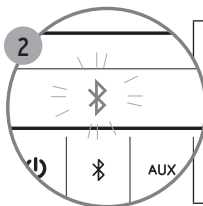

Flashing

Clignotant

Destello

Blinkt


Lampeggiante

Intermittente

وميض


*** Example only. Your device may differ.**

• À titre d'exemple seulement. Votre appareil peut être différent. • Este es solo un ejemplo. Es posible que su dispositivo sea diferente. • Nur als Beispiel. Ihr Gerät kann anders aussehen. • Solo a titolo esemplificativo. Lo specifico dispositivo può essere diverso. • Apenas para exemplo. O dispositivo pode ser diferente. • مثال فقط قد يختلف جهازك.

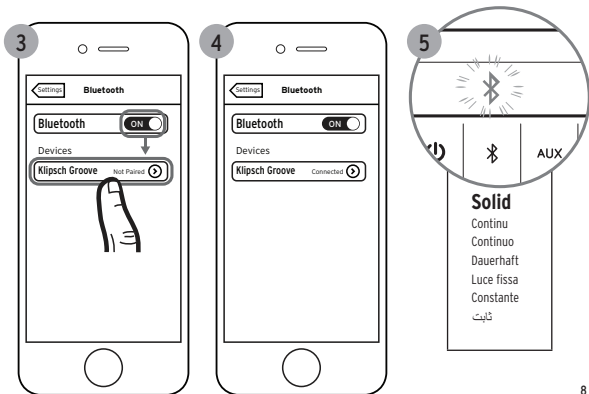

ENABLE/DISABLE FUNCTION SOUNDS

SONS DES FONCTIONS D'ACTIVATION/DE DÉSACTIVATION • HABILITACIÓN/INHABILITACIÓN DE SONIDOS DE FUNCIÓN
• FUNKTIONSGERÄUSCHE AKTIVIEREN/DEAKTIVIEREN • ATTIVAZIONE/DISATTIVAZIONE SUONI DELLE FUNZIONI •
ATIVAR/DESATIVAR SONS DAS FUNÇÕES • تمكين/تعطيل أصوات الوظائف

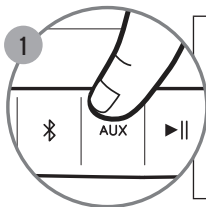

Hold 5 Seconds

Appuyer pendant 5 secondes


Mantenga oprimido durante 5 segundos

5 Sekunden gedrückt halten

Tenere premuto per 5 secondi

Manter pressionado por 5 segundos

اضغط لمدة 5 ثوان

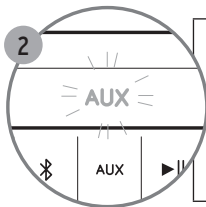

Flashing

Clignotant

Destello

Blinkt


Lampeggiante

Intermittente

وميض


AUX IN

AUX IN • ENTRADA AUX • AUX IN • IN AUX • AUX IN • الإدخال الإضافي

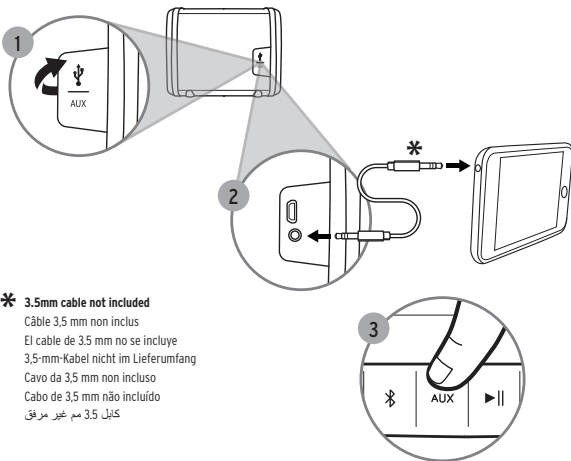


AUX IN

AUX IN • ENTRADA AUX • AUX IN • IN AUX • AUX IN • الإدخال الإضافي

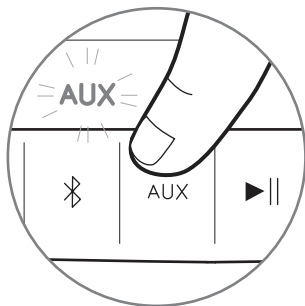

FACTORY RESET

RÉINITIALISATION • RESTABLECIMIENTO DE FÁBRICA • RÜCKSETZUNG AUF WERKSEINSTELLUNG •
RIPRISTINO IMPOSTAZIONI DI FABBRICA • RESTABELECIMENTO DAS CONFIGURAÇÕES DE FÁBRICA • إعادة ضبط المصنع

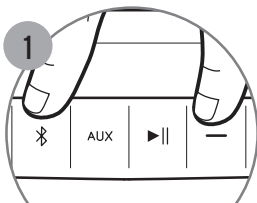

Hold 5 Seconds

Appuyer pendant 5 secondes


Mantenga oprimido durante 5 segundos

5 Sekunden gedrückt halten

Tenere premuto per 5 secondi

Manter pressionado por 5 segundos

اضغط لمدة 5 ثوان

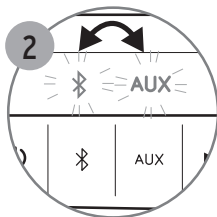

NOTE: Clears *Bluetooth®* pairing history

Remarque : Efface l'historique d'appariement *Bluetooth®*

NOTA: Borra el historial de sincronización *Bluetooth®*

Hinweis: Löscht *Bluetooth®*-Kopplungsdaten

Nota: cancella la cronologia delle associazioni *Bluetooth®*

Observação: Limpa o histórico de emparelhamento *Bluetooth®*

ملاحظة: يمسح تاريخ الاقتران بتقنية *Bluetooth®*

CARE AND CLEANING

ENTRETIEN ET NETTOYAGE • CUIDADO Y LIMPIEZA • PFLEGE UND REINIGUNG • CURA E PULIZIA •
CUIDADOS E LIMPEZA • العناية والتنظيف



This product is IPX 4 rated splash resistant.

Ce produit est protégé contre les éclaboussures
selon la norme IPX 4


Este producto es clase IPX4, resistente a las salpicaduras

Dieses Produkt ist spritzwassergeschützt gemäß
Norm IPX 4

Questo prodotto presenta grado di protezione IPX4 -
resistente agli spruzzi d'acqua

Este produto tem classificação IPX 4 para resistência
a respingos

هذا المنتج مقاوم للرشاش بتصنيف IPX 4

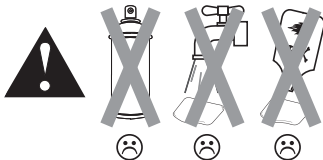



Klipsch®

KEEPERS OF THE SOUND™

3502 WOODVIEW TRACE, INDIANAPOLIS, IN, USA

KLIPSCH.COM



©2022, Klipsch Group, Inc. Klipsch Group, Inc. is a wholly-owned subsidiary of Vox International Corporation. Klipsch and Keepers of the Sound are trademarks of Klipsch Group, Inc., registered in the United States and other countries. The *Bluetooth*® word mark is a registered trademark owned by Bluetooth SIG, Inc. and any use of such mark by Klipsch Group, Inc. is under license.

V01 - 220623

