


FAN-SPEED-CONTROLLER

Ideal for Controlling the fan speed of ventilation fans

WALL OUTLET INSTRUCTIONS

1. Unplug the “fan cord” from wall.
2. Plug in “fan cord” into receptacle on bottom of Fan-Speed-Controller.
3. Plug connected Fan-Speed-Controller into wall socket or into extension cord for easy access.

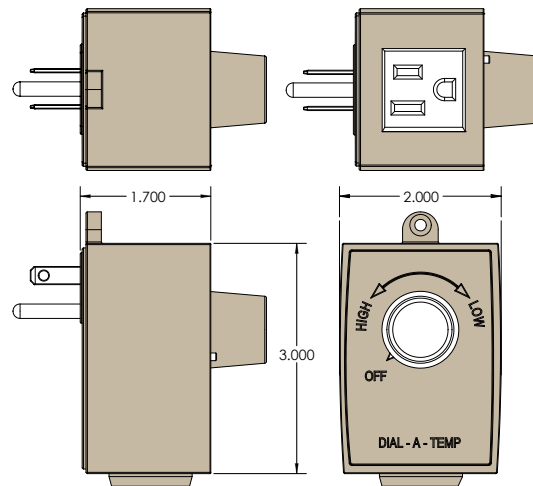

Smart Heating Solutions

king-electric.com

A40015 - Rev. B – 12/16

