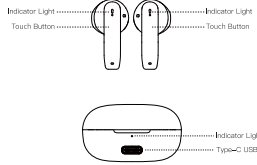
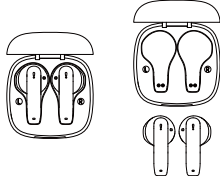


 EAR-BUS 	Product Overview  1	What's in the Box <table><tr><td>EarBus Earbuds</td><td>x 2</td></tr><tr><td>EarBus Charging Case</td><td>x 1</td></tr><tr><td>Type-C USB Cable</td><td>x 1</td></tr><tr><td>User Manual</td><td>x 1</td></tr></table> How to Pair 1. Open the charging case, the L&R earbuds will auto matically form a TWS team. When the team is successful, the red LED and white LED of L&R earbuds will flash slowly and enter the pairing mode.  2	EarBus Earbuds	x 2	EarBus Charging Case	x 1	Type-C USB Cable	x 1	User Manual	x 1	2. Select "EarBus E01" under bluetooth menu on your device. The pairing is successful.  3. Congratulations, your earbuds are connected successfully, you can choose to use them at TWS Mode or MONO Mode. 3	4. The next time you use it, open the charging case, it will automatically connect to your device.  5. Connect to a New Device When you want to connect to a new device, disconnect this connection, the earbuds will turn to pairing mode. 4	Touch Control  <table><tr><td>Music Mode</td><td>Play / Pause</td><td>Touch L or R</td></tr><tr><td colspan="2">Previous / Next</td><td>Press the left ear for 1s / Press the right ear for 1s</td></tr><tr><td>Phone Mode</td><td>Answer / End call</td><td>Click L or R</td></tr><tr><td colspan="2">Refuse to answer a call</td><td>Long press 1s to reject</td></tr></table> * Note 1: The L&R earbuds have different functions, and only half of them can be used with one ear. 2.Support Siri, Google Assistant, Alexa, etc. 5	Music Mode	Play / Pause	Touch L or R	Previous / Next		Press the left ear for 1s / Press the right ear for 1s	Phone Mode	Answer / End call	Click L or R	Refuse to answer a call		Long press 1s to reject	Power on —Open the charging case. Power off —Close the charging case. If you are in a call and another call comes in — Click to answer the new call and keep the original call; — Long press 1s to reject the second call; — After answering the second call, click keep the current call switch, and switch the call three times to end the current call. Charging After putting the earbuds back into the charging case, close the cover. Charging the earbuds When low battery, the voice announcement will remind you to charge every 5 minutes. Close the cover and charge in the charging case, The red light is always on. 6													
EarBus Earbuds	x 2																																						
EarBus Charging Case	x 1																																						
Type-C USB Cable	x 1																																						
User Manual	x 1																																						
Music Mode	Play / Pause	Touch L or R																																					
Previous / Next		Press the left ear for 1s / Press the right ear for 1s																																					
Phone Mode	Answer / End call	Click L or R																																					
Refuse to answer a call		Long press 1s to reject																																					
Charging the Charging Case Charging the charging case, you can use the Type—C cable or wireless charger. When the case is in charging, the light on the case will breathing. The Indicator light color indicates the battery level of charging case. Light will turn off once the charging is complete. <table><tr><td>70~100%</td><td>Breath flash</td></tr><tr><td>30~70%</td><td>Breath flash</td></tr><tr><td>0~30%</td><td>Breath flash</td></tr></table> Factory data reset Try to reset as following instructions when two earbuds are unable to connect. - Remove the earbuds from the compartment, and manually press and hold for 8s to turn off the headset. - Press and hold for 8s, release the hand, the headset will restart, the red LED and white LED will be on for 1s, and then the red LED and white LED will flash alternately to recover Factory setup successful. - Repeat with the other headset. - Red LED and white LED flash alternately, TWS earbuds start to form a team. After the team is successful, it turns to red and white lights alternately s low flashing, and enters the configuration On the pattern. 7	70~100%	Breath flash	30~70%	Breath flash	0~30%	Breath flash	FAQ 1.How to change from Mono Mode to Dual Mode. a.When you just only use the right earbud, take out the left earbud from charging case, the music will come out from the left and right earbuds at the same time. b.When you just only use the left earbud, take out the right earbud from charging case, the music will come out from the left and right earbuds at the same time. 2.How to change from Dual Mode to Mono Mode. a.When you put your right earbud into the charging case, the left earbud will continue playing music. b.When you put your left earbud into the charging case, the right earbud will continue playing music. 3.The earbuds cannot reconnect to my device automatically. If your earbuds are connected to several devices before, they will reconnect automatically with the recently connected device. a. Make sure the Bluetooth of the mobile phone is turned on, close the cover again, and turn on the headset again. b. If the left and right earbuds white lights flash once for 5 seconds, it indicates that the headset has been connected to other mobile phones. Turn off the Bluetooth of the mobile phone that has been connected to the headset, and turn off the left and right earbuds. The red and white lights flash slowly, the headset automatically enters the pairing mode, and then search for connection with the current mobile phone. c. Let the headset restore the factory settings directly, and then use the current mobile phone to search and connect again. 8	5.No sound from left/right earbud. Please put your earbuds into the charging case, and then take out them again. If still not solve this problem, please carry out restoring the factory settings(Pager 7), and then put your earbuds into charging case and then take out them again. 6.Can't turn on my earbuds. a. Put the earbuds into the charging case again, and make sure that the earbuds is in the compartment and there is no shaking. b. Close the cover, then charge the charging case. After flushing for a period of time, open the cover again and try to activate the headset. FCC Compliance Statement FCC and IC Statement This device complies with part 15 of the FCC Rules and Industry Canada License-exempt RSS standard(s). Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and(2)this device must accept any interference received, including interference that may cause undesired operation. CAN ICES-3(B). FCC/IC Radiation Exposure Statement This equipment complies with FCC/IC RSS-302 radiation exposure limits set forth for an uncontrolled environment. 9	Federal Communication Commission Interference Statement This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help. FCC Caution Any Changes or modifications not expressly approved by the party set forth for an uncontrolled environment. Responsible for compliance could void the user's authority to operate the equipment. 10	Name and content of harmful substances in products <table><tr><th rowspan="2">Component Name</th><th colspan="6">Harmful Substance</th></tr><tr><th>Lead (Pb)</th><th>Mercury (Hg)</th><th>Cadmium (Cd)</th><th>Chromium VI (Cr VI)</th><th>Polybrominated biphenyls (PBBs)</th><th>Polybrominated diphenyl ethers (PBDEs)</th></tr><tr><td>Printed Circuit Assembly</td><td>X</td><td>○</td><td>○</td><td>○</td><td>○</td><td>○</td></tr><tr><td>Final product parts such as casing</td><td>X</td><td>○</td><td>○</td><td>○</td><td>○</td><td>○</td></tr></table> This table has been prepared in accordance with the provisions of EU 11354. ○ : It means that the content of the harmful substance in the homogeneous materials of the part is below the limit specified in GB/T 26577. X : It means that the content of the hazardous substance in at least one homogeneous material of the part exceeds the limit specified in GB/T 26577. Components marked with an "X" on the form are those for which the substitution of hazardous substances is not possible due to the physical or technological characteristics. Printed Circuit Board Assembly: including printed circuit boards and their components, electronic components, and so on. Depending on the model, the product you purchase may not contain all of the above components.  Electrical and electronic products sold in the People's Republic of China must be marked as such. This number inside the logo represents the product under normal date. Environmental Usage Periods. 11	Component Name	Harmful Substance						Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Chromium VI (Cr VI)	Polybrominated biphenyls (PBBs)	Polybrominated diphenyl ethers (PBDEs)	Printed Circuit Assembly	X	○	○	○	○	○	Final product parts such as casing	X	○	○	○	○	○	Warranty statement Disclaimer There are no warranties, express or implied of position or other implication of any kind that this manual of one is. The product, specification and information mentioned are for reference only and are subject to change without notice. WARRANTY NOTICE: The following warranty is made with respect to the product included in this document. If the product is in warranty for a period of twelve (12) months from the date of purchase, the product will be repaired or replaced, at the discretion of the manufacturer, if it is found to be defective in materials or workmanship. (1) The "Warranty Period", under normal use, due to defects in quality that can be repaired, it will be replaced free of charge after repair or replacement of the product. The manufacturer certifies that the product cannot be repaired, it will be replaced free of charge after repair or replacement of the product. The warranty will continue for the remainder of the warranty period (minimum of 30 days). Purchase date in based on the date of sale. The date of the ticket must be valid; if the date of purchase is not determined, the warranty period from the date of production of the product according to thirteen days. (2) Mismatch calculation. To apply for warranty, please first call the product service line and follow our instructions. To claim the warranty, you will need to provide a valid sales invoice that is accurate, complete and legible. If not, the above warranty does not apply to the following cases: 1. over the three pack validity period; 2. Altered warranty card, product code does not match the product itself. 12	3. One to fifteen, alone or improper transportation, one, maintenance or storage of the case Failure or damage. 4. Failure or damage caused by force majeure (such an earthquake, war, fire, etc.) or accident. 5. Zipper, zipper damage due to excessive force; 6. Unwinding or tearing due to overloading; 7. Any damage caused by sharp objects; 8. Products that show signs of burning or feeding; 9. Damage caused by unauthorized disassembly or alteration; 10. Aging, discoloration, wear and tear, cracking and other wear and tear that occurs during normal use of the product. Warranty statement 11. This warranty is void if the original identification label of the product is altered or destroyed. The completeness and warranty perfection of the Product and accompanying materials are not warranted. On-site inspection and dispose any discrepancies. The above warranty is the entirety of our product warranty, which apply only in mainland China. Nothing in this document affects consumer rights that cannot be excluded or limited under the law. Tel: After-sales service: 0755-22674600 Email: earbus@ear-bus.com 13
70~100%	Breath flash																																						
30~70%	Breath flash																																						
0~30%	Breath flash																																						
Component Name	Harmful Substance																																						
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Chromium VI (Cr VI)	Polybrominated biphenyls (PBBs)	Polybrominated diphenyl ethers (PBDEs)																																	
Printed Circuit Assembly	X	○	○	○	○	○																																	
Final product parts such as casing	X	○	○	○	○	○																																	