



# **Condenser Dryer 7kg**

# **USER MANUAL**

**MDC07**



# CONTENTS

Safety Information.....2

Transport & Installation.....5

Attention & Advice.....6

Identifying Parts of the Dryer.....7

Quick Start.....8

Description of Controls.....9

Programme Table.....10

Drying Functions.....11

Operation Instruction.....13

Cleaning & Maintenance.....14

Troubleshooting Guide.....16

Repairs, Service & Warranty.....17

Specifications.....18



# SAFETY INFORMATION

Congratulations on your new Midea condenser dryer. This manual contains important information on the installation, use and care of your appliance. Please read this manual carefully before use. Follow instructions and keep the manual for future reference.



**CAUTION: HOT SURFACE!**



**CAUTION: RISK OF FIRE!**

## Dry Care Symbols

Please pay attention to use the drying machine if the materials of your clothes can not be dried by it or contain the symbols as follows:

|                                                                                                               |                                                                                                         |                                                                                                                                   |                                                                                                                                           |
|---------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| <br>Dry                      | <br>Normal             | <br>Not tumble dry normal                        | <br>Do not dry                                         |
| <br>Line dry / hang to dry | <br>Drip dry         | <br>Dry flat                                   | <br>In the shade                                     |
| <br>Dry clean              | <br>Do not dry clean | <br>Dry clean normal cycle<br>with any solvent | <br>Dry clean normal cycle<br>petroleum solvent only |

## Safety Notes

- 1.This product belongs to Category of electrical appliances, and only for drying textiles which have been washed with water in the household. Please pay attention to the safety of power use during the operation!
2. The power source with reliable earthing must be used. Its earth wire must be buried under the ground and shall not be connected with the public utilities such as city water pipe or gas pipe etc. The earth wire and null wire shall be distinguished and shall not be connected together.
3. The power wire shall be met IEC standard and must be able to withstand the current above 10A. To ensure your and your family's safety, please make improvement immediately if any power use at your home does not comply with the above-mentioned requirements.
4. The maximum mass of dry textile material is 7 kilograms to be used in the appliance.
5. The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
6. Do not dry unwashed items in the tumble dryer.

# SAFETY INFORMATION

7. Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
8. Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
9. Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
10. The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
11. The lint trap has to be cleaned frequently.
12. The lint must not to be allowed to accumulate around the tumble dryer.
13. Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliance burning other fuels, including open fires.
14. **WARNING:** never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
15. The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliance burning gas or other fuels.
16. The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer. In such a way that a full opening of the tumble dryer door is restricted.
17. Keep pets away from this appliance.
18. Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
19. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent-this will reduce, but not eliminate, the hazard.
20. The appliance should not be overturned during normal use or maintenance.
21. Remove all objects from pockets such as lighters and matches.
22. If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
23. This appliance is for indoor use only.
24. The openings must not be obstructed by a carpet.
25. Children of less than 3 years should be kept away unless continuously supervised.
26. If the appliance appears high temperature abnormally, please draw the mail plug immediately.
27. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.



# SAFETY INFORMATION

## Electric Shock Hazard

1. Do not pull the power cord forcefully to pull out the mains plug.
2. Please do not plug/draw the mains plug with wet hands.
3. Do not damage the power cord and the power plug.

## Injury Danger

1. Do not disassemble and install the dryer under no instruction or supervision.
2. Do not stack this dryer on washing machine without stacking kits. (If the dryer is placed on top of a front load washing machine, please purchase the independent parts and it must be installed by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.)
3. Do not lean on the opened door of the dryer.
4. Do not put any pyrotoxin on the dryer, such as the candle, electric cooker.

## Damage Danger

1. Do not dry over the rated capacity.
2. Do not operate the dryer without the lint filter.
3. Do not dry the clothes before being spun.
4. Do not expose the dryer directly under the sun, and indoor use only.
5. Do not install the dryer in the humid and drenching environment.
6. Before performing any cleaning or maintenance, unplug the power cord and do not directly wash the dryer with water.

## Explosion Danger

Please do not dry the clothes with flammable substances (such as the coal oil, alcohol, etc) as this may result in an explosion.

## Information on Disposal

Most of the packing material used is recyclable. Please separate the plastic and cardboard and dispose through your local recycling depot or place in appropriate recycling collection bins.

If disposing of this appliance, please contact your local authority for safe disposal. Cut off the main cable, break or remove spring or bolt catches if fixed to prevent children from getting trapped or harming themselves.




# TRANSPORT & INSTALLATION

## Transport

Move cautiously. Do not grasp any salient parts of machine. The machine door can not be used as the handle for delivery.


## Installation Position

1. Please install the dryer on solid and flat ground.
2. Please do not place the dryer on the slope, soft carpet or wooden floor.
3. Please do not install the dryer outdoors, to prevent the dryer from being frozen to damage of machine parts.

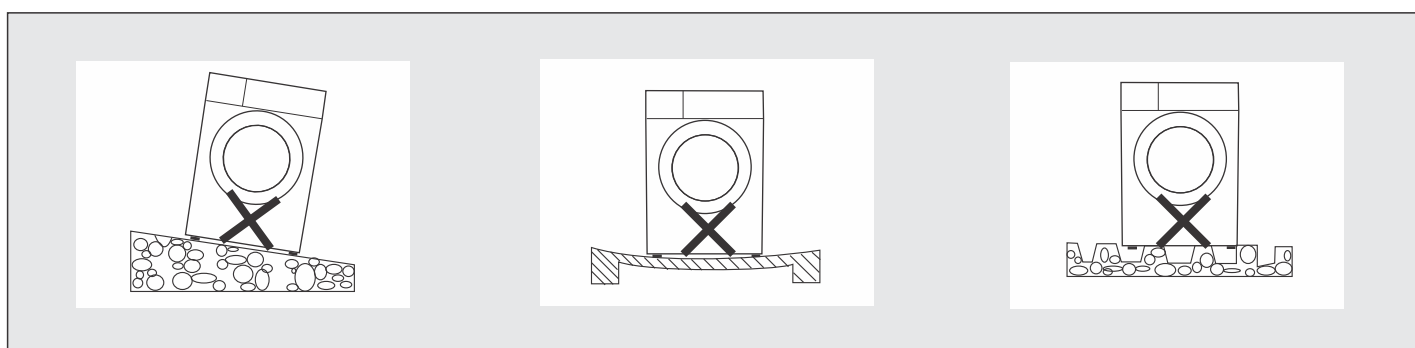

## Level Adjusting

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, adjust the feet with a tool.

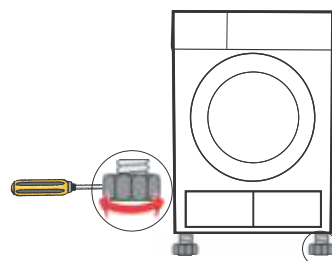

## Power Supply Connection

1. Make sure that the voltage of the power supply is the same as the electric specification of the dryer.
2. Do not connect the dryer with the power connection board, the universal plug or socket.

# ATTENTION & ADVICE

## Attention

Before the first cycle, the dust and grease may remain in this dryer during the period of manufacture and transportation. To avoid contaminating your clothes, please follow these steps:


- Put some clean rags into the drum.
- Plug the power.
- Press “On/Off” button, select the “Quick” programme and press “Start/Pause” button.
- After this programme is finished, please follow the “Cleaning & Maintenance” to clean the lint filter and air condenser on page 14 and 15.

## Advice

- Before drying, thoroughly spin the laundry in washing machine. High spin speed can reduce the drying time and save energy consumption.
- For uniform drying result, sort the laundry according to fabric type and drying programme.
- Before drying, please close zips, hooks and eyelets, button up, tie fabric belts, etc.
- Do not over dry the clothes, because over dried clothes can easily get creases or shrinkage.
- Do not dry the articles containing rubber or similar elastic materials.
- The door can be opened only after the programme of the drying machine is completed. Do not open the door before the programme finished, as the skin may be scalded by steam or hot surface.
- Clean the lint filter and empty container after each use to avoid extension of drying time and energy consumption.
- Do not dry these clothes after dry-clean process.
- The weight references as follows:

|                                                                                                                                |                                                                                                                                                     |                                                                                                                              |                                                                                                                                 |
|--------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
|  Blended Coats<br>(about 800g)              |  Jackets (about<br>800g in cotton)                               |  Jeans Trousers<br>(about 800g)           |  Towel Quilts<br>(about 900g<br>in cotton) |
|  Single Sheets<br>(about 600g in<br>cotton) |  Work Clothes<br>(upper and lower)<br>(about 1120g in<br>cotton) |  Pajamas<br>(about 200g)                  |  Shirts (about<br>300g in cotton)          |
|  Undershirts<br>(about 180g in<br>cotton)   |  Underpants<br>(about 70g in<br>cotton)                          |  Socks (about 30g in<br>blended material) |                                                                                                                                 |

# IDENTIFYING PARTS OF THE DRYER


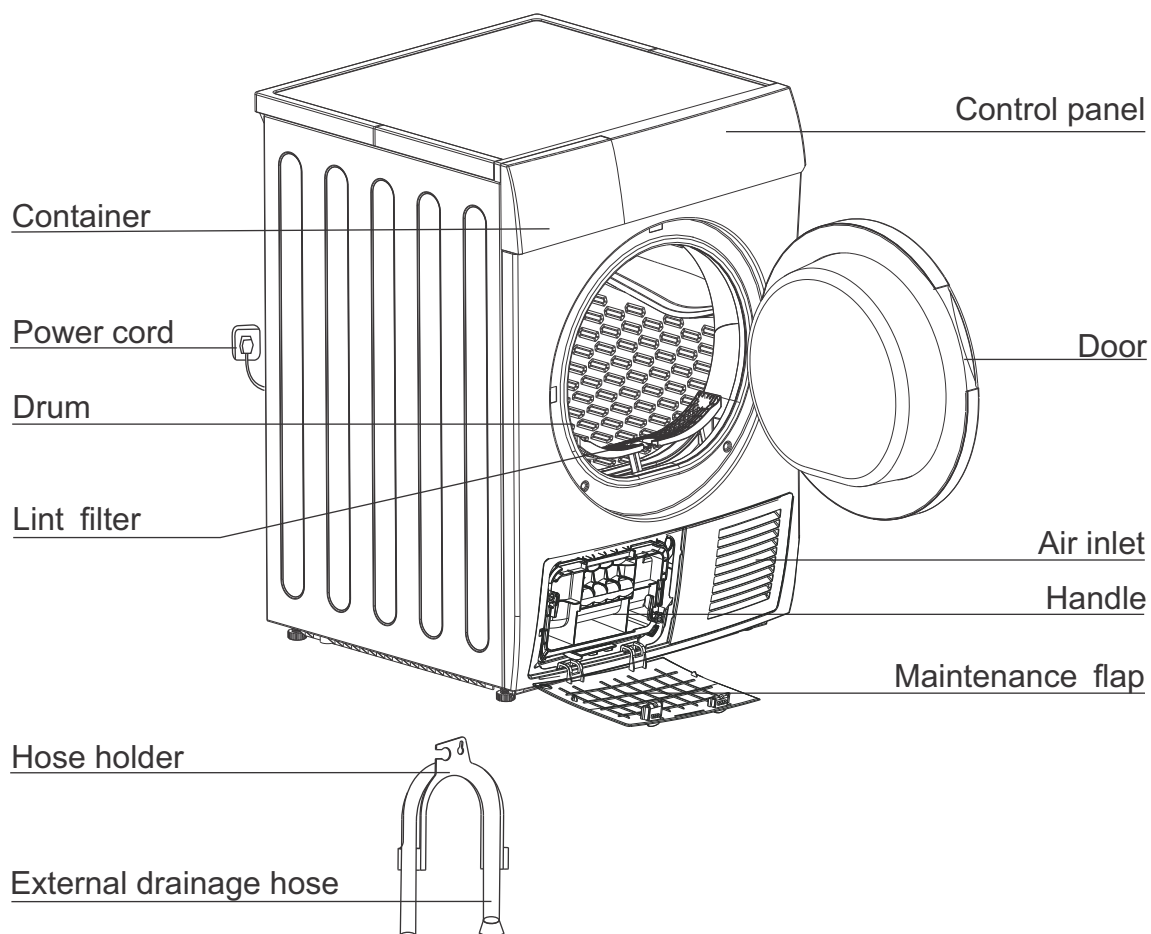


## External Drain Hose Installation


The water container does not require to be emptied when water is externally drained.

Step 1: Remove the drain hose from the hose connector using plier.


Step 2: Insert the external drainage hose.

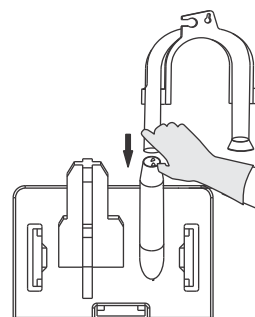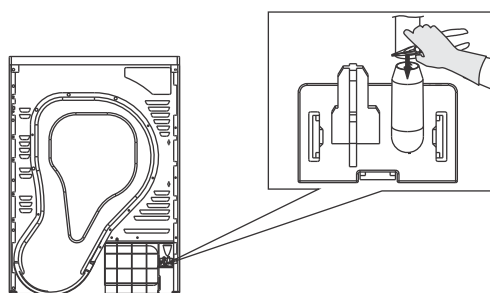


Step 3: Put the hose holder on the washing basin or any other sink.

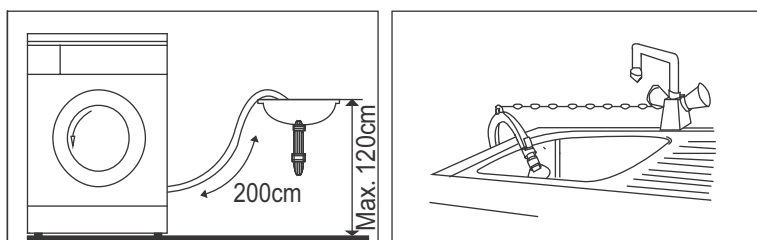

# QUICK START

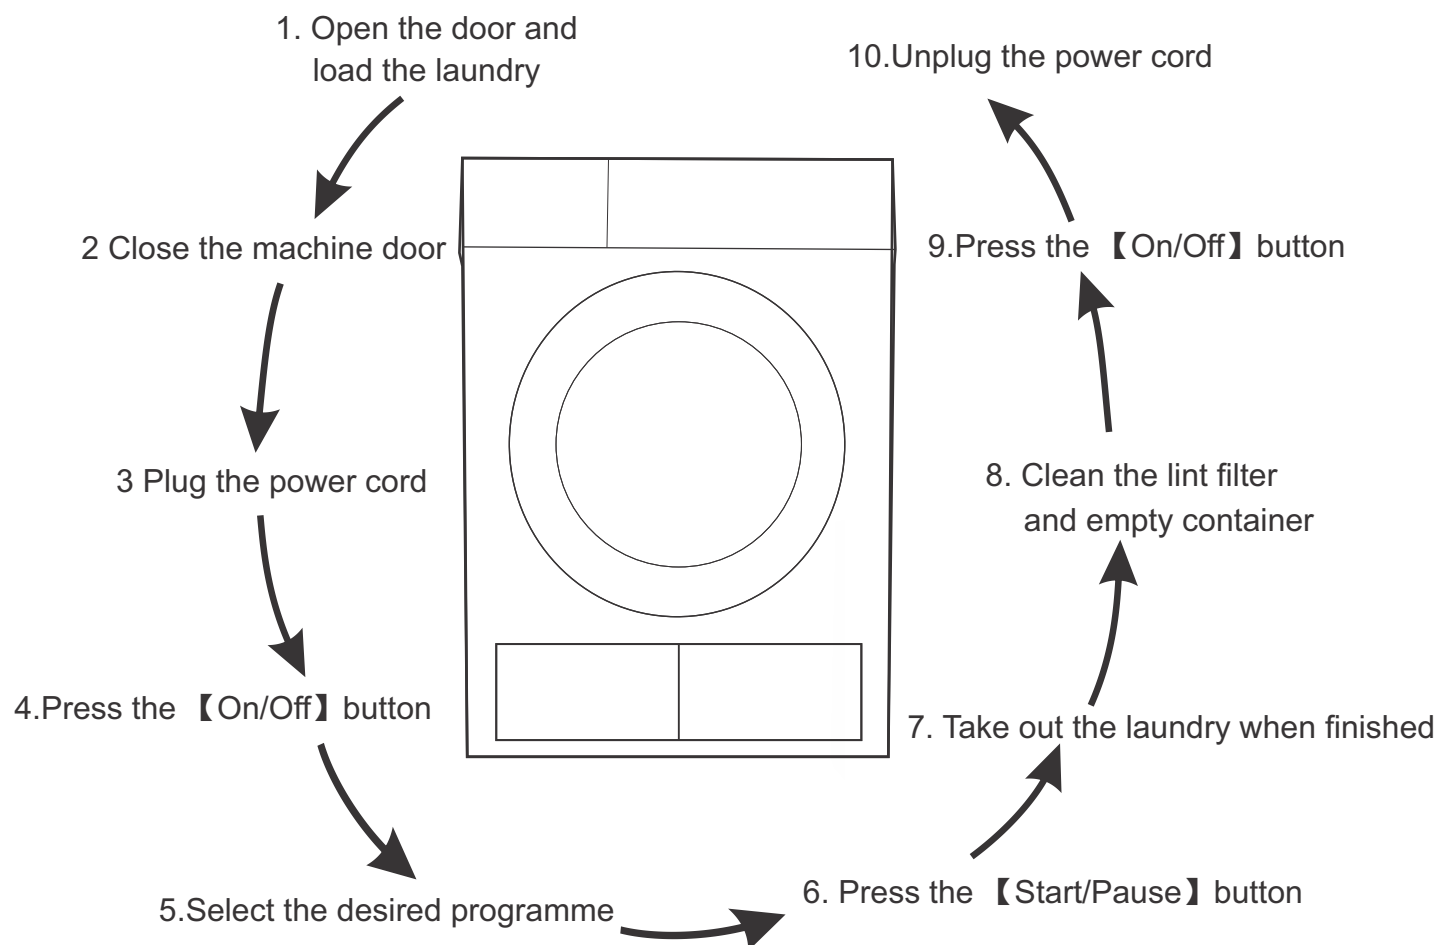

# DESCRIPTION OF CONTROLS

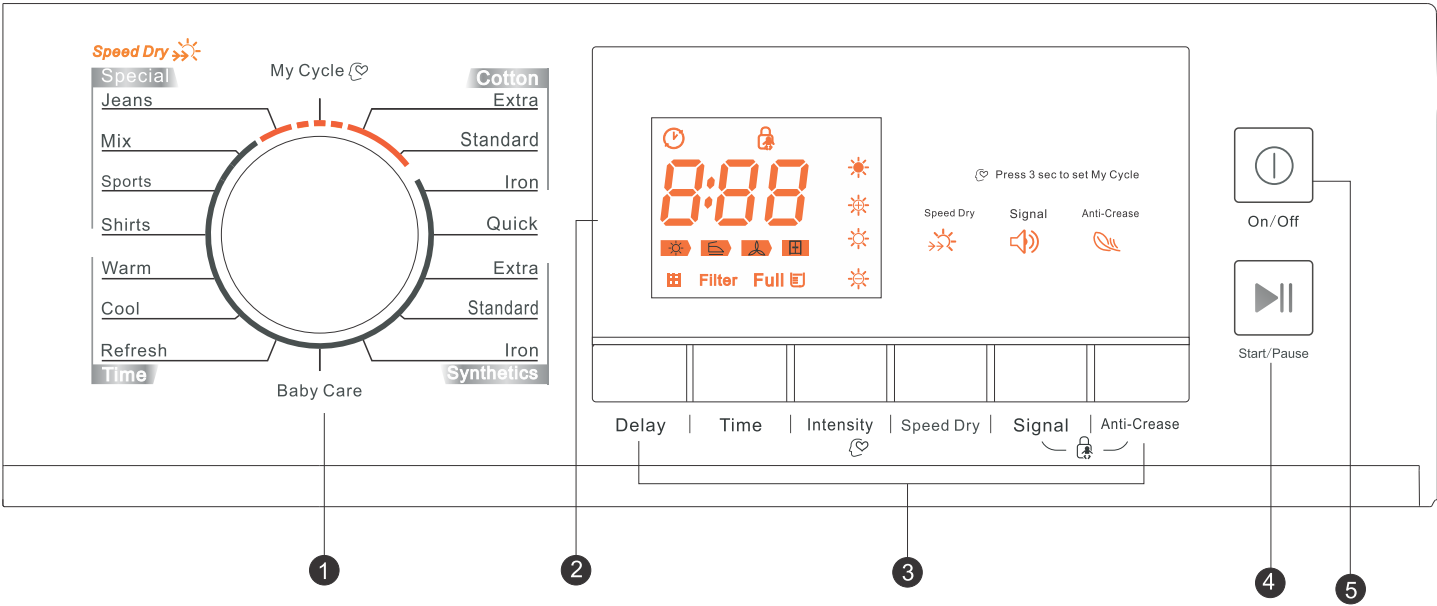

- 1. Programme Selection Knob
- 2. Display Window
- 3. Function Buttons (Delay, Time, Intensity, My Cycle, Speed Dry, Signal, Anti-Crease, Child lock)
- 4. Start / Pause Button
- 5. On / Off Button

## Display

|  |                                          |
|--|------------------------------------------|
|  | Delay start                              |
|  | Child lock                               |
|  | Remaining Time indicator / Error message |
|  | Cycle phase status                       |
|  | Clean filters (warning)                  |
|  | Empty water container (warning)          |
|  | Dryness level (four grades)              |
|  | Speed dry indicator                      |
|  | Signal indicator                         |
|  | Anti-crease mode                         |

# PROGRAMME TABLE

| Programme  |                                                                     | Weight (max) | Application / Properties                                                                                                                                                             | Delay | Time |
|------------|---------------------------------------------------------------------|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------|------|
| Cotton     | For cottons and coloureds made of cotton or linen.                  |              |                                                                                                                                                                                      |       |      |
|            | Extra                                                               | 7.0kg        | To dry cotton pieces of clothing. Drying level: extra dry.                                                                                                                           | Y     | N    |
|            | Standard                                                            |              | To dry cotton pieces of clothing. Drying level: cupboard dry.                                                                                                                        |       |      |
|            | Iron                                                                |              | To dry cotton pieces of clothing. Drying level: applicable to iron.                                                                                                                  |       |      |
| Quick      | Quick                                                               | 3.0kg        | For washing which is to be dried quickly, eg, made of acrylic fibres or for individual small items. Also for subsequent drying.                                                      | Y     | N    |
| Synthetics | For non-iron washing made of synthetic and blended fabrics, cotton. |              |                                                                                                                                                                                      |       |      |
|            | Extra                                                               | 3.5kg        | To dry thick or multi-layered synthetic fabrics. Drying level: extra dry.                                                                                                            | Y     | N    |
|            | Standard                                                            |              | To dry thin synthetic fabrics which are not ironed, such as easy care shirts, table linen, baby clothes, socks.                                                                      |       |      |
|            | Iron                                                                |              | To dry thin synthetic fabrics which are also to be ironed, such as knitwear, shirts.                                                                                                 |       |      |
| Baby Care  | Baby Care                                                           | 1.0kg        | To dry the clothes of the baby.                                                                                                                                                      | Y     | N    |
| Special    | Jean                                                                | 5.0kg        | To dry jeans or leisure clothes that are spun at high speeds in the washing machine.                                                                                                 | Y     | N    |
|            | Mix                                                                 | 3.5kg        | If you can not determine what the clothing's material is, please choose Mix.                                                                                                         |       |      |
|            | Sports                                                              | 3.0kg        | To dry sportswear, thin fabrics, polyester, which are not ironed.                                                                                                                    |       |      |
|            | Shirts                                                              | 1.0kg        | For easy care clothes such as shirts and blouses with anti-crease mechanism for minimum ironing effort. Place clothes loosely in the dryer. Once dried, hang it on a clothes hanger. |       |      |
| My Cycle   | My Cycle                                                            | —            | Define and save your favourite programme.                                                                                                                                            | Y     | —    |
| Time       | Warm                                                                | —            | To warm clothes from minimum 10 min. to maximum 120 min. (in 10 min. steps).                                                                                                         | Y     | Y    |
|            | Cool                                                                | —            | To air clothes without blowing hot air from minimum 10 min. to maximum 30 min. (in 10 min. steps).                                                                                   |       |      |
|            | Refresh                                                             | 1.0kg        | To refresh the clothes that have been kept at closed environments for a long time from minimum 20 min. to maximum 150 min. (in 10 min. steps).                                       |       |      |

NOTE: 1. This product was tested in according with AS/NZS 2442.2 using programme: Extra + Cotton.

- The programs above are only recommended for using, users can choose the appropriate program according to the personal habits. Thick and multi-layered fabrics, e.g. bed linen, jeans, jackets etc, are not easy to dry, you'd better choose Jeans program and maximum drying intensity level.



# DRYING FUNCTIONS

## 1. 【Delay】

With the delay function you can delay the programme start from 0 to 24 hours. When the programme starts, the delay start time begins to count down and the  icon on the display blinks.

Steps in details:

- (1). Load your laundry and make sure the machine door is closed.
- (2). Press the **【On/Off】** button, then choose drying programme and select functions if required.
- (3). Press the **【Delay】** key.
- (4). Continue to press the **【Delay】** to select the delay time.
- (5). After the **【Start/Pause】** key is pushed, the dryer is at the run condition. The drying procedure will be automatically performed when the delay time is over.
- (6). If you push the **【Start/Pause】** button again, the delay function will be paused.
- (7). To cancel the “Delay” function, press the **【On/Off】** button.

## 2. 【Time】

When a Time programme (Warm, Cool, Refresh) is selected, the **【Time】** button can be used to adjust the drying time in 10 min. steps.

## 3. 【Intensity】

Use to adjust the dryness level of the laundry. The level has four grades     .

The drying time increases 3 minutes in every grade.

- (1). The intensity function can be activated only before the programme start.
- (2). Press the **【Intensity】** button repeatedly to select the drying level.
- (3). **【Intensity】** function can be selected on all programmes, except the **【Cotton Iron】** , **【Quick】** , **【Synthetic Iron】** , **【Baby Care】** , **【Warm】** , **【Cool】** and **【Refresh】** programmes.

## 4. 【My Cycle】

Use to define and save your favorite programme which is used frequently.

- (1). Turn the programme selector to the desired programme and select drying functions.
  - (2). Press and hold the **【Intensity】** button for 3 seconds to save the desired programme.
  - (3). Turn the programme selector to the **【My Cycle】** position, then press the **【Start/Pause】** button .
- To change the **【My Cycle】** settings, repeat steps (1) and (2).



# DRYING FUNCTIONS

## 5. 【Speed Dry】

Use this function to reduce the drying time when a Speed Dry programme is selected.

## 6. 【Signal】

Use to turn the buzzer on or off. Default setting of the buzzer is on. Press it to turn it off if needed.

When the buzzer is on:

- (1) The dryer will give the leading sound when press the extra function buttons.
- (2) Rotating the programme selection knob or pressing function buttons when the drying is running, the dryer will remind the operator it is an invalid choose.
- (3) When the drying programme is end, the buzzer will sound to remind the user.

## 7. 【Anti-Crease】

At the end of the drying cycle, the anti-crease operation time is 30 minutes (default ) or 120 minutes (selected).

The 【Anti-Crease】 light shall illuminate when the anti-crease function is selected. This function prevents the laundry from creases. The laundry can be removed during the anti-crease phase. All programmes have this function except 【Warm】 , 【Cool】 , 【Refresh】 and 【Baby Care】 .

## 8. 【Child Lock】

The Child Lock option is used to stop the settings from being changed once a program has been started. It does not affect the 【On/Off】 button.

To select this function press the 【Anti-Crease】 and 【Signal】 buttons together for 3 seconds till lock icon  on display illuminates. Repeat this process to deactivate the child lock.



# OPERATION INSTRUCTION

## Select the Programme

1. Press the **【On/Off】** key. When the LED display screen brightens up, rotate the programme knob to select the desired programme.
2. Select the **【Delay】** , **【Time】** , **【Intensity】** , **【 Speed dry】** , **【Signal】** or **【Anti-Crease】** functions for additional option.
3. Press the **【Start/Pause】** button.

## Programme Start

The drum will keep rotating after the programme starts, the state light in the display area will flash in sequence, the remaining time displayed will change automatically.

## Programme End

1. The drum will stop running after the programme ends, the display will show " 0:00 ", the last cycle phase status light will flash. The dryer will start **【Anti-crease】** process if user doesn't remove the load in 1 minute (refer to page 12). Press **【On/Off】** button to cut off power and pull the plug out.
2. Deal with the problem according to "Troubleshooting Guide" if there is an unexpected stop during the drying procedure or the dryer shows warning information (refer to page 16).




# CLEANING & MAINTENANCE

- Always disconnect the clothes dryer from the mains power source before performing any maintenance or cleaning of the appliance.
- For optimal performance, regular maintenance and cleaning is highly recommended.
- Regular maintenance will extend the service life of the clothes dryer.

## Empty the Water Container

1. Hold and pull out the water container with two hands.
2. Tilt the water container, pour out the condensed water and put the tank back to its place.

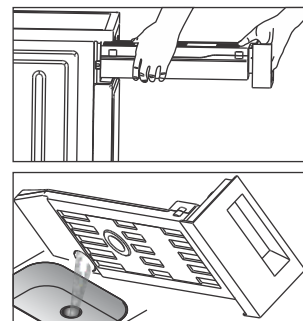


### WARNING:

- Empty the water container after each use. The programme will be paused and the “” icon will flash if the water container is full during the drying process. After the container is emptied, the dryer can be restarted by pressing **【Start/Pause】** button.
- Do not drink the condensed water.
- Do not use the dryer without the water container.

## Clean the Lint Filter

Leave the dryer to cool down.

1. Open the machine door.
2. Take out the lint filter, pull upward to take it out.
3. Clean the lint filter: wipe off the scrap threads accumulated on the lint filter with your hand or rinse with water and dry thoroughly.
4. Reinstall the lint filter.

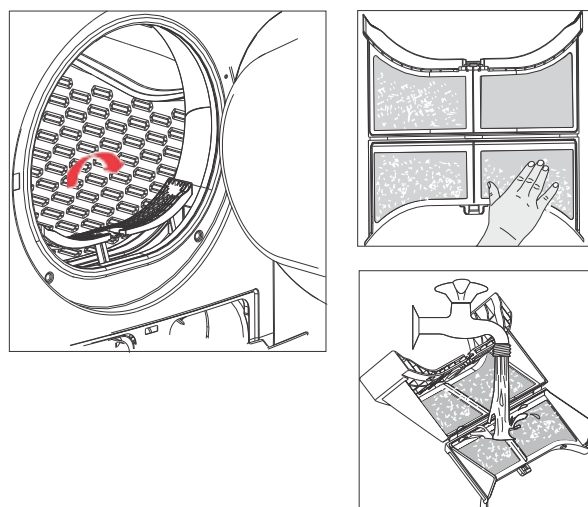

### NOTE!

1. The lint filter accumulated on the filter will block the air circulation, which will cause the extension of drying time and consumption; therefore, the scrap thread filter shall be cleaned after each use.
2. Do disconnect the power cord before cleaning!
3. Do not operate the dryer without the lint filter!
4. Clean the lint filter after each use to prevent lint accumulation inside the dryer.



# CLEANING & MAINTENANCE

## Wash Air Condenser





- Leave the dryer to cool down.
- Residual water may escape, place an absorbent cloth under the maintenance flap.
  1. Unlock the maintenance flap.
  2. Completely open maintenance flap.
  3. Screw both locking levers towards each other.
  4. Pull out the air condenser.
  5. Clean the air condenser completely, drain thoroughly.
  6. Clean the seals.
  7. Re-insert the air condenser.
  8. Unscrew both locking levers.
  9. Close the maintenance flap until it locks into position.

Please clean the air condenser approx. once every 3 months if use frequently.

Do not damage the air condenser!

### WARNING!


1. Clean with water only. Do not use hard/sharp-edged objects! Do not operate the dryer without the air condenser!
2. During drying, water may collect between the window and the seal, this does not affect the function of your dryer!

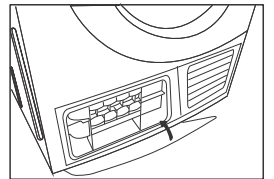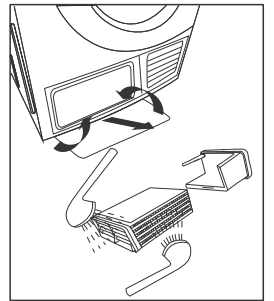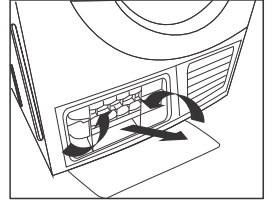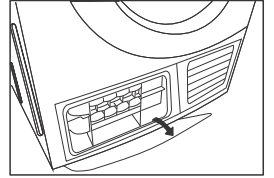

## Cleaning the Outer Surface and Inner Drum

To clean the cabinet and inner drum, use a damp cloth and wipe dry.

NOTE: Cleansers such as soap powder, abrasive cleaning power, alkali cleansers, chemical cloth, thinners, alcohol, acid petroleum products and hot water should not be used to clean the dryer as they may damage the painted cover and plastics.

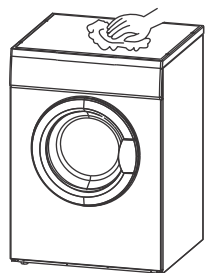

# TROUBLESHOOTING GUIDE

If the clothes dryer does not perform as expected, malfunctions, or an alarm is sounding, please check the following list of possible solutions.

If a solution cannot be found or the problem persists, please contact Midea service (refer to page 17). Do not, under any circumstance, dismantle the appliance yourself.

| Problem / Error                                                                                                                                     | Possible Cause / Solution                                                                                                                                                                                                                                                                                                      |
|-----------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> <li>Display does not light up</li> </ul>                                                                         | <ul style="list-style-type: none"> <li>Plug is not firmly in socket or power not turned on.</li> <li>Fuse may be blown. Check the power point with another appliance.</li> <li>Check if a programme has been selected.</li> </ul>                                                                                              |
| <ul style="list-style-type: none"> <li>"  " is flashing</li> </ul> | <ul style="list-style-type: none"> <li>Water container is full, need to be emptied.</li> <li>Check hose for condensation outlet.</li> </ul>                                                                                                                                                                                    |
| <ul style="list-style-type: none"> <li>"  " is flashing</li> </ul> | <ul style="list-style-type: none"> <li>Clean lint filter.</li> <li>Clean air cooler.</li> </ul>                                                                                                                                                                                                                                |
| <ul style="list-style-type: none"> <li>Dryer does not start</li> </ul>                                                                              | <ul style="list-style-type: none"> <li>Check if the Start button has been pressed.</li> <li>The dryer door is not properly pushed in.</li> <li>Check if a programme has been selected and it is not in "Pause" mode.</li> </ul>                                                                                                |
| <ul style="list-style-type: none"> <li>Water is coming out</li> </ul>                                                                               | <ul style="list-style-type: none"> <li>Align dryer horizontally.</li> <li>Clean air condenser and door seal.</li> </ul>                                                                                                                                                                                                        |
| <ul style="list-style-type: none"> <li>Dryer is opened by itself</li> </ul>                                                                         | <ul style="list-style-type: none"> <li>Check if the dryer is overloaded.</li> <li>Press door until it "clicks" into position.</li> </ul>                                                                                                                                                                                       |
| <ul style="list-style-type: none"> <li>Humidity in the room is increasing significantly</li> </ul>                                                  | <ul style="list-style-type: none"> <li>Ventilate room adequately.</li> <li>Clean the cool grille.</li> <li>Ensure that the air condenser has been inserted.</li> </ul>                                                                                                                                                         |
| <ul style="list-style-type: none"> <li>Degree of dryness is not reached or drying time is too long</li> </ul>                                       | <ul style="list-style-type: none"> <li>Check if lint filter and air condenser is clean.</li> <li>Check if water container is full.</li> <li>Check water outlet.</li> <li>Dryer installation too restricted.</li> <li>Clean the moisture sensor.</li> <li>Use next higher drying programme or use a Timer programme.</li> </ul> |
| <ul style="list-style-type: none"> <li>"  " is on</li> </ul>     | <ul style="list-style-type: none"> <li>Water tank is full, empty the container.</li> <li>Water pump failure or water level sensor failure. Call Midea Customer Care if the problem persists.</li> </ul>                                                                                                                        |
| <ul style="list-style-type: none"> <li>"E30"</li> </ul>                                                                                             | <ul style="list-style-type: none"> <li>Heater failure. Call Midea Customer Care if the problem persists.</li> </ul>                                                                                                                                                                                                            |
| <ul style="list-style-type: none"> <li>"E32"</li> </ul>                                                                                             | <ul style="list-style-type: none"> <li>Humidity sensor failure. Call Midea Customer Care if the problem persists.</li> </ul>                                                                                                                                                                                                   |
| <ul style="list-style-type: none"> <li>"E33"</li> </ul>                                                                                             | <ul style="list-style-type: none"> <li>Temperature sensor failure. Call Midea Customer Care if the problem persists.</li> </ul>                                                                                                                                                                                                |



## REPAIRS, SERVICE & WARRANTY

It is hazardous for anyone installing, removing, repairing servicing or testing this appliance. Only an Authorised Service Person can carry out servicing or repairs to this appliance.

### If service is required

If you have a problem which persists after you have made the checks listed in the Troubleshooting Guide, please contact:

Midea Customer Care on 1300 132 371

Please refer to the enclosed warranty card or visit [www.mideaappliances.com.au](http://www.mideaappliances.com.au) for warranty information. Ensure you have the appliance model number and proof of purchase handy before calling Midea Customer Care to enquire about a warranty claim.

Complete and retain the following information for your records:

|                  |  |
|------------------|--|
| Model No.        |  |
| Serial No.       |  |
| Date of purchase |  |
| Retailer         |  |

**Please retain proof of purchase for warranty claims.**



# SPECIFICATIONS

|                                |                     |
|--------------------------------|---------------------|
| Model                          | MDC07               |
| Power supply                   | 220-240V~ 50Hz      |
| Rated power                    | 2000W               |
| Ambient temperature            | +5°C ~ +35°C        |
| Product dimensions (W x D x H) | 595 x 615 x 845(mm) |
| Rated drying capacity          | 7.0kg               |
| Net weight                     | 42kg                |

This product is subject to continuous improvement, specifications are subject to change without prior notice.

## NOTE:

1. The rated capacity is the maximum capacity, make sure that the dry clothes which are loaded to the appliance do not exceed the rated capacity each time.
2. Do not install the tumble dryer in a room when there is a risk of frost occurring. At temperature around freezing point the tumble dryer may not be able to operate properly.
3. There is a risk of damage if the condensed water is allowed to freeze in the pump, hoses and / or condensed water container.



