 


-FORBES

WET & DRY BOLD
USER GUIDE

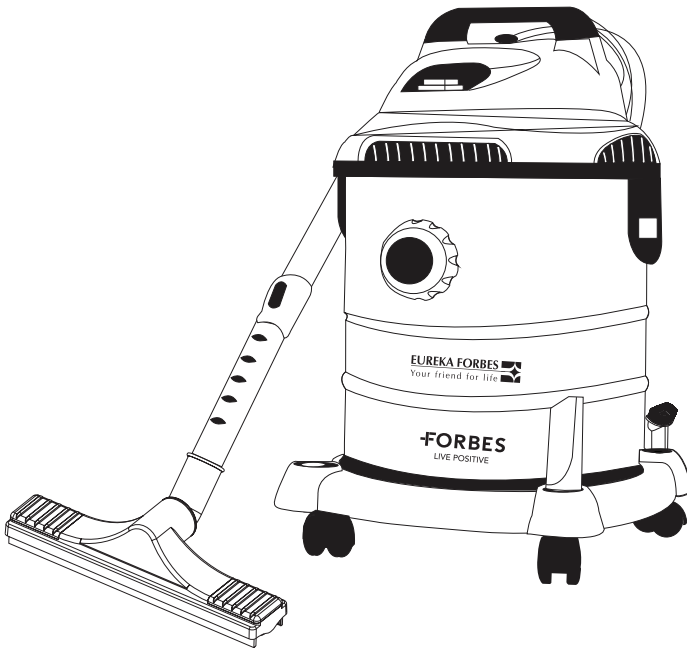

*As per Market Pulse study 2017-18.

Thank you for purchasing a Forbes Wet & Dry Bold Vacuum Cleaner. Forbes has been a pioneer and trendsetter in Cleaning Solutions, and all our expertise and research has gone into the superior design of this high-tech home cleaning system.

Your Forbes Wet & Dry Bold Vacuum Cleaner is built with high performance features, and we back it with our exclusive one year warranty. Consumer is the center of our business, so should you ever have a problem, you will receive fast, considerate assistance in quick time.

Forbes' mission to build a sustainable relationship with customers continues through quality homecare products like the Wet & Dry Bold Vacuum Cleaner.

Thanks again from all of us.

- Team Eureka Forbes





TABLE OF CONTENTS

EUREKA FORBES 
Your friend for life 


Know Your Product & Specifications	6
Safety Instructions	7 - 9
Assembly & Operation	10 - 13
Storage	14
Maintenance	15
Troubleshooting	16
Consumer Care	17
Warranty Card	19 - 20



  KNOW YOUR PRODUCT

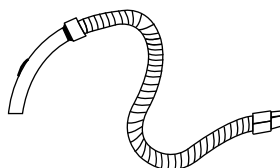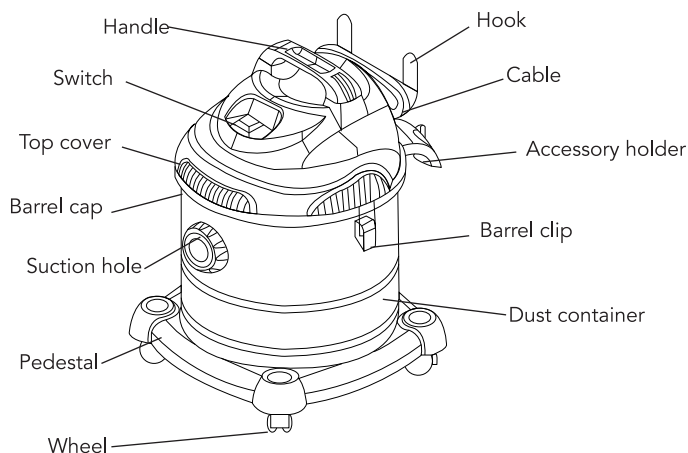

Hose assembly

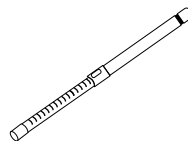 

Metal telescopic tube



HEPA filter



Crevice tool



Sofa brush



Wet floor nozzle



Dry floor nozzle



Sponge filter

Choose suitable accessories for different occasions

SPECIFICATIONS

Power	: 1400 W
Voltage	: 220 V - 50 Hz
Weight	: 7.5 kg
Suction Pressure*	: 200 cm of WC (20 KPA)
Large capacity for Water & Dust	: 20 Litres
Dimensions (L x B x H) in cm	: 35 x 35 x 52
Air Flow	: 32 Litres / second
Noise Level	: <83 dB

*At Mean Sea level.

Colour of the product and accessories shown on the carton may vary from the actual product.



Basic Precautions

When using an electrical appliance, basic precaution should always be followed, including the following:

1. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised, to ensure that they do not play with the appliance.
4. The company has built this product according to the state of the art and valid safety regulations, Despite the above, hazards for persons and assets can emanate from this cleaner if it is used in an improper manner or not in accordance with its intended use, or if the safety instructions are ignored.
5. The product is not explosion protected. Never use it in the presence of explosive dust, fluids or vapors.
6. The product may only be connected when the electrical data of the power supply coincide.
7. Extension cables and power distributors (e.g. outlet strips) must be suitable for outdoor use.
8. Do not operate or leave the product in the rain.
9. Minimum safety distance between the product and water: 1.5 m.
10. Only operate the product if no persons are in water.
11. Never operate the product if either the electrical cable, or the housing is defective.
12. Do not carry or pull the product by its electrical cable.
13. Route all cables such that damage is excluded and nobody can trip over them.
14. Never open the unit housing or its attendant components unless this is explicitly required in the operating instructions.
15. Never carry out technical modifications to the unit.

1. Characteristics

 
- a) Special accessory holder that can hold varied accessories very well
- b) Special rear blowing device
- c) Special rear cable keeping device
- d) Special easy release and locking system between barrel and head
- e) Special rear detachable air-outlet shutter, making it easy for you to change the air outlet filter, preventing secondary pollution
- f) Fresh stylish appearance




SAFETY INSTRUCTIONS

2. Safety Instructions


- (1) Check before operation that the local power supply is the same as the specifications on the rating label.
- (2) Do not use machine in combustible and explosive places; motor spark may cause fire.

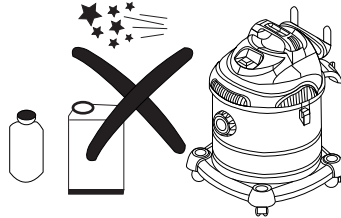

 - (3) Do not jam the air inlet hole, it may cause high temperature and damage the motor.

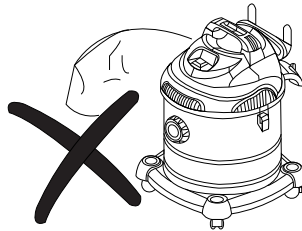

 
- (4) Do not vacuum up objects as below:

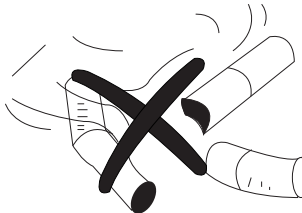

- (a) Combustible and explosive objects such as lit cigarette




 - (b) Sharp objects

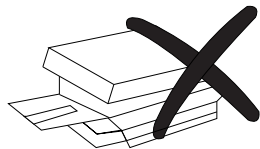


(C) Objects which easily attract the filter such as calcareousness powder, gesso and graphite powder that will block the ventilation and damage the motor.

 3. Do not overturn the machine in case water goes into the motor and damages the motor.

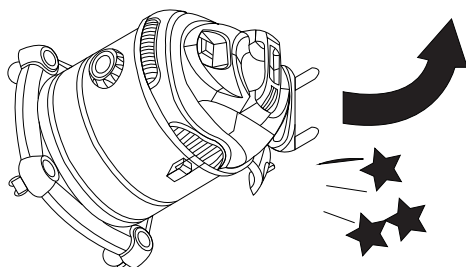

4. Turn off the machine and remove the plug each time after using or when repairing.

 5. Keep machine away from strong sunlight and high temperature place as it may cause plastic distorting.

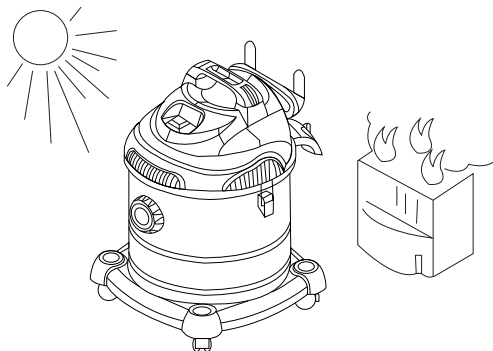

6. Do not wrest, tramp or haul hose as it may damage the product.

 
7. Do not immerse the barrel cap into the water or wash by water or water may go into the electriferous parts and cause injury to the person. The correct way is to immerse the dish cloth, then tweak it dry and wipe the dirty part gently.




ASSEMBLY & OPERATION

1) Connection


Insert the hose connector into the air inlet mouth as shown in the picture, and ensure that the connector is tightly fastened.

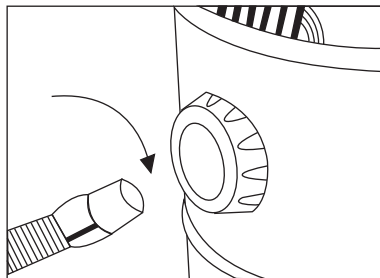

 Revolve to left as shown in the picture below till you can pull the hose from the machine.

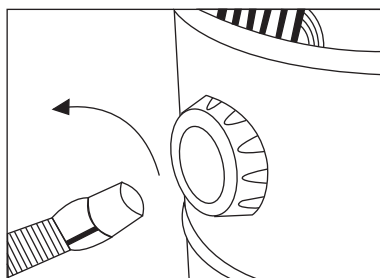

 
Connect all the accessories as shown in the picture.

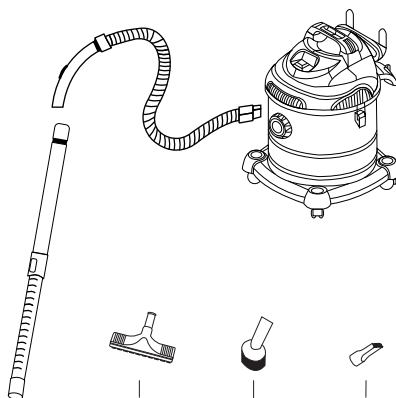


2) How to clean dry dust?

Use cartridge filter.

 Apply light pressure to the corresponding position of the bottom basket as shown below.

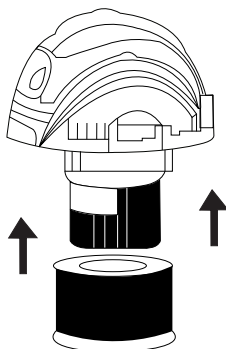

 3) How to clean liquid spills?

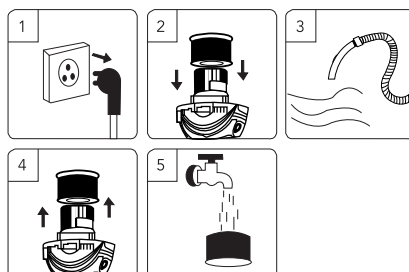


1. Ensure that the power cord is disconnected from the power supply. (Figure 1)
2. Position the machine on the side, carefully insert the filter sponge in the bottom cover to ensure that the entire bottom part is covered. (Figure 2)
3. When the water level reaches the maximum capacity, the safety valve will automatically start, then the suction will stop. Then turn off the switch, finally pour out the barrel of water. (Figure 3)
4. After each pouring, take off the sponge filter and twist dry with hand, then insert again as figure 2 shows to ensure the best water vacuum effect. (Figure 4)
5. Wash the filter sponge after passing through the sewage: Clean with soap water or cleaning fluid, twist and dry before re-use. (Figure 5)




ASSEMBLY & OPERATION

4) Blowing function

 
When you need to use the blowing function, open the shutter, insert the hose, revolve the hose till it is fastened with the suction hole as below pictures indicate.

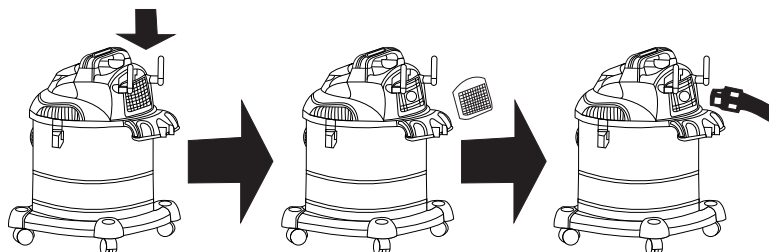

 5) Adjust the airflow by pushing the sliding block up and down

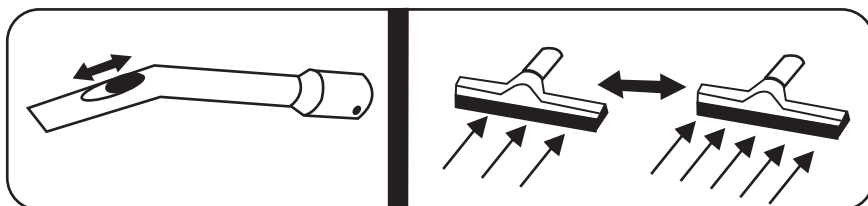

 
6) Operation method for switch

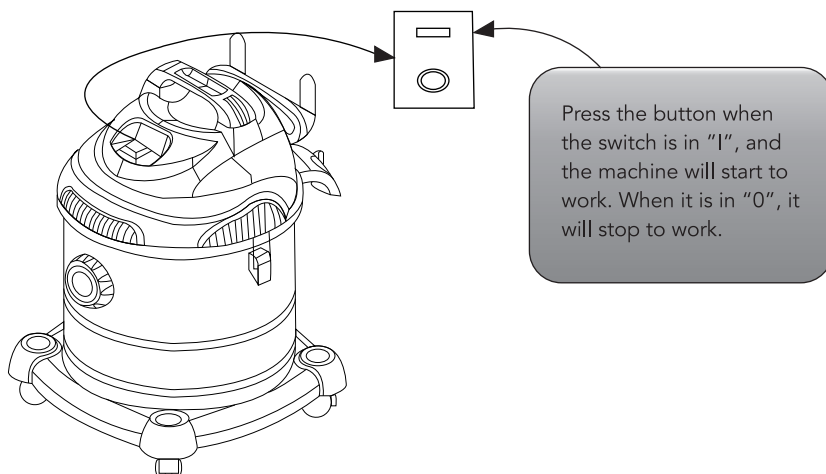


Press the button when the switch is in "I", and the machine will start to work. When it is in "O", it will stop to work.



 
7) Take out/assemble the head method

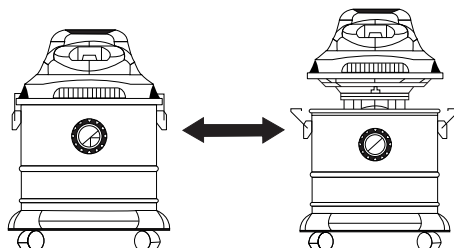

 When you have to take out the head from the machine, pull the barrel clip to the suitable place, then take the head out.

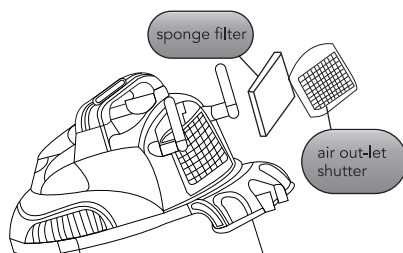

 8) Change the air outlet sponge

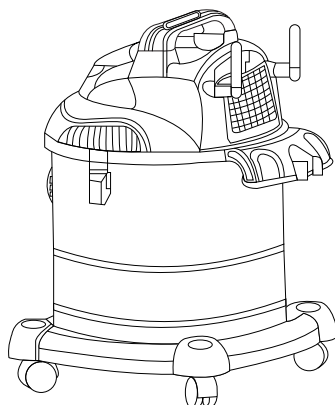


When machine is used for a long time, it is necessary for you to change the air outlet sponge filter, preventing secondary pollution.




STORAGE

 1) Cable keeping method

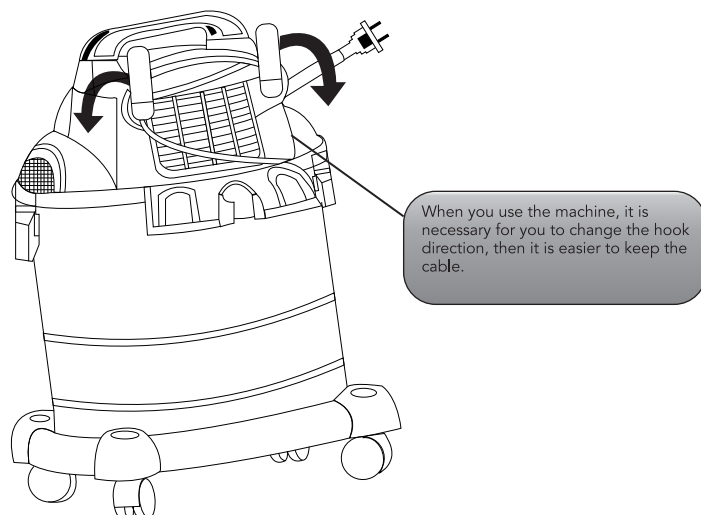

 2) Storage of cable and accessories

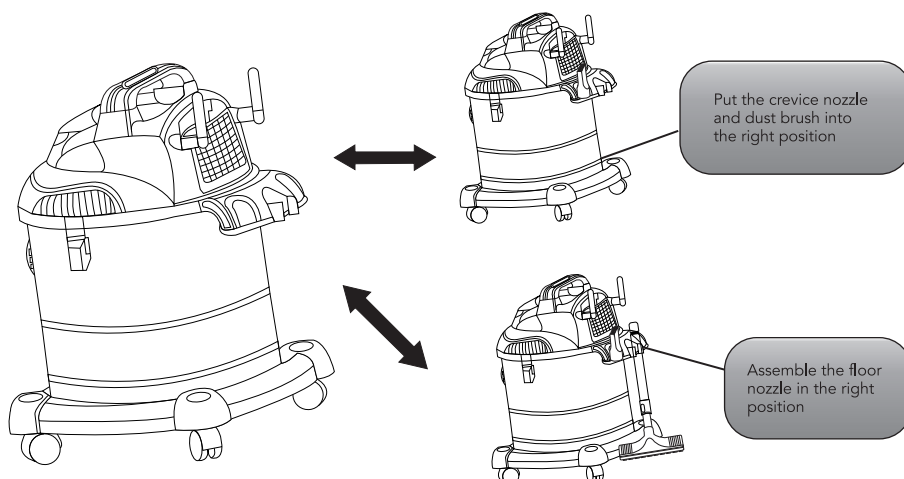


Maintenance

1. Clean the barrel, filter and related accessories and check for holes that may leak vacuum.
After each use, wash and dry filter if necessary. Avoid using the wet filter anytime.
2. Check if the plug is damage-free and keep it in a suitable place.
3. Check for objects that jam the air inlet mouth after sucking. If any, please clean.
4. Use the machine gently, do not manhandle.
5. Keep the appliance in a dry environment.
6. The filter should be washed by clean and warm water when covered with dust. If necessary, use litmusless scour to wash, but avoid the corrosive scour. It is not advisable to immerse the entire head in water to clean.
7. Do not keep machine running for a long time. Breaks after 2 hours of running is advisable, or life of machine will be affected.
8. Suction will be weak after a long break of using machine owing to a dirty filter. In order to avoid low suction, please wash and clean filter frequently.
9. Discontinue usage and send the machine for repair if the machine experiences abnormal shaking, noise or a burning smell.

Maintenance of barrel and filter

 1) Barrel cleaning

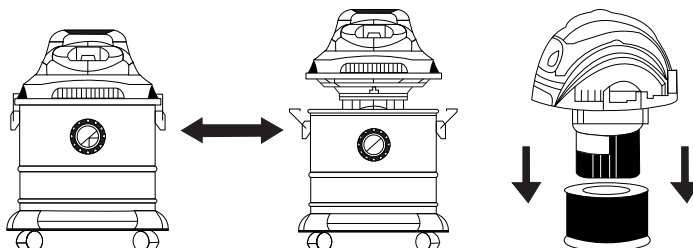


- a) Unfasten the barrel clip, lift the head up. (as the above picture)
- b) Take off the cartridge filter, clean the dust away from the dust barrel.
- c) Install the filter back to the barrel and place the head.

2) Cartridge filter cleaning

The filter should be washed with clean and warm water when covered with dust. If necessary, make use of the litmusless scour to wash.

 - a) Take off the filter
- b) Wash
- c) Dry

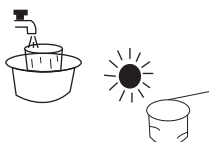

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The Vacuum Cleaner Fails to Start	Power cord is disconnected	Check if the electric power cable is connected to your wall socket correctly.
	Vacuum is not switched ON	Check that the vacuum is turned on. To turn on the vacuum press the ON/OFF switch to the "ON" "I" position.
	Electrical fault	Contact Eureka Forbes Customer Service.
The Vacuum Cleaner does not Vacuum Efficiently	Vacuum tank full	Empty the Vacuum tank.
	Dirty / Clogged / Full filter	Clean all filters as described in Maintenance of your Vacuum. (Empty or replace filter bags if applicable to your vacuum model)
	The Vacuum Safety Float valvet is activated due to the tank being full of a liquid.	Empty the Vacuum tank.
	Check that the vacuum hose, floor tools, 2 piece extension wand are not blocked.	Ensure that the vacuum hose is not blocked by removing the hose assembly and inserting a broom handle through the hose to clear any obstructions. Do not use excessive force to clear obstructions.
	Vacuum motor head is not fitted correctly.	Re-fit the vacuum motor head checking that it fits well onto the vacuum tank and secure it in place with tank retention clips.
Substantial Increase in Motor Revolutions and Decrease in Suction	Vacuum hose is blocked.	Ensure that the vacuum hose is not blocked by removing the hose assembly and inserting a broom handle through the hose to clear any obstructions. Do not use excessive force to clear obstructions.
	The vacuum Safety Float valve cuts off the suction. A. This can happen when the Vacuum tank is full of liquid. B. The vacuum has tipped over.	A. Turn off the vacuum and empty the Vacuum tank. B. Upright the vacuum and turn it off for approx. 3-5 seconds.





If your Forbes product should require service or to claim under our Limited One-Year Guarantee, please contact us as follows:

Website:

www.eurekaforbes.com

Email:

customercare@eurekaforbes.com

Toll-free Telephone:

 
18602 661177

Write to us:

Eureka Forbes Limited
B1/B2, 701, 7th Floor,
Marathon Innova Marathon NextGen,
Off Ganpatrao Kadam Marg, Lower
Parel, Mumbai - 400 013, India.

Spares are available for purchase.

To purchase, visit:
www.eurekaforbes.com

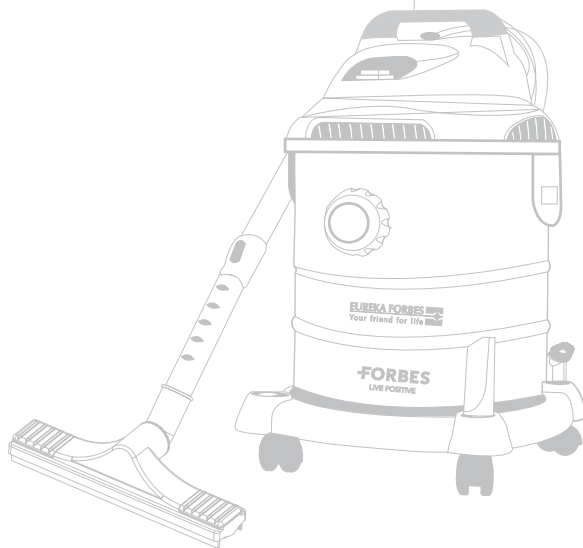



WARRANTY CARD

1 WARRANTY
YEAR

To be retained by the customer.

No.:

Unit / Serial No. (M/C): _____

Customer's Name and Address: _____

Phone (Residence): _____ (Office): _____

Invoice No.: _____

Date of Purchase: _____

Dealer's Stamp & Signature:

EUREKA FORBES 
Your friend for life

WARRANTY CARD

1 WARRANTY
YEAR

JUST FILL IN THE WARRANTY CARD AND MAIL IT TO US WITHIN 7 DAYS FROM
THE DATE OF PURCHASE.

Date of Purchase:

(Please help us to understand you better. Just fill in the details or tick the appropriate boxes,
wherever provided. Thank you.)

My Name: _____

My Age (Yrs): 18-25 | 25-30 | 30+ **My Occupation:** _____

My approx. monthly household income (Rs.) Above 4,000 | Above 8,000 | Above 15,000
I own the following household appliances (please specify brand/s).

Air Purifier: _____ **Water Purifier:** _____ **Vacuum Cleaner:** _____

Others: _____

My Residential Address: _____

City: _____ **State:** _____ **Pin:** _____

My Tel. No. (Residence): _____ **(Office)** _____

My Signature: _____

Dealer's Stamp & Signature:



BUSINESS REPLY CARD

Postage
will be
paid by
addressee.



PERMIT NO.: 331.
Prabhadevi P.O. 19104

TO,

EUREKA FORBES LIMITED
P.O. BOX NO. 19104
PRABHADEVI P.O.
MUMBAI - 400 025

