

SHARP PARTS LIST

HOW TO ORDER REPLACEMENT PARTS
To have your order filled promptly and correctly, please furnish the following information.

1. MODEL NUMBER
2. REF. NO.
3. PART NO.
4. DESCRIPTION

MICROWAVE OVEN

MODEL R-331Y(S)

Parts marked "*" may cause undue microwave exposure.
Parts marked "▲" are used in voltage more than 250V.


CONTENTS


[1] OVEN PARTS

PARTS

[2] DOOR AND CONTROL PANEL


■ INDEX

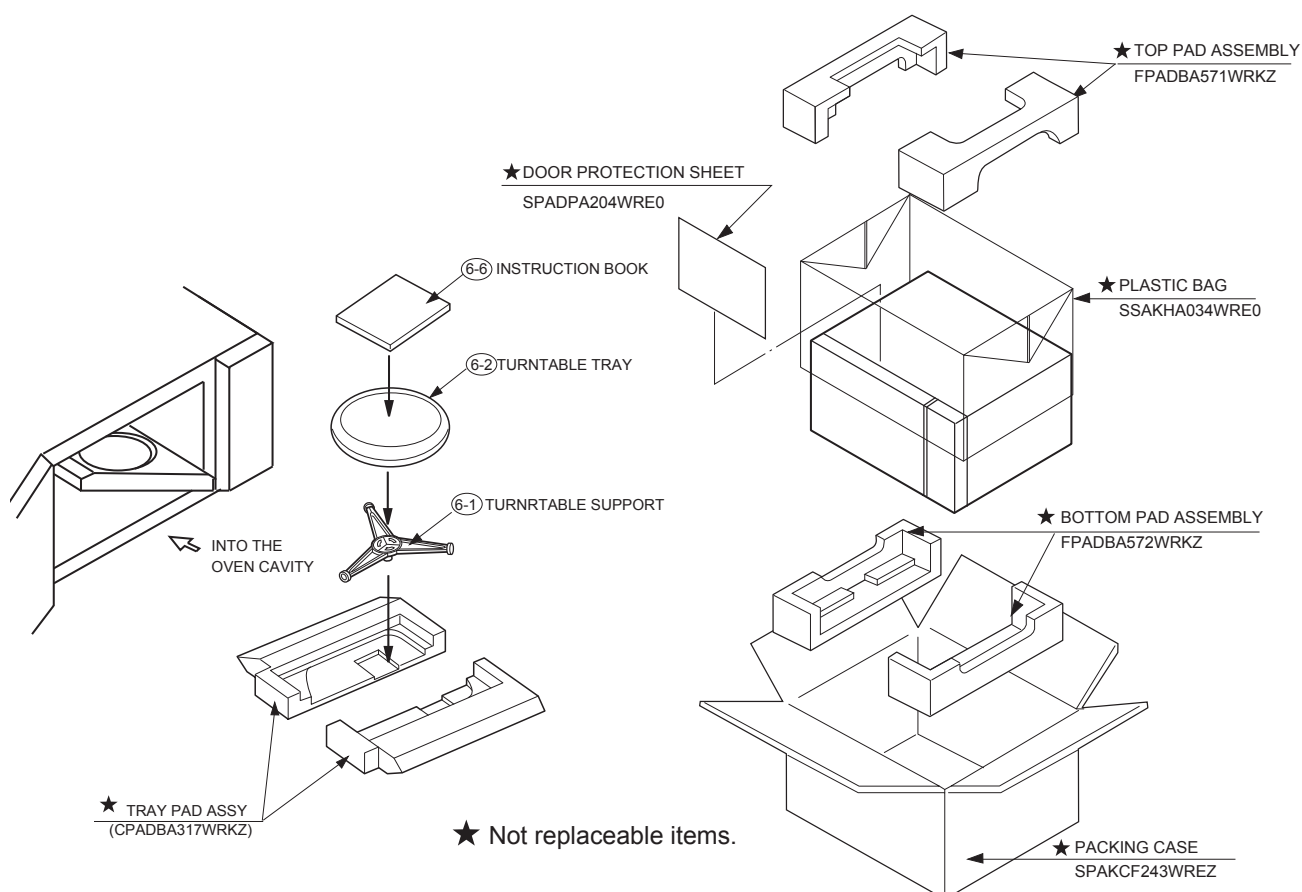

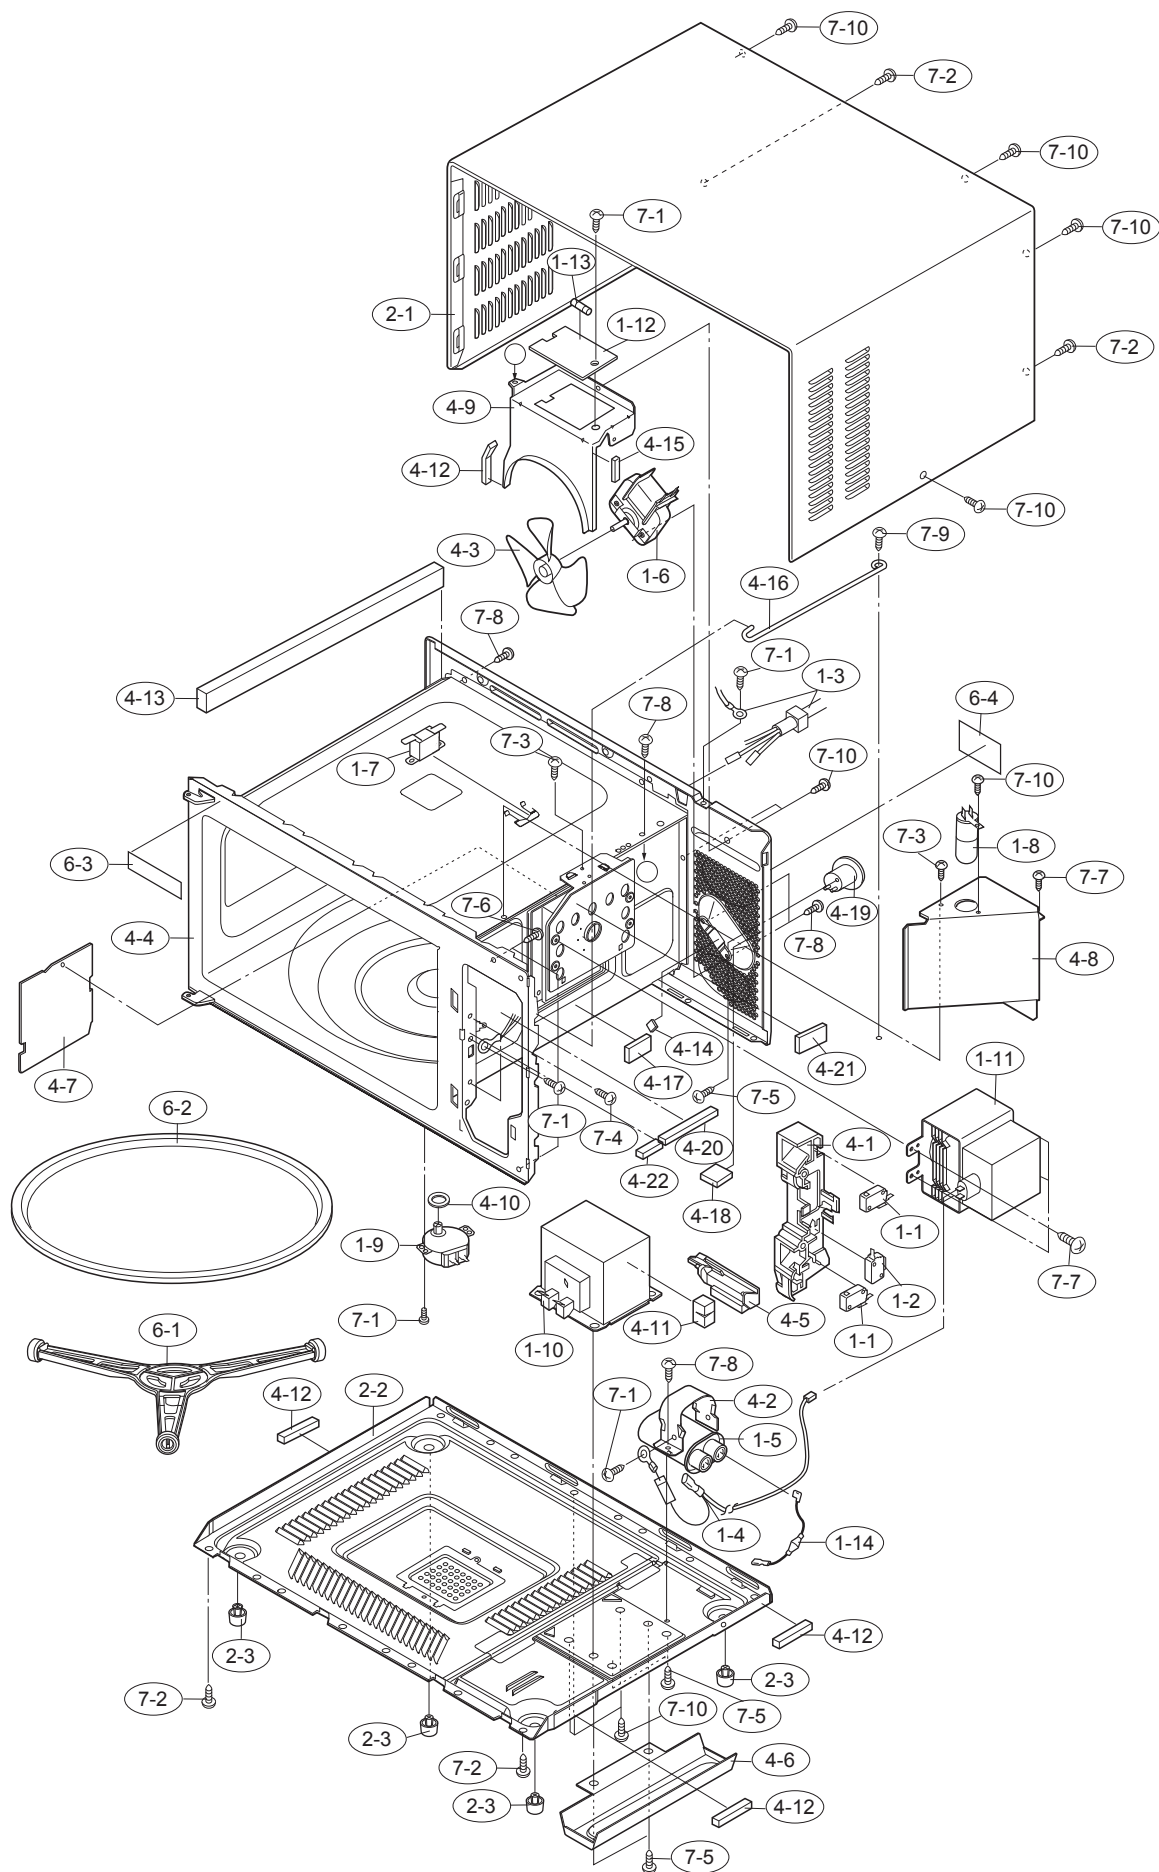
[1] OVEN PARTS

[2] DOOR AND CONTROL PANEL PARTS


DOOR PARTS

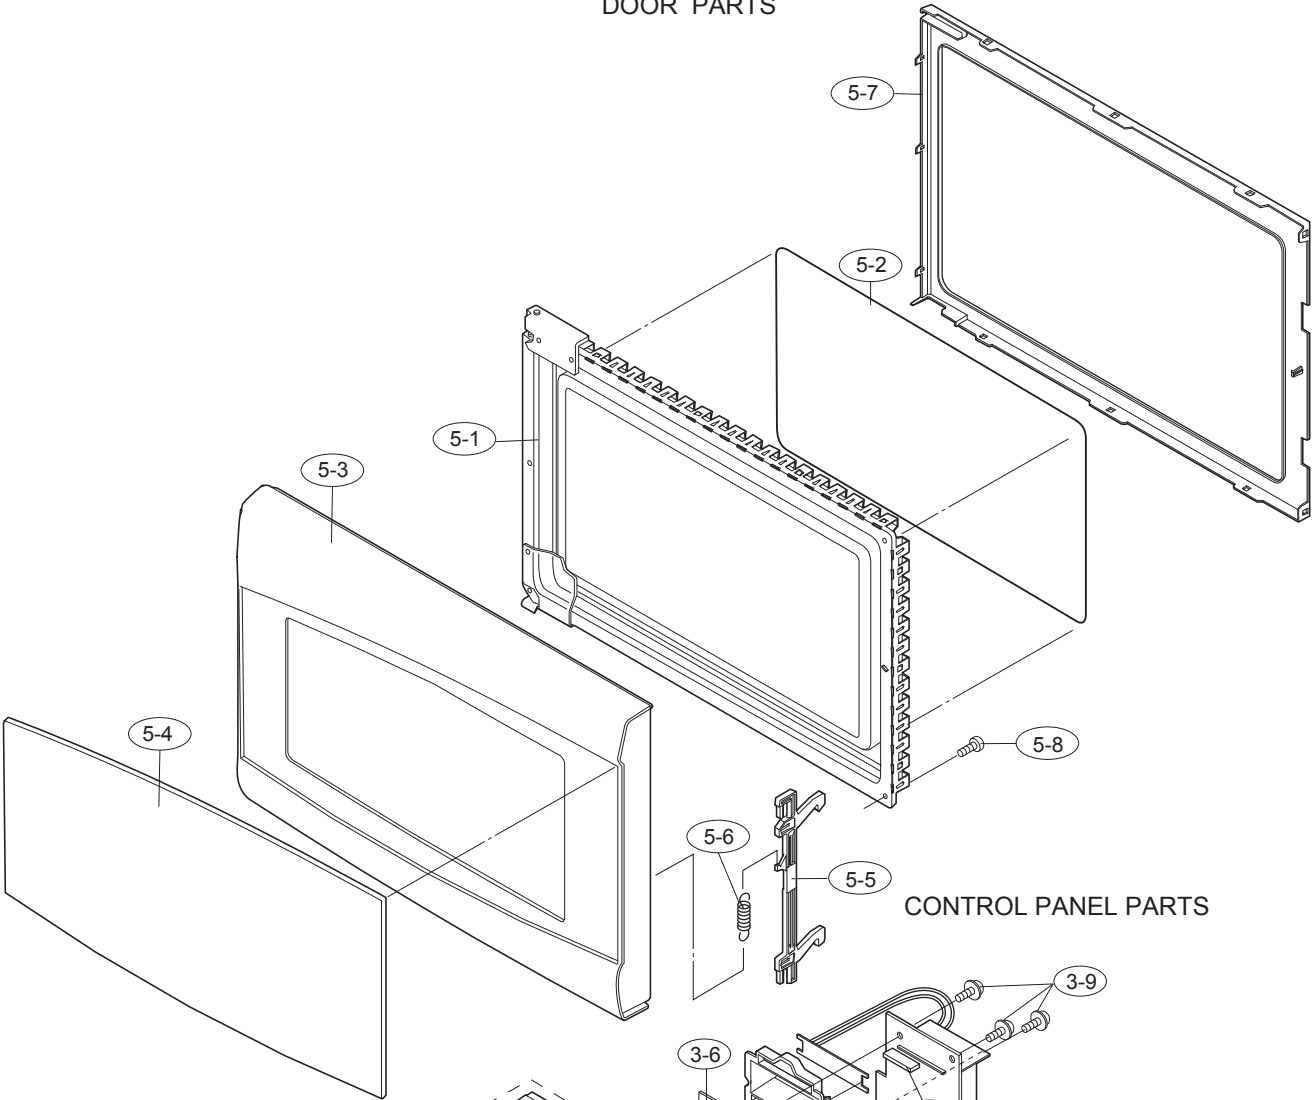

CONTROL PANEL PARTS

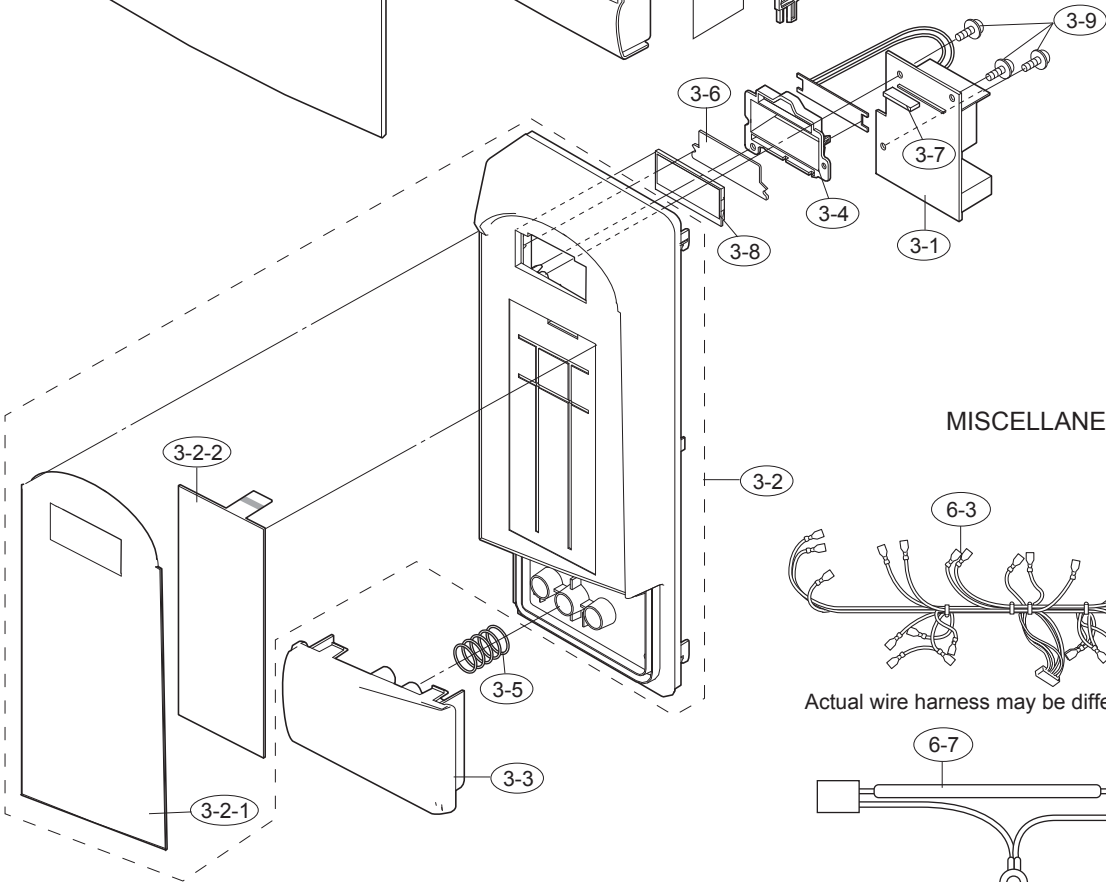

MISCELLANEOUS

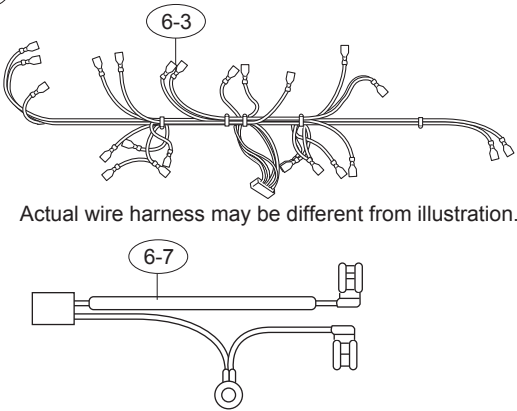

Actual wire harness may be different from illustration.