

Maxxima®

Ceiling Light Installation Guide

MCL-6081800W
www.maxximastyle.com

⚠️ WARNINGS ⚠️

- Risk of electric shock - Disconnect power at the source before installation.
- If you are unsure about the installation or the maintenance of the wall light, please consult an electrician.
- Do not make or alter any holes in the wiring enclosure or modify any electrical componentry.

⚠️ CAUTIONS ⚠️

- To insure personal safety, proper grounding of the electrical fixture is required.
- The fixture must be wired in accordance with the National Electric Code and applicable local codes or ordinances.

INSTALLATION INSTRUCTIONS

Tools Needed: Screwdriver, wire nuts, electrical tape

Wiring Instructions

1. Shut off power at the circuit breaker or fuse before installation.
2. If you are replacing an existing fixture, remove and disconnect the old fixture first.
3. Expose the power supply wires from the junction box.
4. Connect the white fixture neutral wire to the junction box white neutral wire by using a wire nut.
5. Connect the black fixture hot wire to the junction box hot wire from switch by using a wire nut.
6. Ensure that the wires are placed properly within the junction box. Apply electrical tape as needed.

Mounting Instructions

Mounting Method 1: Mounting Bracket to Junction Box

1. Using the screws provided, mount bracket as shown in Mounting Method 1 Figure 2. Secure the bracket to the Junction Box, tighten as needed.
2. Align the mounting bracket with the slots on the fixture, and twist to secure the fixture in place. See Mounting Method 1 Figure 2.


Mounting Method 2: Flush-mount to Ceiling

1. Remove the face cover from the fixture, and using the screws provided, secure the fixture to the ceiling by passing the screws through the mounting holes. See Mounting Method 2 Figure 3.
2. Snap the face cover back on, paying close attention to the lock symbol on the side, as shown in Mounting Method 2 Figure 4.


Mounting Method 3: Mounting Bracket to Ceiling

1. Using the screws provided, secure the bracket to the ceiling as shown in Mounting Method 3 Figure 1.
2. Align the mounting bracket with the slots on the fixture, and twist to secure the fixture in place. See Mounting Method 3 Figure 1.


Mounting Method 1: Mounting Bracket to Junction Box

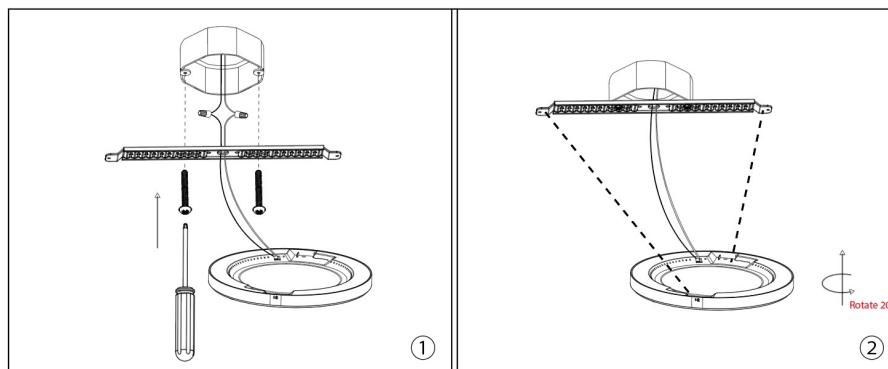

Mounting Method 2: Flush-mount to Ceiling

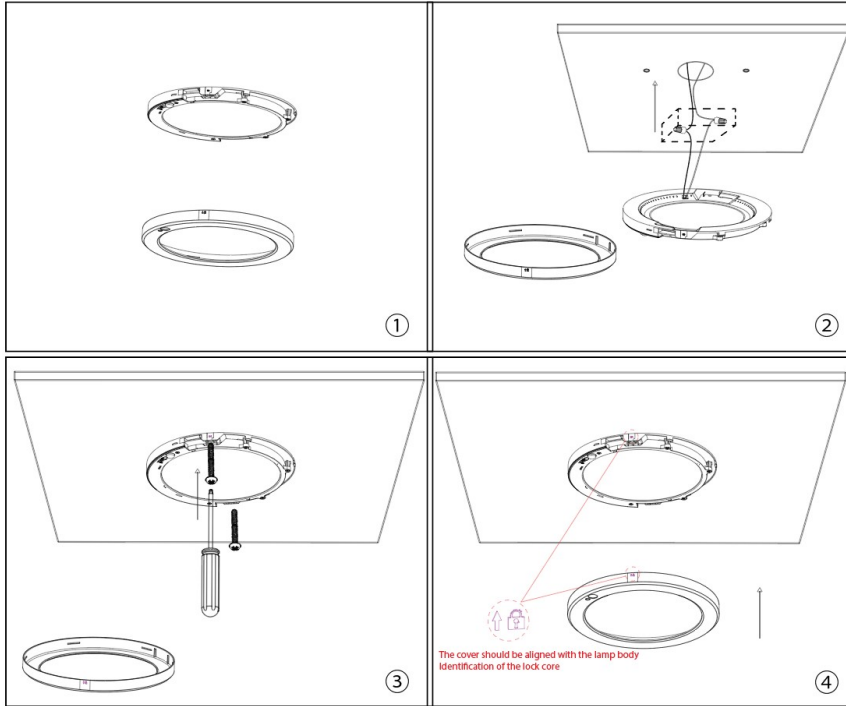


Mounting Method 3: Mounting Bracket to Ceiling

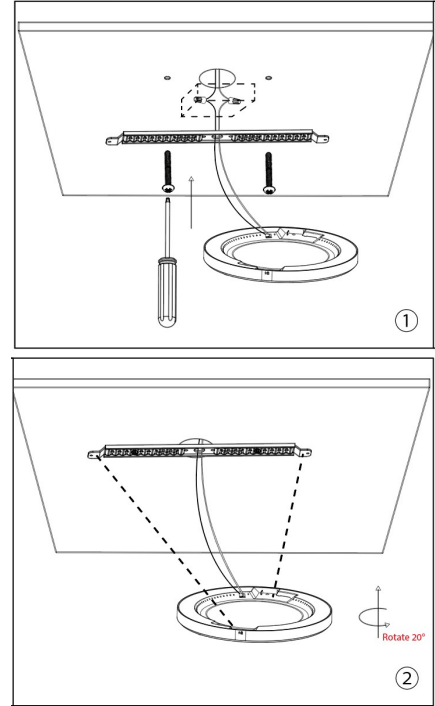

Sensor Adjustment


Access the Sensor controls by removing the face cover.

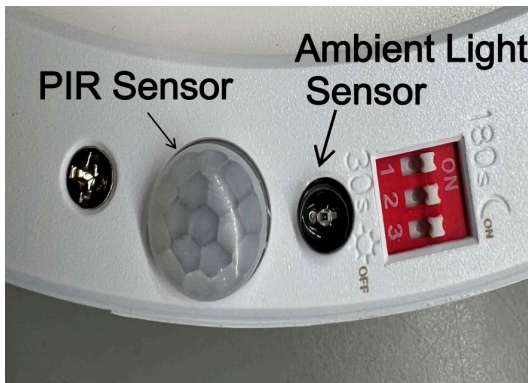

Switch 1: Duration the light stays on when active.
On Position - 180 sec, **Off Position** - 30 sec.

Switch 2: Ambient Light Sensor. In the on position the light be active only when dark. In the off position the fixture will be active in any light condition.

Switch 3: PIR Sensor, the motion sensor is disabled in the off position and enabled (active) in the on position. When the motion sensor is disabled, the light will remain on regardless of the other two settings.

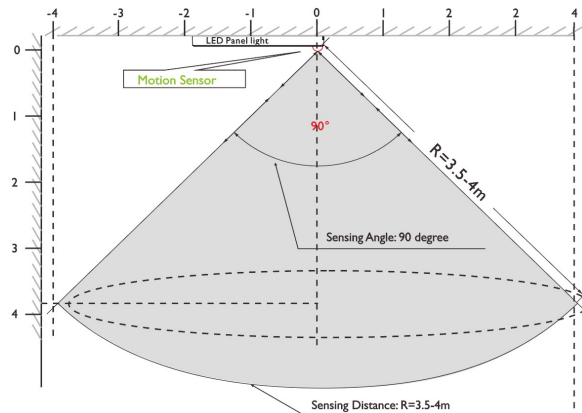

Note: Ambient Light Sensor only works when motion sensor is also on. Does not have true Dusk to Dawn capabilities (does not work without motion sensor)

3 YEAR WARRANTY

Maxxima extends a 3 year limited warranty to the original purchase that the products listed are free from defects in material and/or workmanship only. Maxxima will replace any warrantied product to the original consumer/purchaser if the product fails because of defects due to workmanship and/or materials within the limited warranty period. Limited warranty is not transferable and applies to the original installation of the Maxxima product. This offer does not constitute in any way a product guarantee and Maxxima does not hereby assume any obligation whatsoever beyond sending a free replacement product.

