

CHROME
ULTRA
CUT



MULTI-PURPOSE
for all your home
haircutting and
grooming needs

Instructions for Clipper Care and Use
Model HC221RGB

CONAIR®
HOME HAIRCUTTING KIT

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING FOR HOUSEHOLD USE ONLY KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live, even when the switch is off. To reduce the risk of death or injury by electric shock:

1. **Always unplug this appliance from electrical outlet immediately after using.**
2. Unplug this appliance before cleaning. Unplug the appliance when not in use.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not use while bathing or in a shower.
5. Do not place in, or drop into water or other liquids.
6. **Do not reach for an appliance that has fallen into water. Unplug immediately.**

WARNING — To reduce the risk of burns, electric shock, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around appliance.

2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate this appliance.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.**
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening on this appliance.
7. Do not place appliance on any surface while it is operating.
8. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades as injury may occur. Before use, make certain blades are aligned properly. (See "Care of Your Clippers.")
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Never operate the appliance with the air openings blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.
11. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
12. Avoid skin contact with moving blade.
13. Keep lubricating oil out of reach of children.
14. When using the appliance with its cord, be mindful of tangles or kinks in the cord. If the cord

 
does become tangled during use, turn the unit off and straighten cord before operating again.

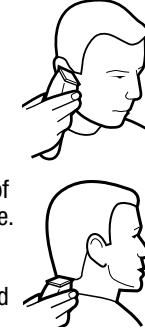 
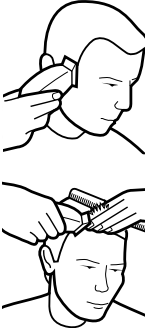 
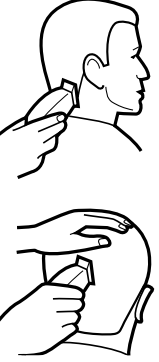 
SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

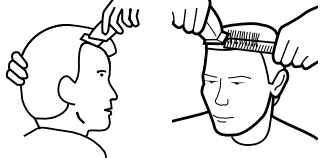 
This appliance is intended for household use. Use on Alternating Current 120V/60 hertz only. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in the outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not attempt to defeat this safety feature.

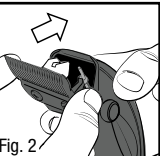 
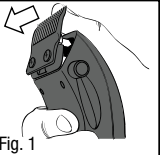 
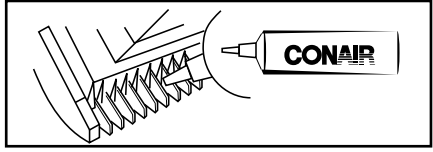 
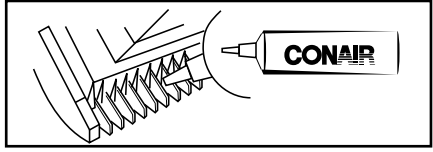 
Your new Conair® Haircut Kit has everything you need to achieve professional haircuts at home. Its powerful high torque motor clipper, with stainless steel blades for long-lasting cutting precision, features a new 5-position adjustable taper control. Whatever hair length you set the lever for, the clipper will automatically cut all hair in that section at the desired length. Also included are 10 comb attachments for different hair lengths (including left and right ear taper combs), barber scissors, a styling comb with angled teeth, a barber comb with straight teeth, a full-length barber cape, a case for easy storage, 3 styling clips to assist you in cutting longer hair styles and a neck brush. It also comes with lubricating oil, a cleaning brush and a blade guard for easy maintenance and protection of the clipper blades.

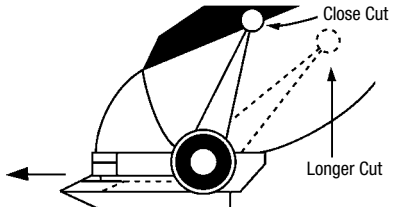 
- THE CONAIR GUIDE TO CUTTING HAIR AT HOME**
Before you start:
 1. Inspect your clipper. Make sure it's free of hair and dirt, properly oiled, and running smoothly.
 2. Place a towel around the neck of the person whose hair is being cut.
 3. Seat the person so that his or her head is at your eye level. This gives you greater visibility and control.
 4. First, comb hair until it's tangle free. Then hold clipper in a comfortable grip. Now you're ready to cut.
- MEDIUM TO LONG CUT**
To begin with, cut only a small amount of hair until you become used to the length each attachment leaves the hair. Try the longest attachment on the clipper first. If you want a shorter cut, you can then use shorter combs.
 - Short comb attachment (number 1) cuts hair to 1/8" (3mm).
 - Medium-Short comb attachment (number 2) cuts hair to 1/4" (6mm).
 - Medium-Long comb attachment (number 3) cuts hair to 3/8" (9.5mm).
 - Long comb attachment (number 4) cuts hair to 1/2" (12.5mm).
 - Long comb attachment (number 5) cuts hair to 5/8" (16mm).
 - Long comb attachment (number 6) cuts hair to 3/4" (19mm).
 - Long comb attachment (number 7) cuts hair to 7/8" (22mm).
 - Long comb attachment (number 8) cuts hair to 1" (25mm).

- Left ear comb attachment lightly tapers over left ear.
 - Right ear comb attachment lightly tapers over right ear.
- 

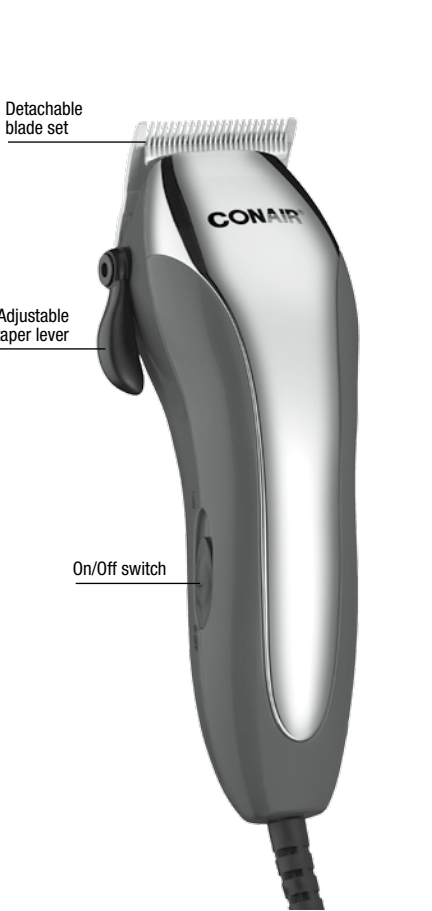 
- If you want hair to be even shorter:
A) Apply more pressure to the head with the comb attachment that is in place. This takes a little practice, of course. **OR** B) Just switch to a shorter comb attachment. Remember, it's better to leave too much hair than too little. For longer hair on top, use the barber comb and lift hair on the top of the head, cutting over the comb. Or hold the hair between the fingers and cut to desired length. Always working from the front to the back of the head, gradually cut the hair shorter by reducing the space between the comb or fingers and the head. Comb often to check for uneven strands and to get rid of trimmed hair.
- 
- OUTLINING**
Outlining requires no attachments. Comb hair into the desired style. Position the clipper between the sideburns and the ear (see illustration), making sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the clipper over, around and behind the ears. For the back of the neck and the sideburns, hold the clipper upside down (see illustration) and, holding it against the skin at the length desired, move the clipper downward.
- 

- STOP. COMB. CHECK.**
For best results, do as the professionals do: Comb hair often, and check clipping results as you comb. This way you avoid uneven sides, bangs, neckline, etc.
- SHORT CUTS TO PERFECT FLATTOPS, CREW CUTS, ETC.**
Always cut from the back of the neck to the crown, using the longest comb setting.
- Hold the comb attachment flat against the head and slowly move the clipper up through the hair. Use the same technique for the sides, cutting from the bottom to the upper side of the head.
- For the front to the crown, cut the hair against the direction in which it grows. Then even it up with the sides.
- For a flattop, use the flat comb, not the comb attachment. Just cut hair on top of the head over flat comb.
- To taper hair down to the neckline, use comb attachment #1. Comb hair and check for uneven spots. Outline sideburns and neck areas (see "Outlining").
- 

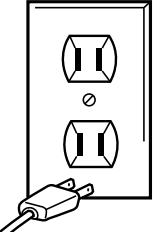 
- USER MAINTENANCE INSTRUCTIONS**
CARE OF YOUR CLIPPER'S DETACHABLE BLADE SET
Your clipper is equipped with a detachable blade set for routine maintenance, cleaning and replacement.
To remove the blade: The front of the clipper should be facing you. Push up under the blade with your thumb and the blade will pop out. (See Fig. 1)
To replace the blade: Make sure the taper control is set to the longest position and with the back of the clipper facing you, insert the bottom side (with screws) of the blade into the clipper and push down until it snaps into place. (See Fig. 2)
- 
- MAINTENANCE OF THE BLADE**
Always apply oil to the blades before, during and after use. This will ensure maximum cutting performance. Hold clipper away from your body in a downward position and apply oil on the front and sides of the cutter blade. Wipe excess oil off with a soft, dry cloth.
- 
- SPECIAL OIL**
To maintain the blades of your Conair® clipper in peak condition, oil them after every three or four haircuts. Gently place a few drops of oil on the teeth of the blades, using the special Conair oil included with your set. Turn the clipper on for a minute, then turn off. This light, natural oil was formulated specifically for the Conair® high-speed clipper. Because it is the right oil to use, it will not slow down the blades. Never use any other product; there is no substitute for Conair oil.
- 

- ADJUSTABLE TAPER LEVER**
Just like professional clippers, the Conair taper lever is positioned at your thumb. You can hold the clipper in your hand and adjust the lever at the same time... while you're clipping.
This taper lever eliminates the need for a comb attachment because it lets you gradually adjust the closeness of the cut. For the closest cut and the shortest hair, push taper lever up as far as it will go. To increase cutting length, slowly push lever down. If you push to the lowest position, it will leave hair about the same length as the short comb attachment.
Because a different cutting edge is used in each setting, the taper lever lengthens the life of your blades.
Packed-in hair can slow down any clipper. To remove hair without removing the blades, do what the professionals do: Keeping the clipper on, quickly push the taper lever back and forth from "close" to "longer" cut a few times.
- 
- Close Cut
Longer Cut

- This clipper has a detachable blade that makes cleaning easy. Just push up on the top of the blade and it will pop off easily. Remove any loose hair with the cleaning brush provided and then place blade back in position. To secure properly, line up the base of the blade with the lower back of the clipper. Push down into place until you hear a snap to know it's locked in place.
- If the clipper stops cutting, but does not stop running, you will need to check the blades. For new blades, send check or money order for \$6.50, which includes postage and handling to:
- Conair Corporation**
150 Milford Rd.
East Windsor, NJ 08520
- STORAGE**
When not in use, your clipper should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children.
Any other servicing should be performed by an authorized service representative. This appliance has no user-serviceable parts. The product is for household use.
- NOTE: Never pull on the clipper cord. Never twist or wrap the cord around the clipper. To store your clipper, lay it flat with the cord coiled up, then place in case.**



WARNING:
IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.



KEEP AWAY FROM WATER

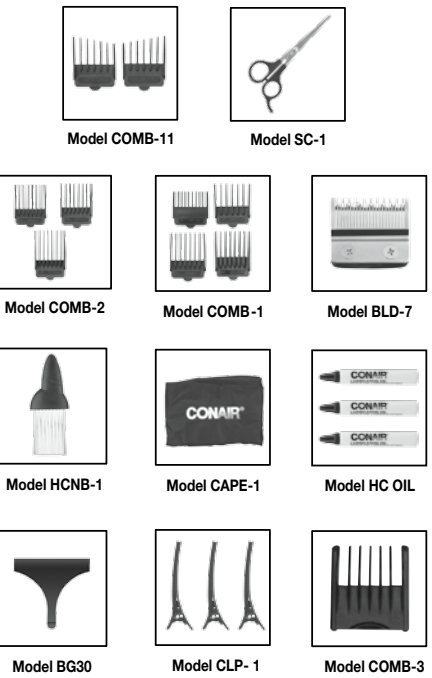 
ALWAYS UNPLUG SMALL APPLIANCES

Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically alive even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

- LIMITED FIVE-YEAR WARRANTY**
Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.
To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.
- ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.**
Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.
- IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.** Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.
- This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

- Please register this product at www.conair.com/registration**
- Service Center**
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307
©2014 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 North Glen Harbor Blvd., Glendale, AZ 85307
- 14PG007129
- IB-13146

- Once again, thanks for buying a Conair product.
- Your Conair® clipper blades are made of stainless steel. They are engineered for precise, professional results. If blades feel like they are pulling or grabbing hair, it means they are losing their sharpness and should be replaced as soon as possible.
- Comb attachments should also be replaced if they are lost or broken. It is easier to cut hair with the accuracy of a pro when the necessary tools are at your fingertips.
- Conair makes a variety of accessories for different haircut kits. If your haircut kit does not include them, you may want to consider adding them to your professional haircutting tools.
- Left and right ear comb attachments provide effortless, precise cutting around the ears. Styling clips hold hair in place when you are sectioning hair. A styling comb makes it easy to taper or cut hair at an angle. A barber cape ensures a comfortable and neat haircut and a convenient storage pouch keeps all your essentials in one place.



HAIRCUT KIT REPLACEMENT PARTS & ACCESSORIES ORDER FORM
Pricing in effect through December 31, 2015. Orders postmarked after this date will be accepted, and the customer will be notified if pricing has changed.

ITEM	PART #	PRICE	QUANTITY	AMOUNT
Clipper Blade Set for HC221	BLD-7	\$6.50		
4 Attachment Combs (1/8", 1/4", 3/8", 1/2")	COMB-1	\$5.00		
3 Attachment Combs (5/8", 3/4", 7/8")	COMB-2	\$5.00		
1" Attachment Comb	COMB-3	\$1.00		
Left/Right Ear Attachment Combs	COMB-11	\$2.00		
Neck Brush	HCNB-1	\$1.50		
Deluxe Vinyl Cape	CAPE-1	\$5.00		
Lubricating Oil (pkg of 3 tubes)	HC OIL	\$2.00		
Barber Scissors	SC-1	\$2.00		
Blade Guard	BG30	\$1.00		
Styling Clips (set of 3)	CLP-1	\$1.50		
Subtotal				
Sales Tax*				
TOTAL				

Enclose check or money order made payable to Conair. (We cannot accept cash, stamps or C.O.D. orders.) *CT, IL, AZ, and PA residents should add applicable state sales tax. Minimum order of \$10.00 or a \$2.00 handling charge will be added to order.
All prices include handling and return postage. Prices are subject to change without notice. Prices are valid only for shipments within the continental United States. **Please allow 4-6 weeks for delivery.**

To avoid delays, please print clearly.
We must have a street address, as UPS cannot deliver to a P.O. box.

NAME _____
ADDRESS _____ APT. _____
CITY _____ STATE _____ ZIP _____
TELEPHONE () _____ (We call only if we have a question about your order.)
For information on other Conair haircut kit parts call: 1-800-3-CONAIR.

Mail to:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

A diagram showing a circular saw blade at two different angles relative to a curved workpiece. The top position shows a steep angle labeled "Corte más corto" (shorter cut). The bottom position shows a shallower angle labeled "Corte más largo" (longer cut), indicated by a dashed arc representing the longer path of the cut.

MULTIUSO
para todas sus
necesidades de corte
de cabello y cuidado
personal en casa.

CONAIR®
JUEGO DE PELUQUERÍA

Diagrama de un afeitador eléctrico CONAIR. Las etiquetas indican:

- Cuchillas extraíbles
- Palanca de ajuste de longitud de corte
- Botón de encendido/apagado

- 1. Siempre desconecte el aparato inmediatamente después de usarlo.**
2. Desconecte el aparato antes de limpiarlo y después de usarlo.
3. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.
4. No lo use en el baño o la ducha.
5. No coloque el aparato ni lo deje caer al agua u otro líquido.
- 6. No trate de alcanzar el aparato después de que hubiese caído al agua; desconéctelo inmediatamente.**

**SIEMPRE DESENCHUFE
LOS APARATOS PEQUEÑOS**

Esta garantía le otorga derechos legales
específicos y usted puede tener otros derechos
que varían de un Estado a otro.

Su nuevo juego de peluquería Conair® tiene todo lo que usted necesita para lograr cortes de cabello profesionales en su casa. Incluye una cortadora de cabello equipada con un potente motor de alto torque, duraderas cuchillas de acero inoxidable, y un botón ajuste de longitud de corte con 5 posiciones, para lograr resultados precisos. Simplemente elija el largo de cabello deseado y la cortadora ajustará

- Guía 1 – Corta el cabello a 1/8" (3 mm)
- Guía 2 – Corta el cabello a 1/4" (6 mm)
- Guía 3 – Corta el cabello a 3/8" (9.5 mm)
- Guía 4 – Corta el cabello a 1/2" (12.5 mm)
- Guía 5 – Corta el cabello a 5/8" (16 mm)
- Guía 6 – Corta el cabello a 3/4" (19 mm)
- Guía 7 – Corta el cabello a 7/8" (22 mm)
- Guía 8 – Corta el cabello a 1" (25 mm)

Haga lo mismo en el otro lado y atrás de la cabeza.

Para información sobre otras piezas de repuesto y accesorios, llame al: 1-800-3-CONAIR.

Lubrique las cuchillas antes, durante y después del uso. Esto asegurará un rendimiento óptimo. Sostenga el aparato boca abajo, lejos de su cuerpo, y aplique aceite sobre los dientes y en el costado de las cuchillas. Limpie el exceso de aceite con un paño suave seco.

A technical diagram illustrating the application of CONAIR adhesive. A tube of CONAIR adhesive is shown dispensing the product into the space between a coiled spring and a metal component. The spring is part of a larger assembly, with lines indicating its connection to other parts. The CONAIR logo is prominently displayed on the tube.