

NC2

ACTIVE NOISE CANCELLATION
Quick Guide



1

Bluetooth pairing and wearing

Bluetooth pairing

Open the charging box, the left and right earbuds are automatically turned on and connected to each other.

 
Search for the Bluetooth pairing name [TOZO-NC2] in the device and select it to complete the pairing.

When use again, the earbuds will automatically reconnect to the last connected device.



wearing

1. Choose the eartips that fit your ears best.
2. Adjust the earbuds to fit snugly.



EN | JP | DE | FR | IT | ES | NL | SE

X1: Press once **X2:** Press twice

X3: Press three times

Hold: Press and hold for 2 seconds

X2 



Previous song | 前の曲 |

Vorheriges lied | Chanson Irécédente |
Canzone precedente | Canción anterior |
Vorig nummer | Föregående låt



Volume down | 音量を下げる |

Lautstärke runter | Baisser le volume |
Volume basso | Bajar volumen |
Volume verminderen | Sänk volymen

X1 



Active Noise Cancellation mode/Transparent mode | アクティブノイズキャンセルモード/透過モード |

Aktiver Geräuschunterdrückungsmodus/Transparenter Modus | Mode d'annulation active du bruit/
Mode transparent | Modalità di cancellazione attiva del rumore/Modalità trasparente | Modo de
cancelación activa de ruido/Modo transparente | Actieve ruisonderdrukkingsmodus/Transparante
modus | Aktivt brusreduceringsläge/Transparent läge

X1 



Answer | 答え |

Antworten | Réponse |
Rispondere | Responder |
Antwoorden | Svar

Hold 



Reject | 拒絶 |

Ablehnen | Rejeter |
Rifiutare | Rechazar |
Afwijzen | Avvisa

Smart touch control

X1 



Play/Pause | 再生/一時停止 |

Spielen/Pause | Jouer/Pause |
Giocare a/Pausa | Tocar/Pausa |
Toneelstuk/Pauze | Spela/Paus

X2 



Next song | 次の曲 |

Nächstes lied | Chanson prochaine |
Canzone prossima | Canción siguiente |
Volgende nummer | Nästa låt

Hold 



Volume up | 音量を上げる |

Lauter | Monter le son |
Alza il volume | Sube el volumen |
Volume omhoog | Höj volymen

X3 



Voice assistant | 音声アシスタント |

Sprachassistenten | Assistant vocal |
Assistente vocale | Asistente de voz |
Spraakassistent | Röstassistent

Hold 



Hang up | 電話を切る |

Auflegen | Raccrocher |
Appendere | Colgar |
Ophangen | Lågg på



Power on



Power off

3

Power on/off

EN

Power on :

Open the cover of the charging case, the earbuds will power on automatically.

Power off :

Put the earbuds into the charging case, close the cover, and automatically power off.

DE

Ein :

Öffnen Sie die Abdeckung des Ladekoffers, die Ohrhörer schalten sich automatisch ein.

Ausschalten :

Legen Sie die Ohrhörer in das Ladeetui, schließen Sie die Abdeckung und schalten Sie sich automatisch aus.

IT

Accensione :

Apri il coperchio della custodia di ricarica, gli auricolari si accenderanno automaticamente.

Spegni :

Inserisci gli auricolari nella custodia di ricarica, chiudi il coperchio e si spengono automaticamente.

NL

Aanzetten:

Open het deksel van de oplaadcassette, de oordopjes worden automatisch ingeschakeld.

Uitschakelen:

Plaats de oordopjes in de oplaadcassette, sluit de hoes en schakel ze automatisch uit.

JP

電源オン :

充電ボックスのカバーを開くと、イヤフォンの電源が自動的にオンになります。

電源を切る :

イヤフォンを充電ケースに入れ、カバーを閉じて、自動的に電源を切ります。

FR

Allumer :

Ouvrez le couvercle du boîtier de charge, les écouteurs s'allumeront automatiquement.

Éteindre :

Placez les écouteurs dans le boîtier de charge, fermez le couvercle et éteignez-les automatiquement.

ES

Encendido :

Abra la tapa del estuche de carga, los auriculares se encenderán automáticamente.

Apagado :

Coloque los auriculares en el estuche de carga, cierre la tapa y apáguelos automáticamente.

SE

Ström på :

 
Öppna locket på laddningsfodralet, öronsnäckorna slås på automatiskt.

Stäng av :

Sätt i hörsnäckorna i laddningsfodralet, stäng locket och stäng av automatiskt.

4


Reset

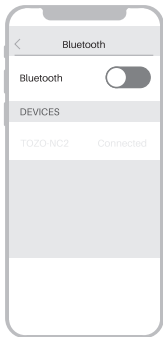

If you accidentally get only one earbud work, or fails to pair each other, please reset it:

Put earbuds into the charging case, open the lid, press and hold the case button for 15 seconds.

 NOTE: In case there is [Connection Unsuccessful] in your devices, please delete all historical records of [TOZO-NC2] and try the pairing process again.

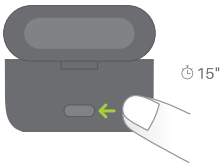

Charging

Place case with light facing up on wireless charger.
(Wireless charging pad not included)

Or charge the case via USB-C connector.
(USB-C cable included)

* . . . < 25%

* * . . 50%

* * * . > 75%

* * * * 100%



Don't put wet earbuds into the charging case,
fully dry off the earbuds
before charging.



Don't place the case vertically.

Thank you for purchasing the TOZO authentic product.
For more latest products, parts and accessories,
please visit: www.tozostore.com
For any assistance please contact Email: info@tozostore.com