 
 


IDANÄS

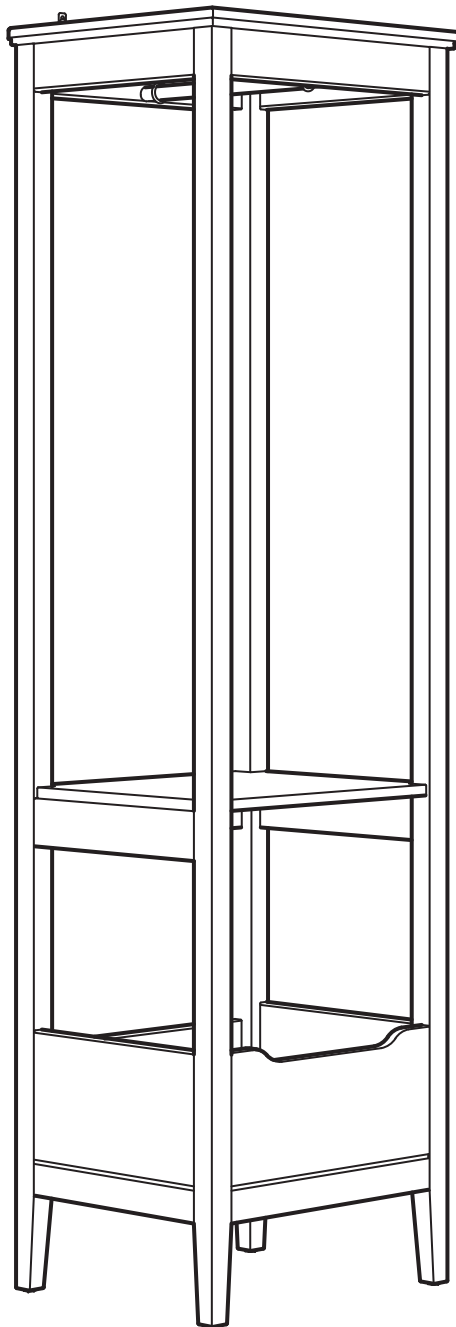

Design and Quality
IKEA of Sweden



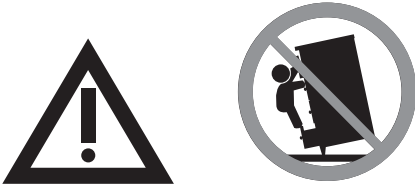

English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

אזהרה

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.

יש לקבע את הרהיט לקיר באמצעות אבזרי הקיבוע המצורפים.

על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:

 
 
 
- מקמו את הפריטים הכבדים ביותר במגירה התחתונה.
- הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.
- אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.

 
 
 
 
 









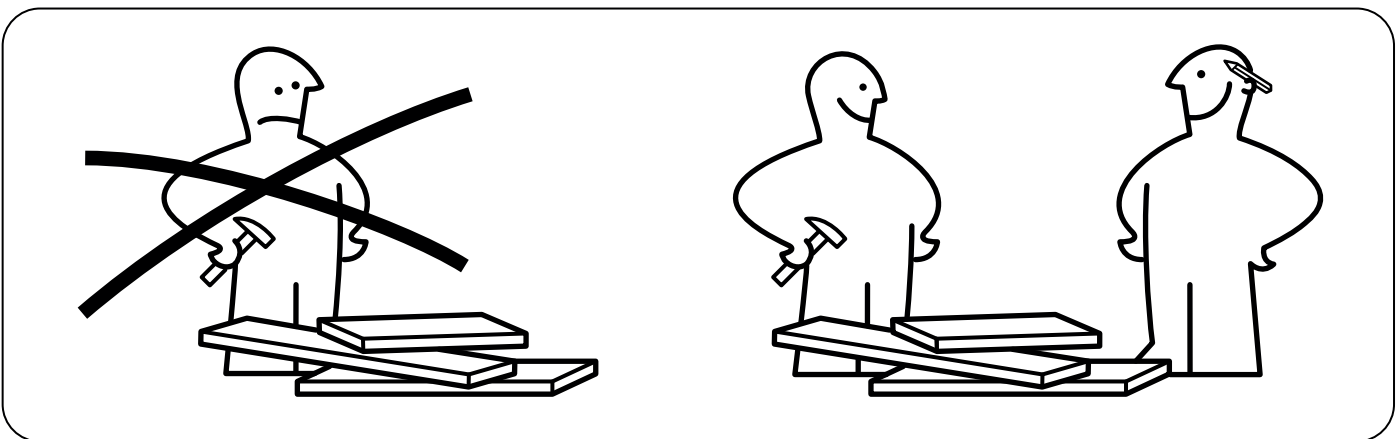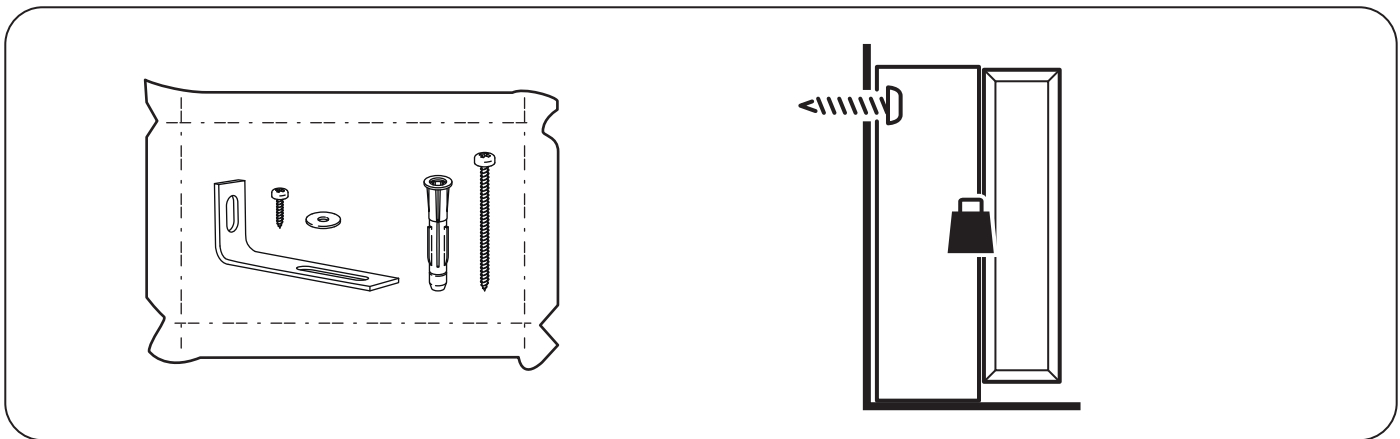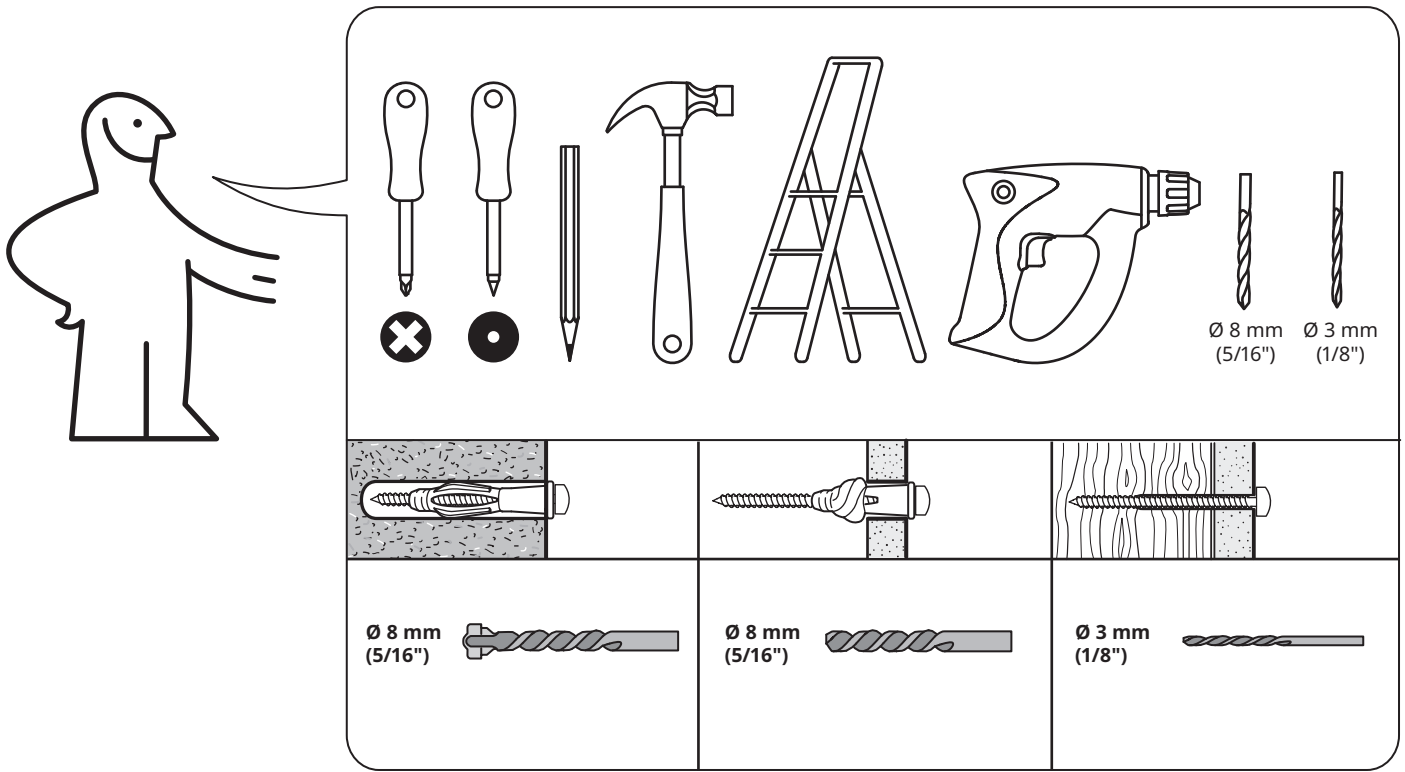

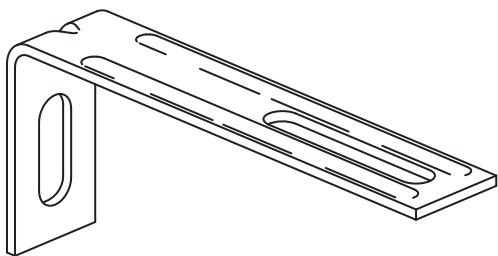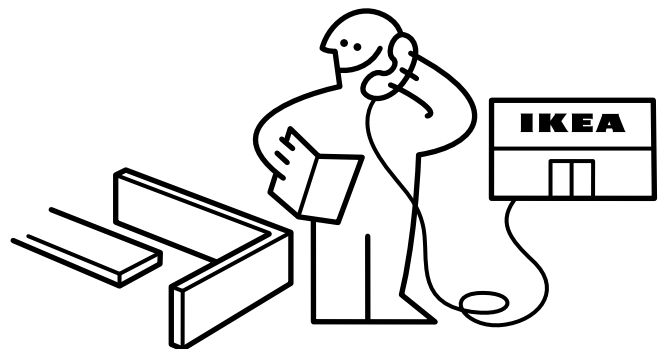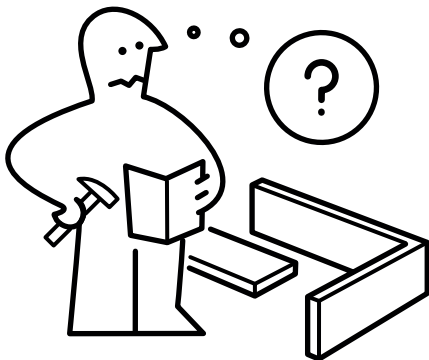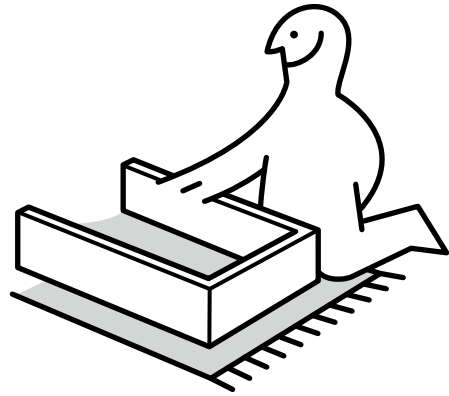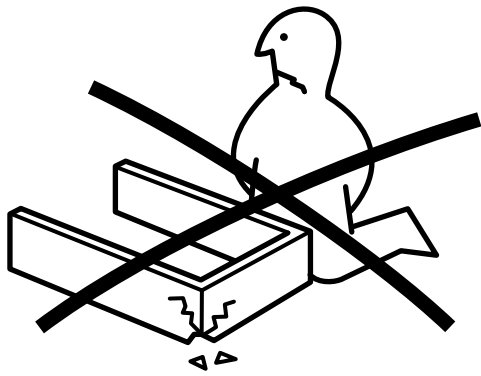

2x

 106989




109049

2x




100823

 4x



109048

 2x




121714

2x



326949

 1



100219

6x



118331
112996

14x



119253
118137

14x



 
 
101350

14x




131399
157732

4x

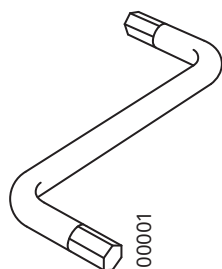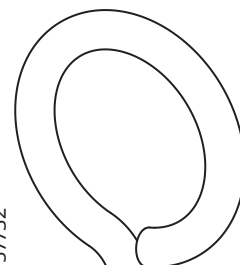


100001

 1x

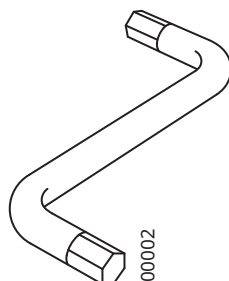


100002

 1x




104171

 8x

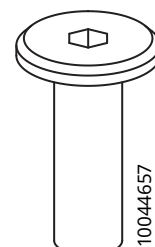


10044657

 2x



112805

 2x

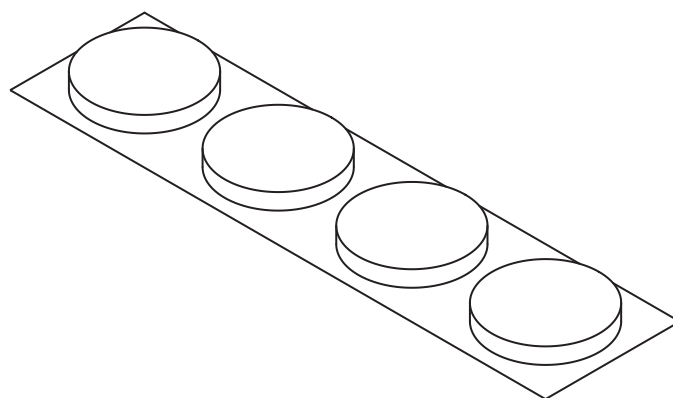




10042565
115309

1x




9

   
1

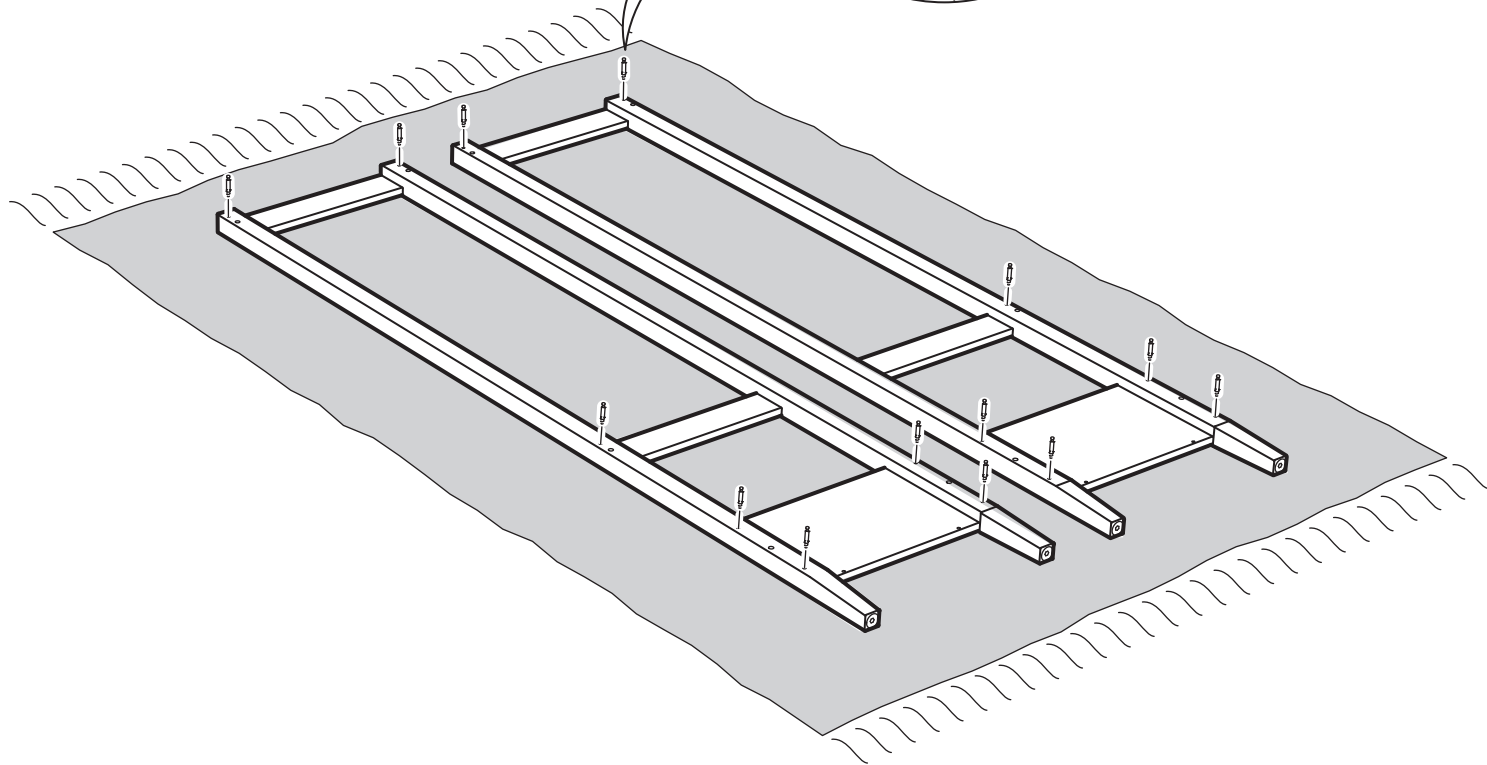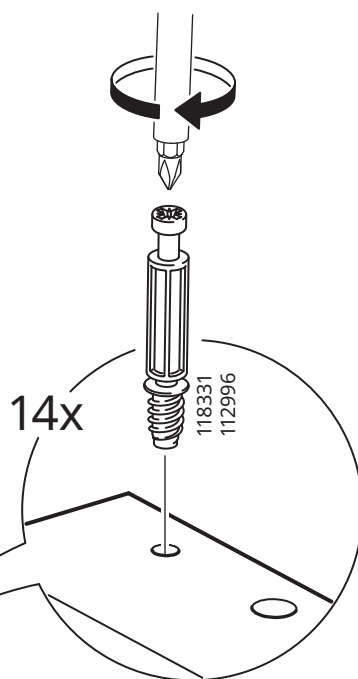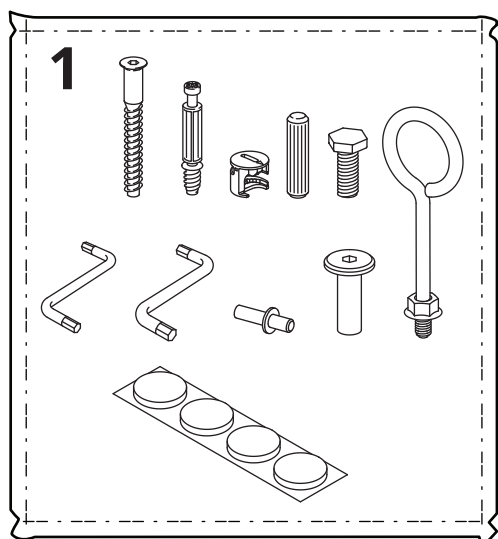


2

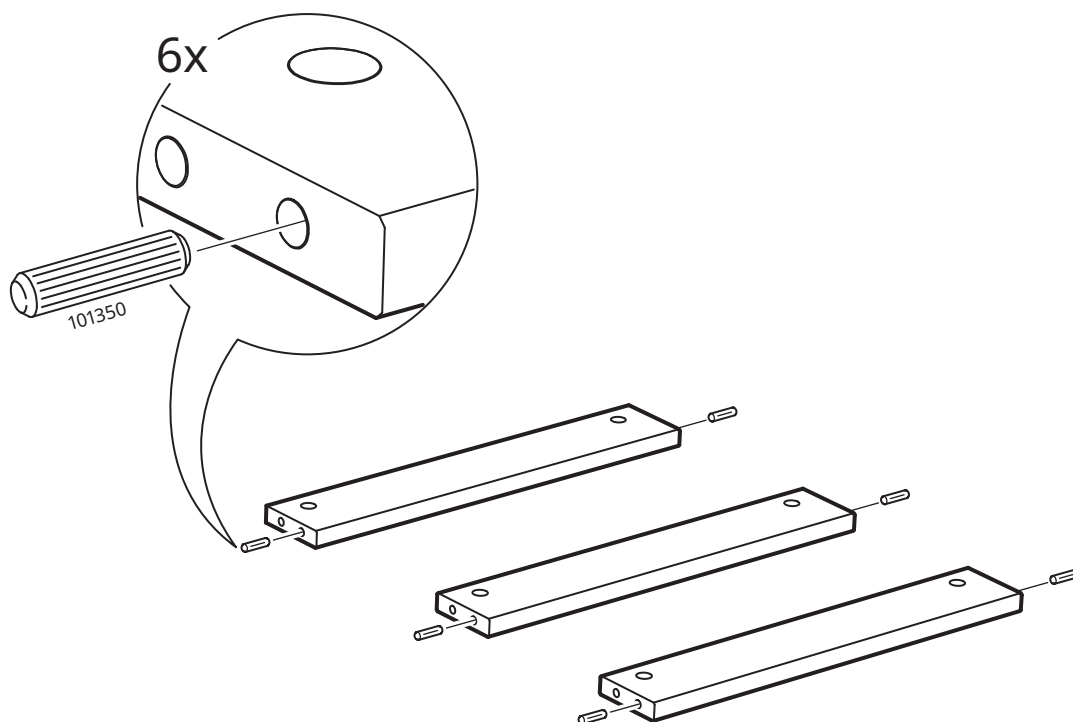 


3

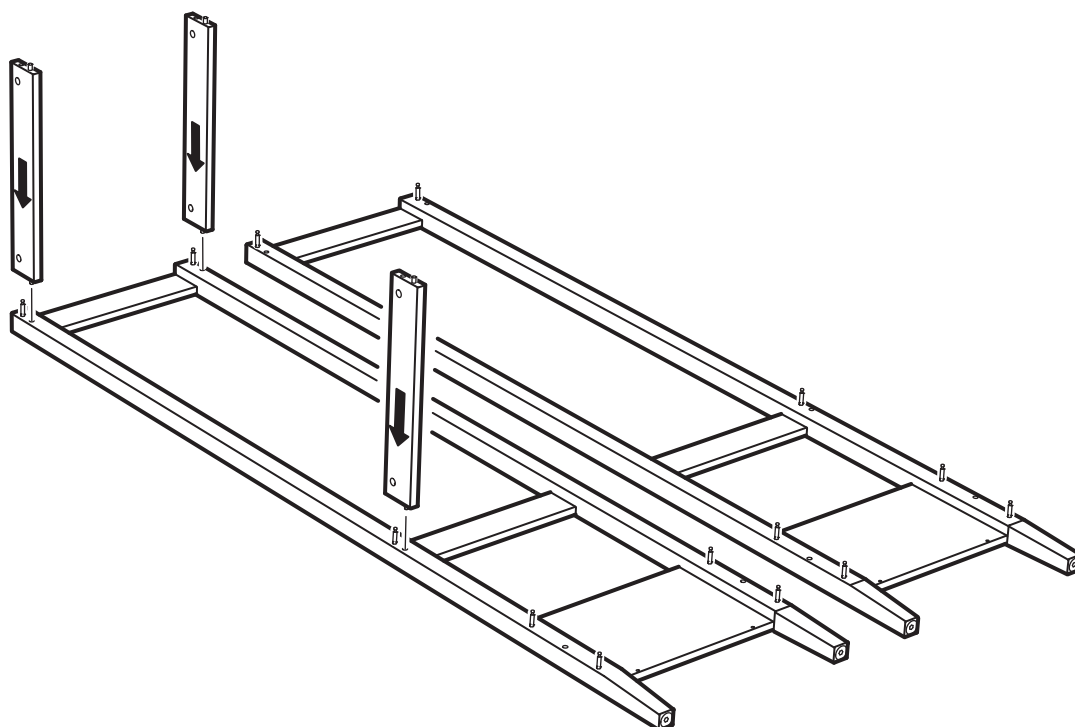 


4

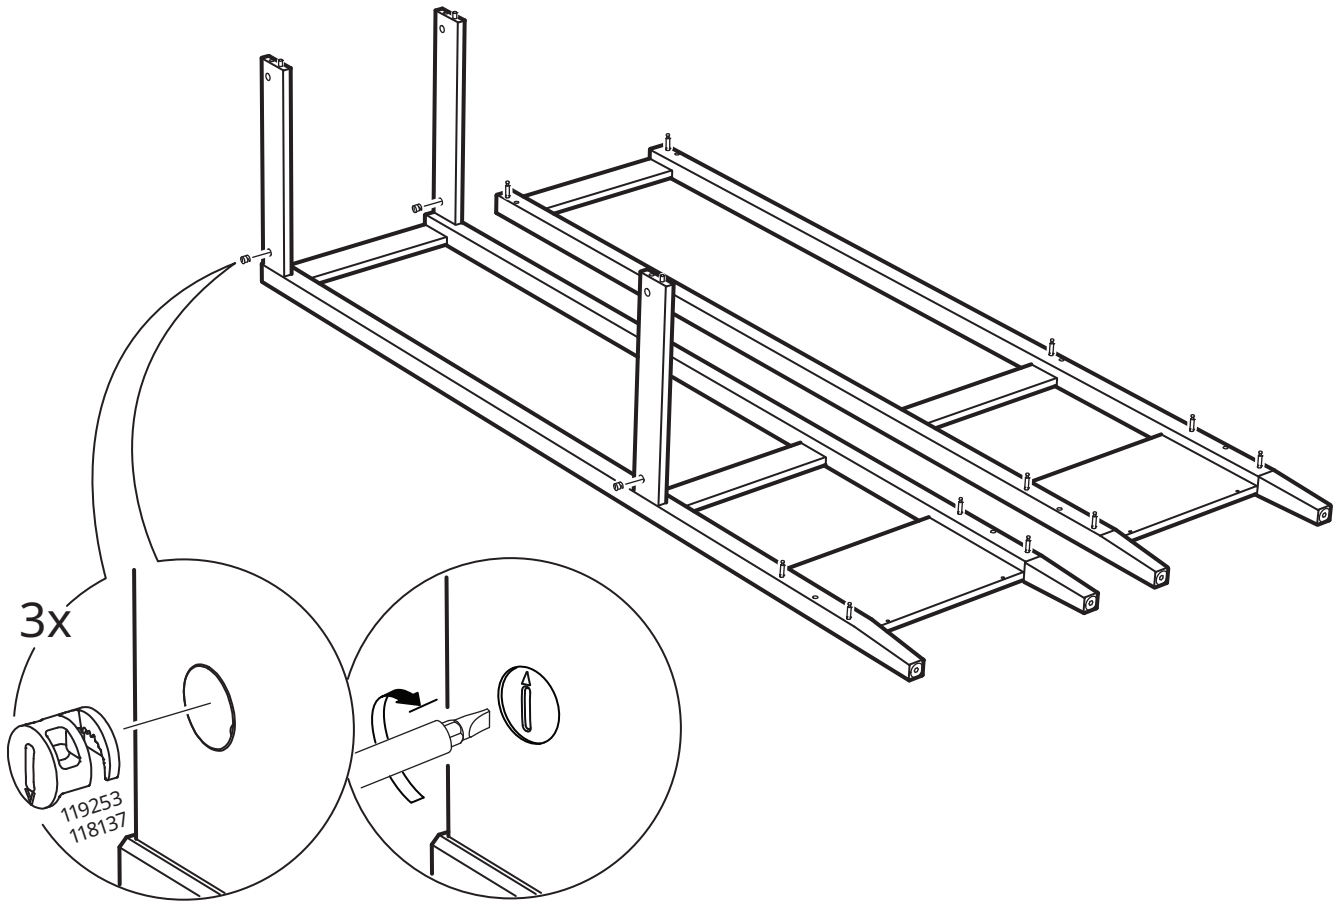 


5

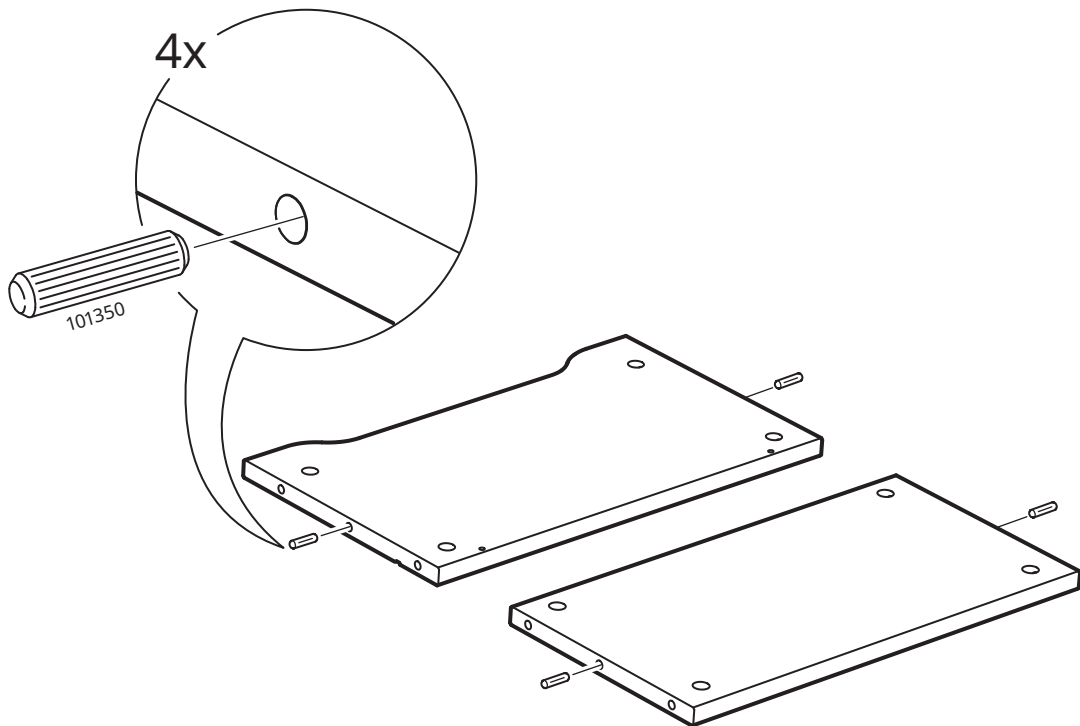 


6

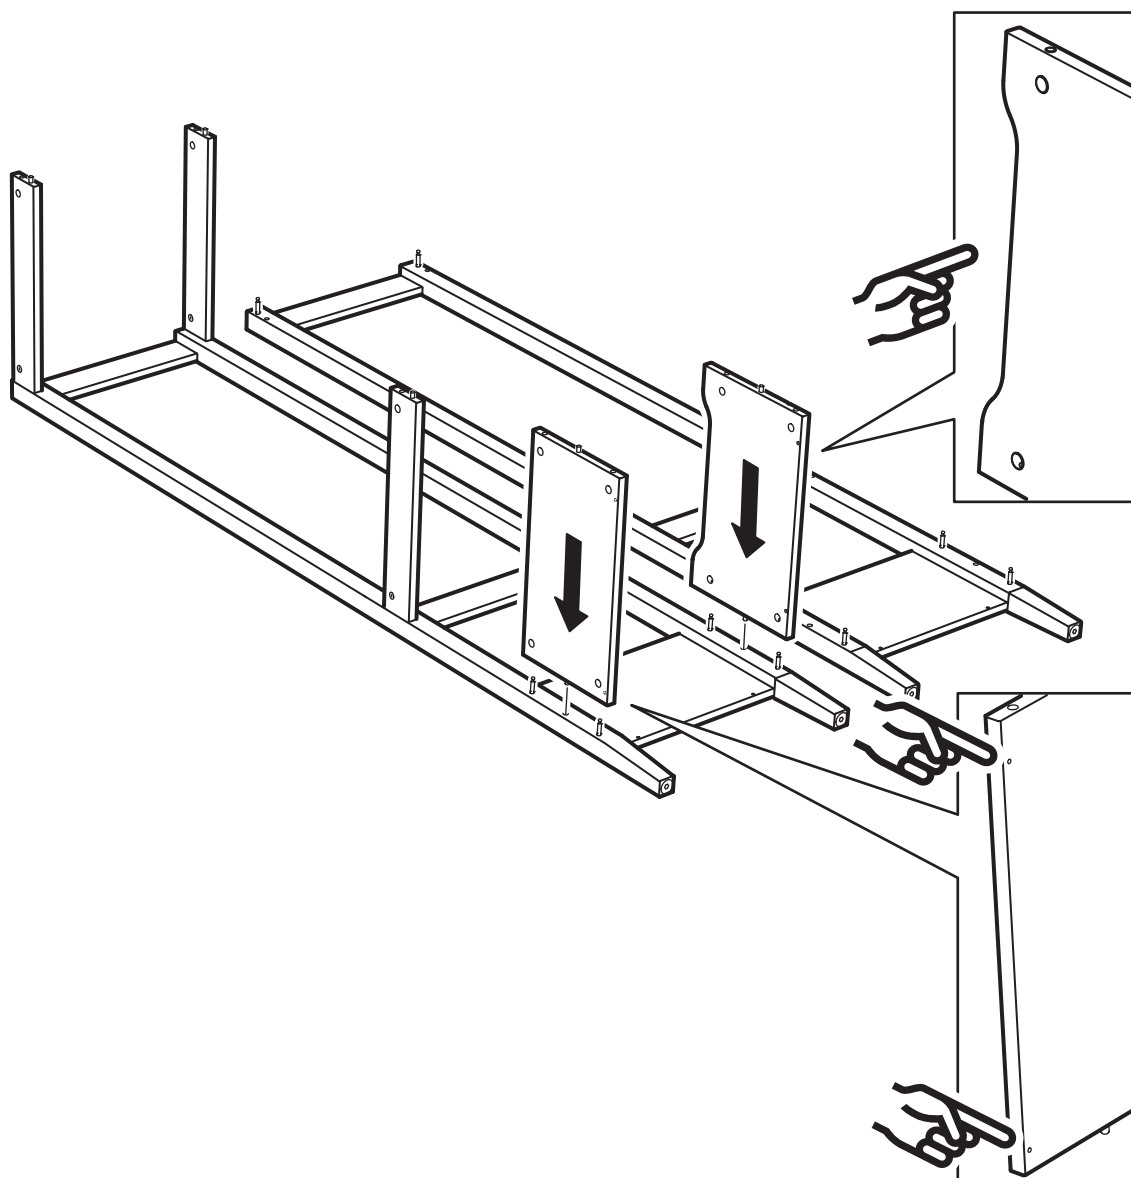 


7

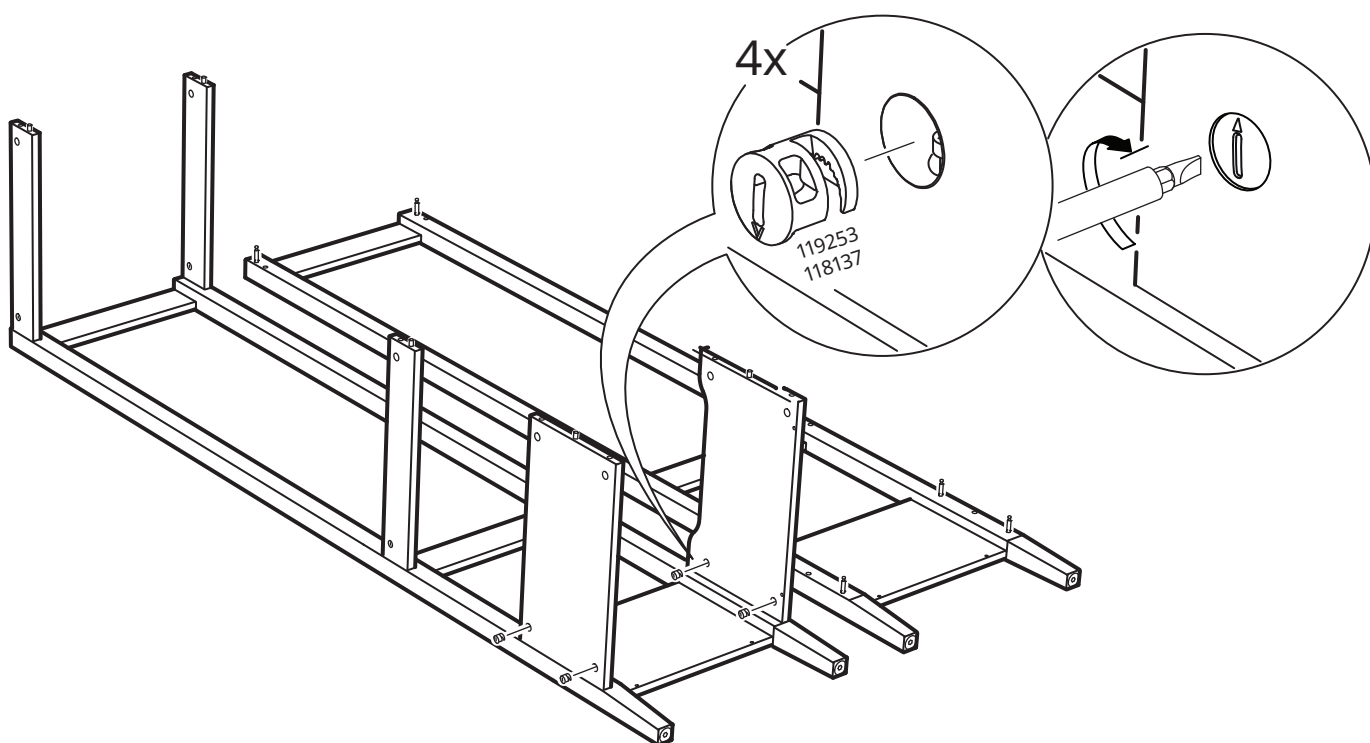 


8

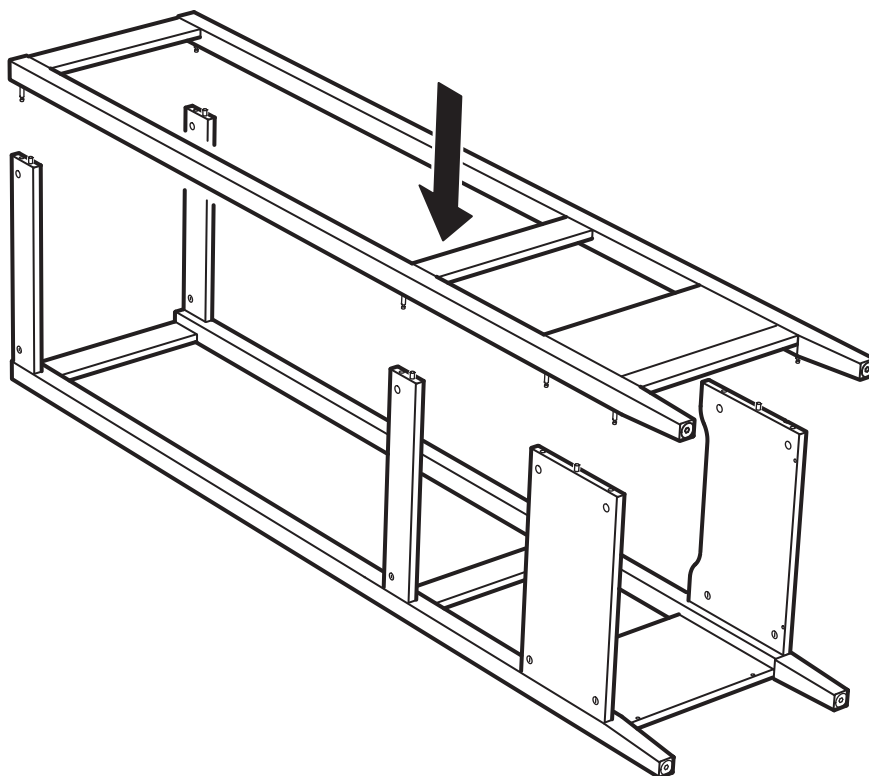 


9

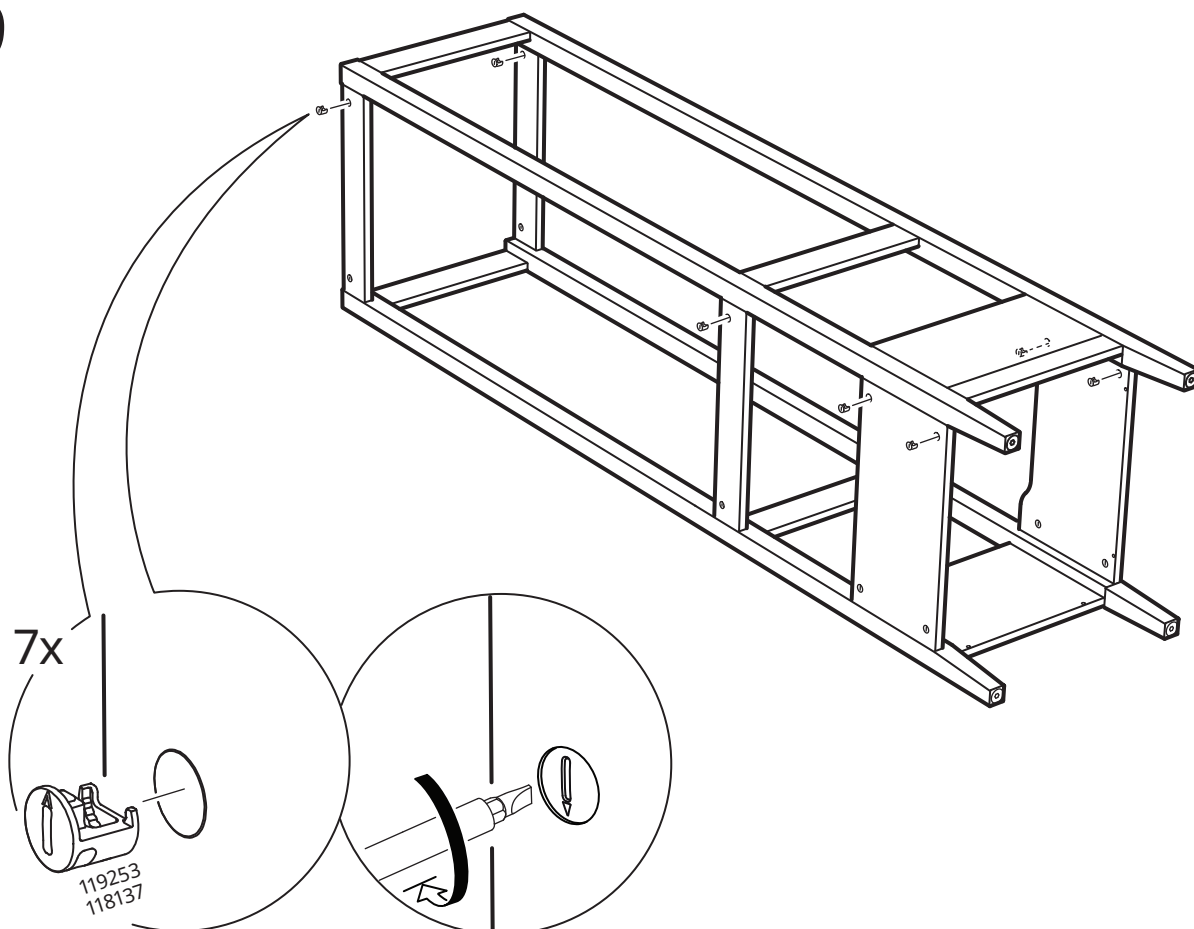 


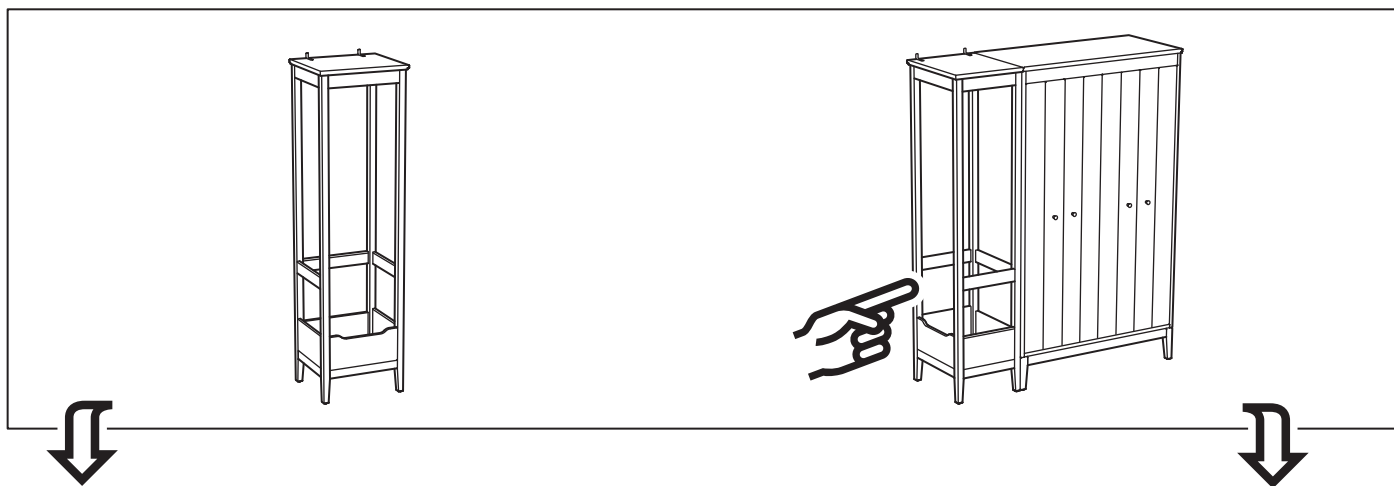 



10

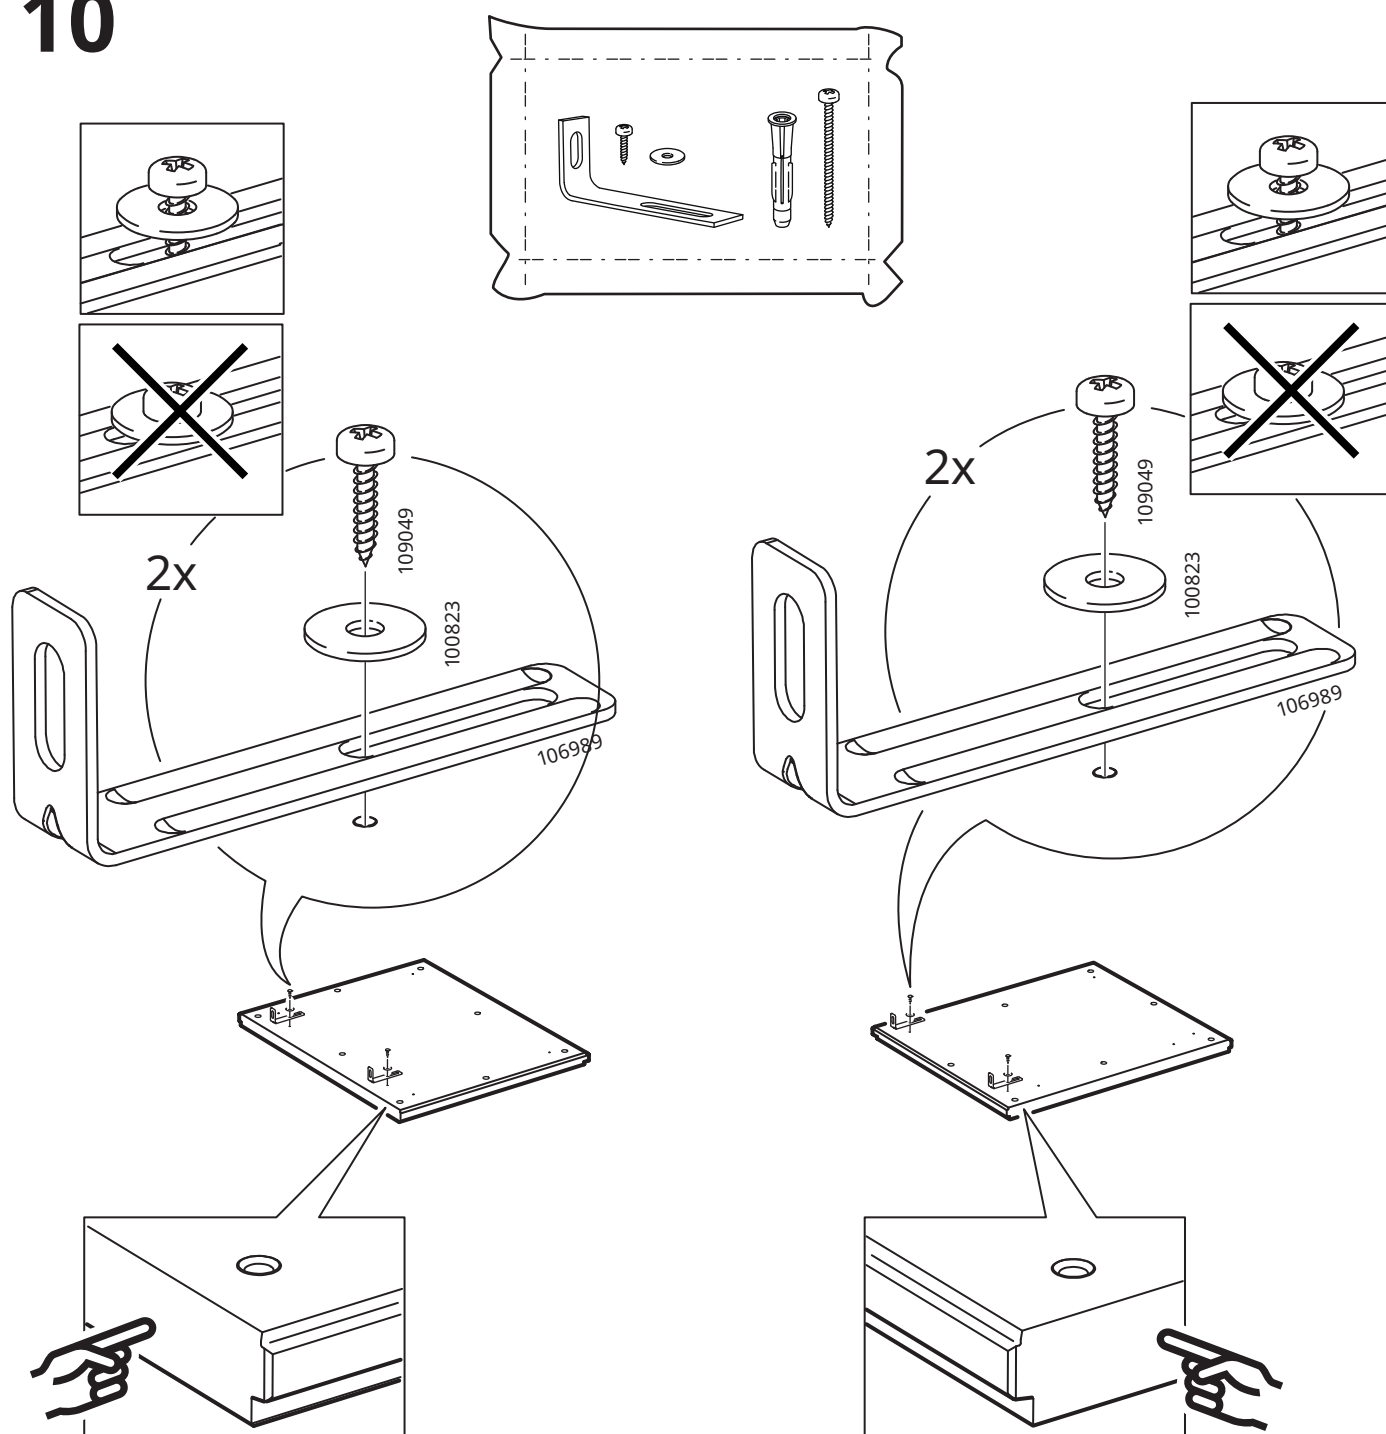 


11


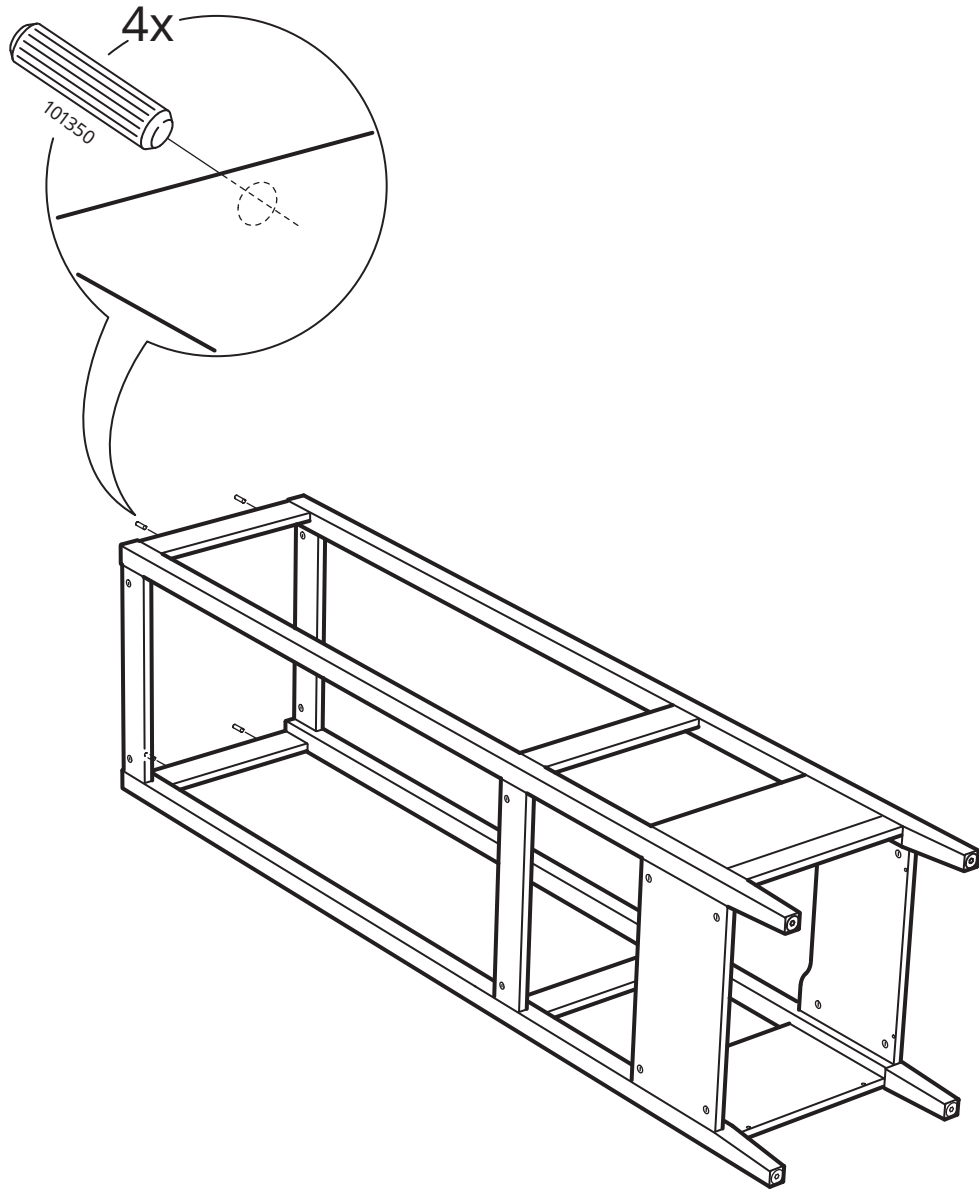 


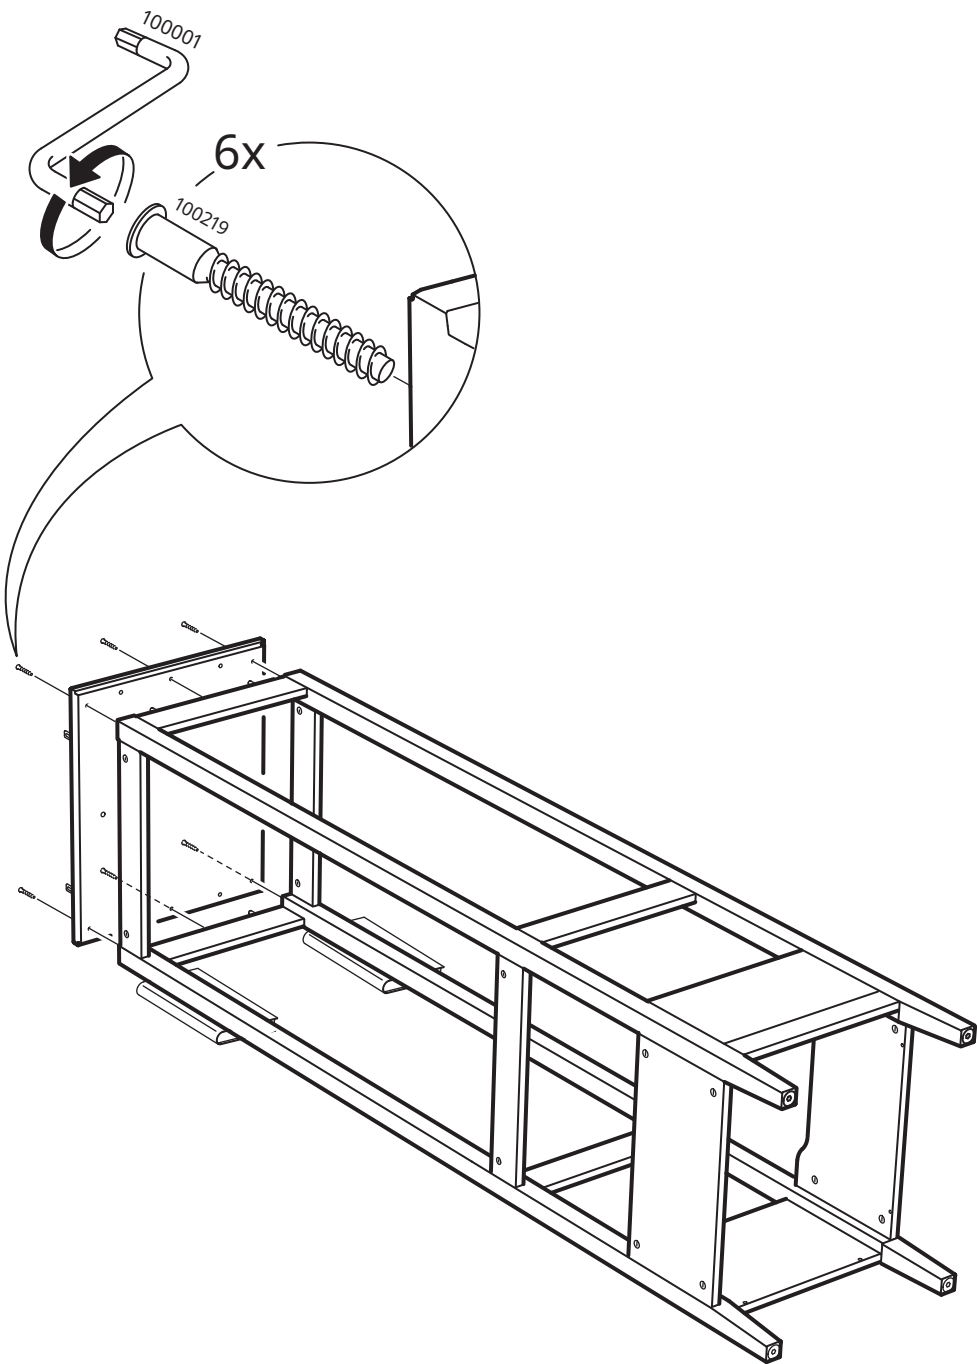 

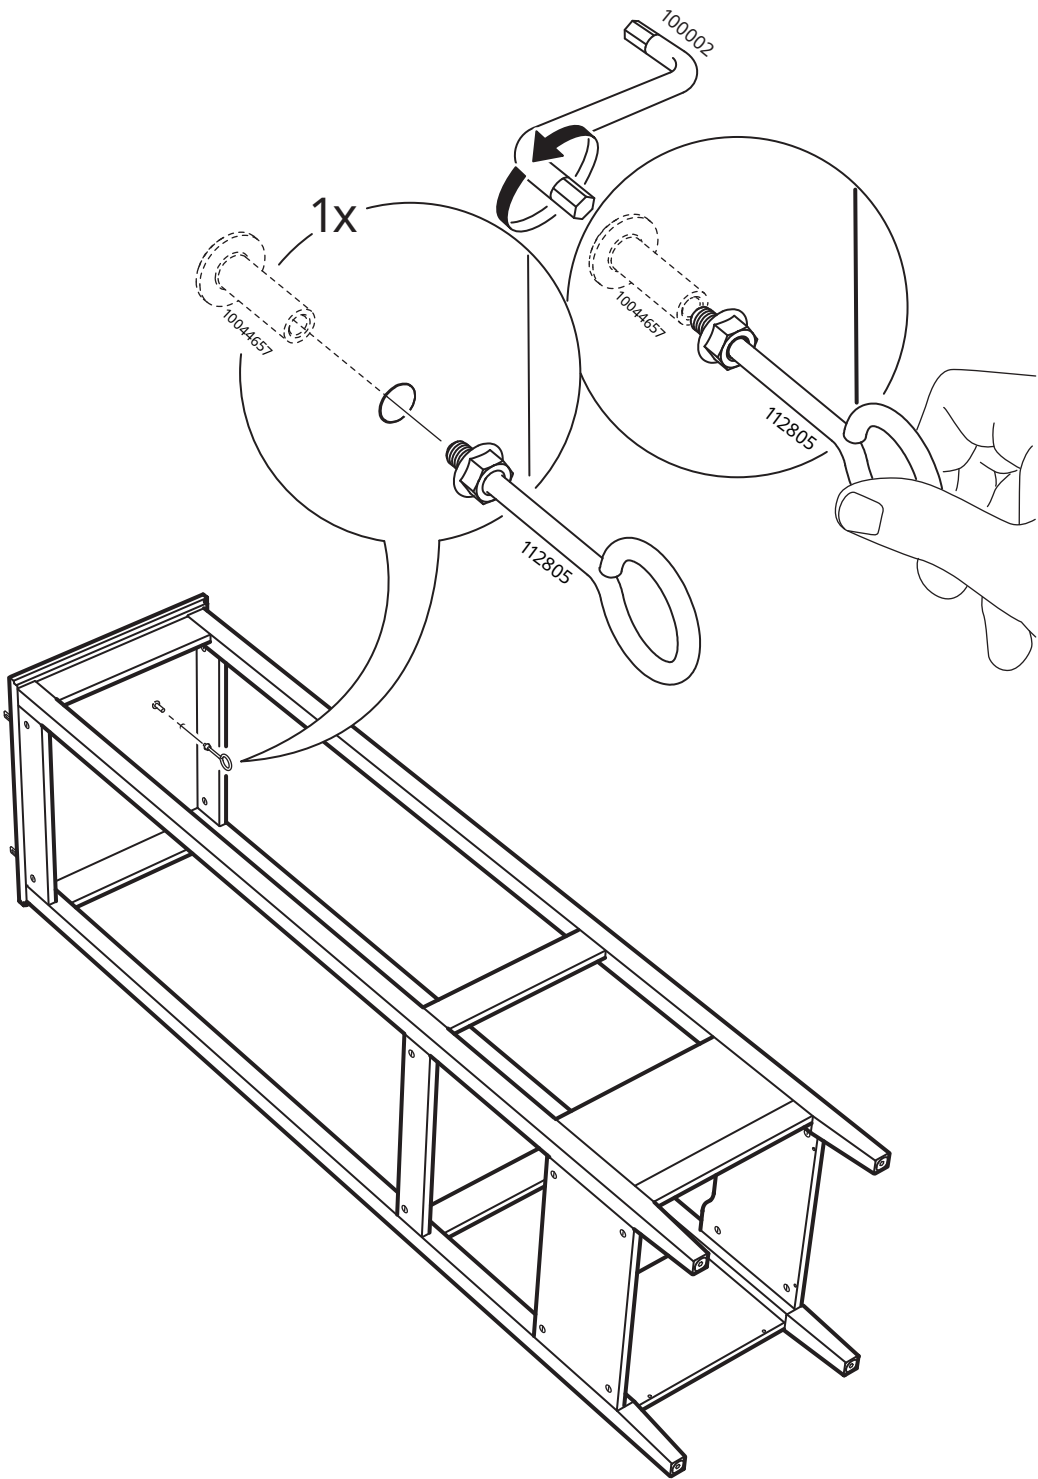 


14


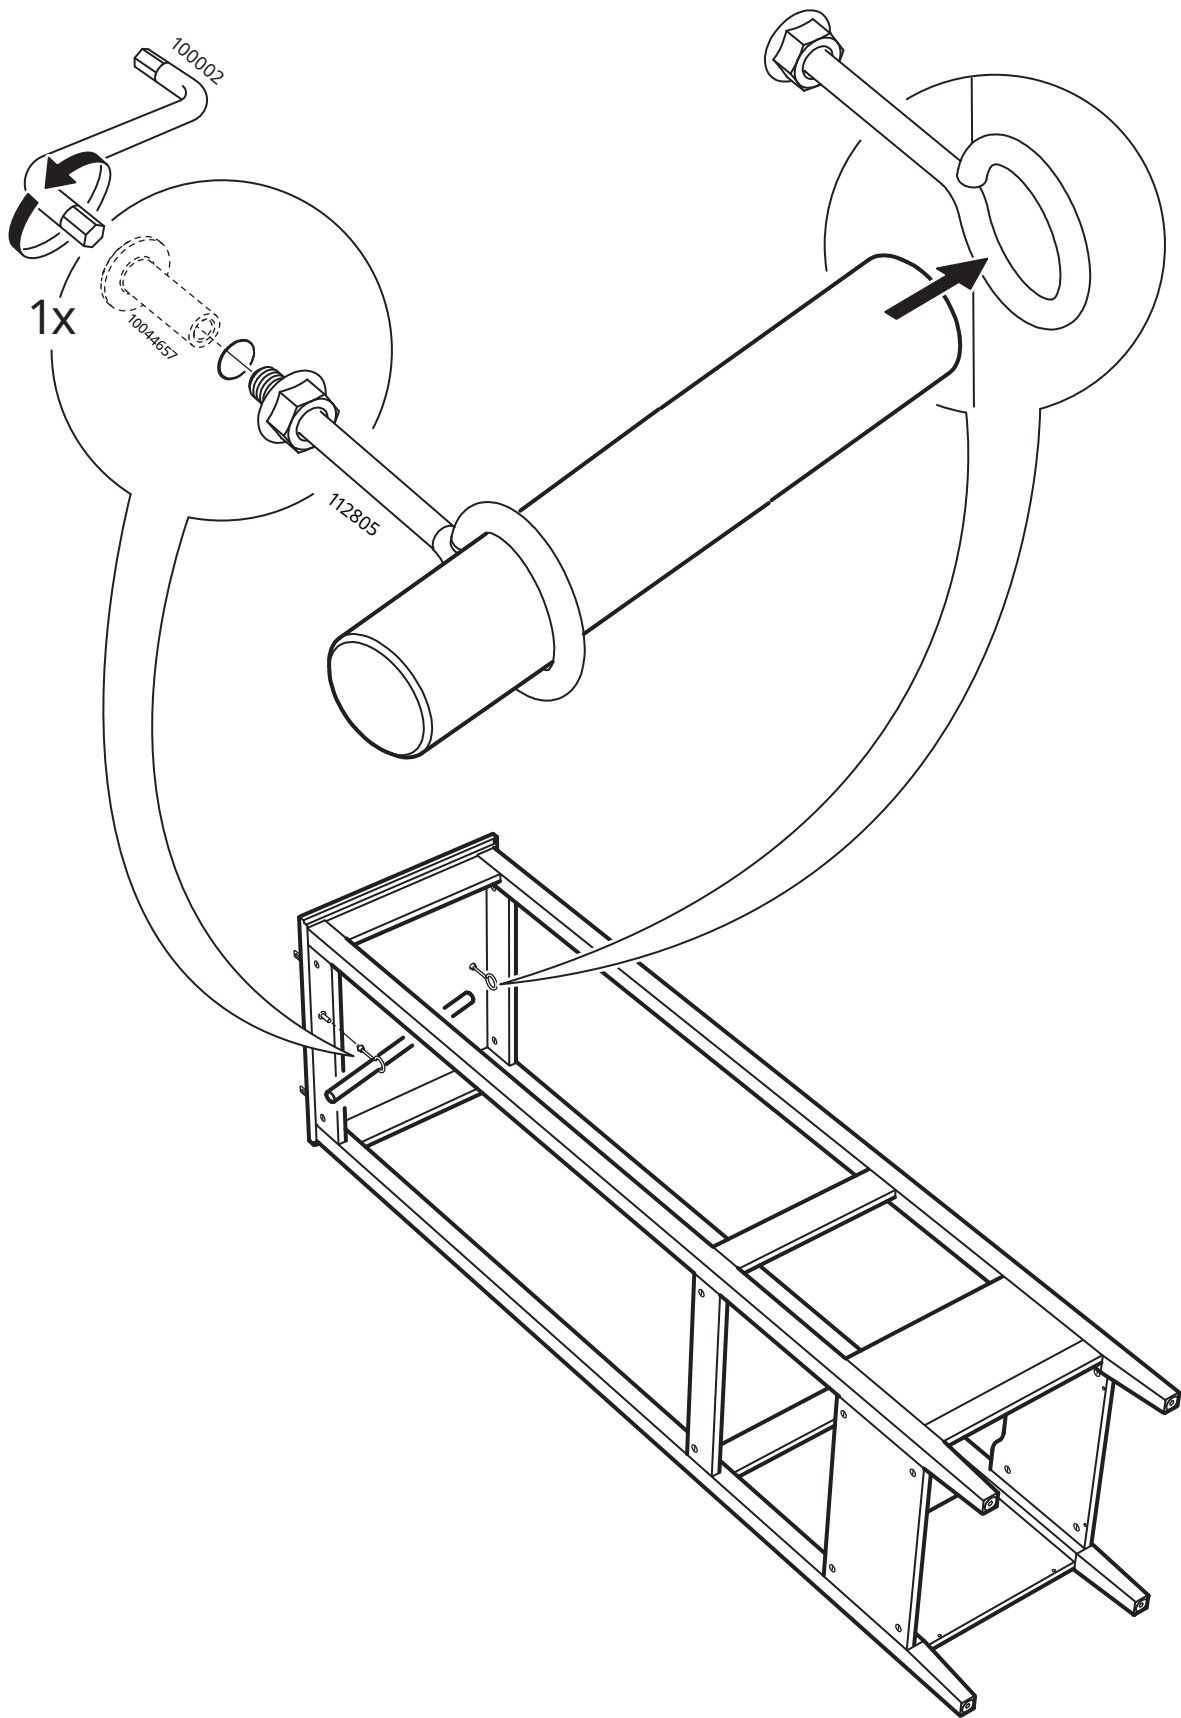 


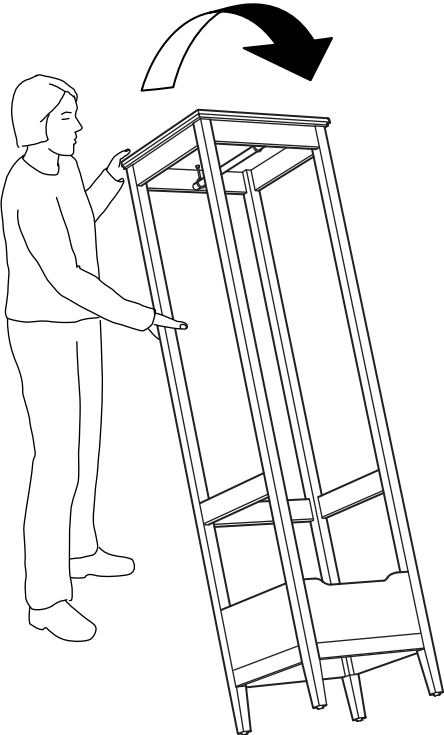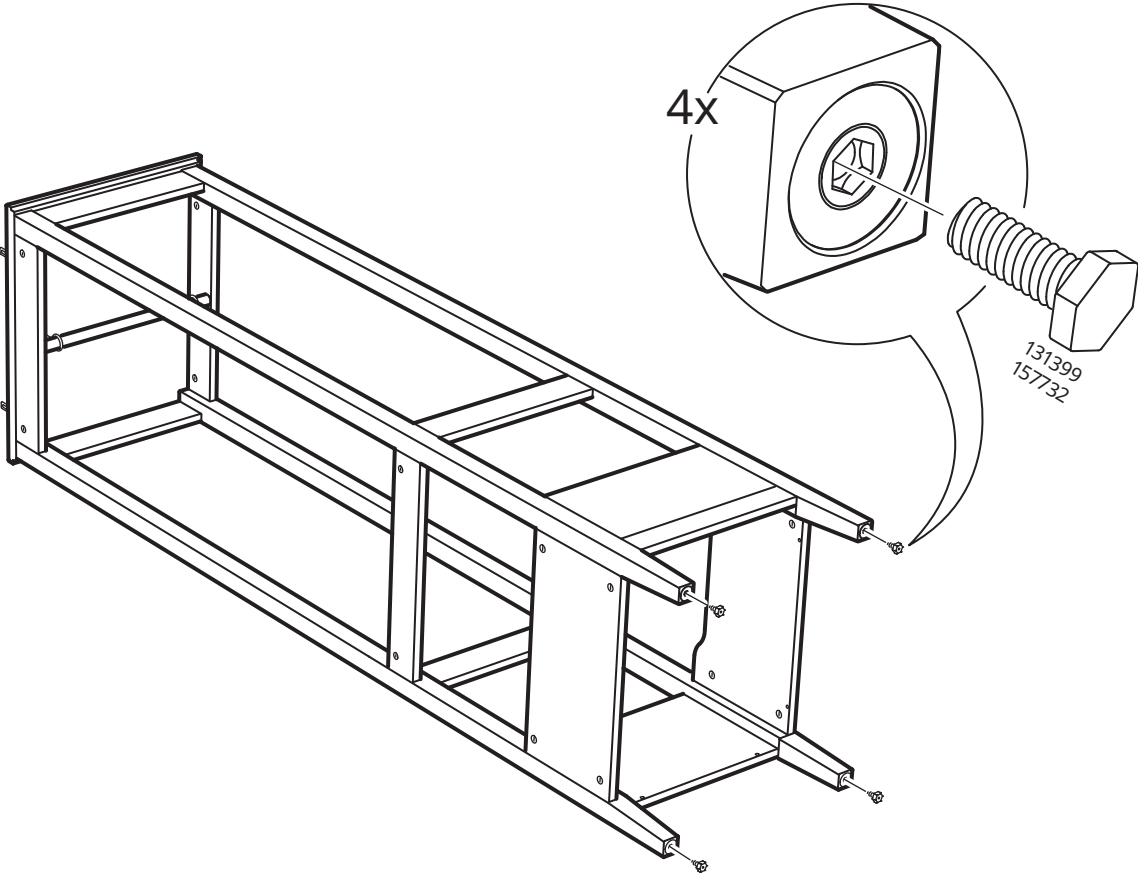  



16

   
17

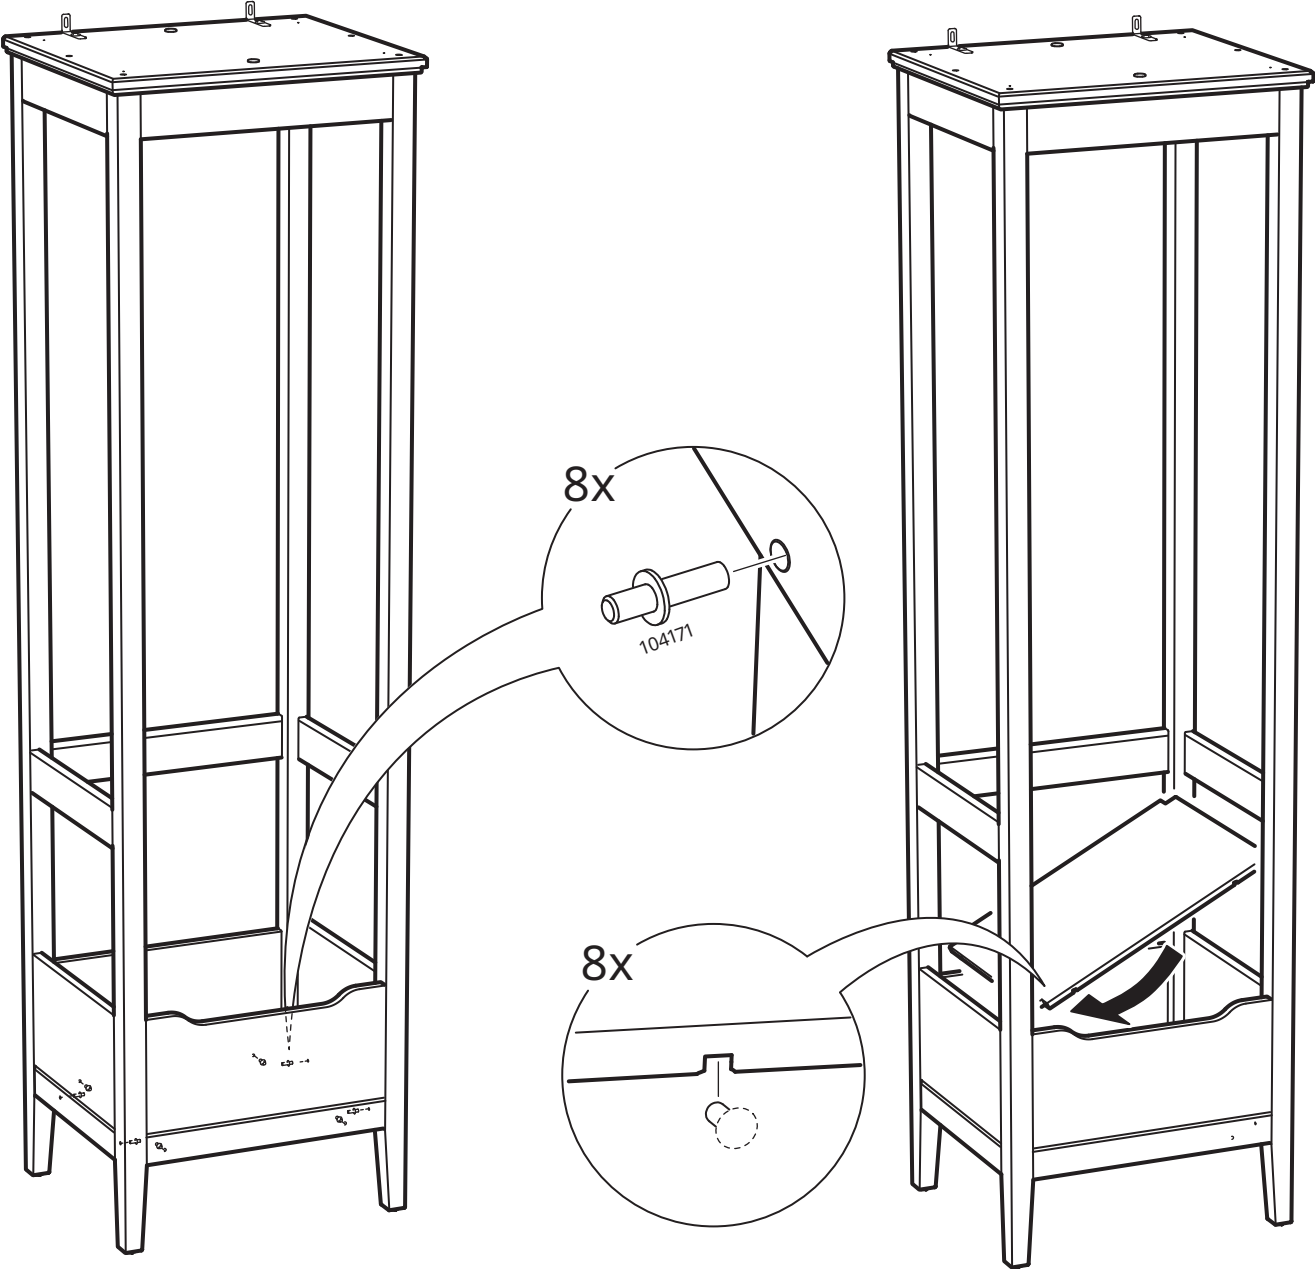

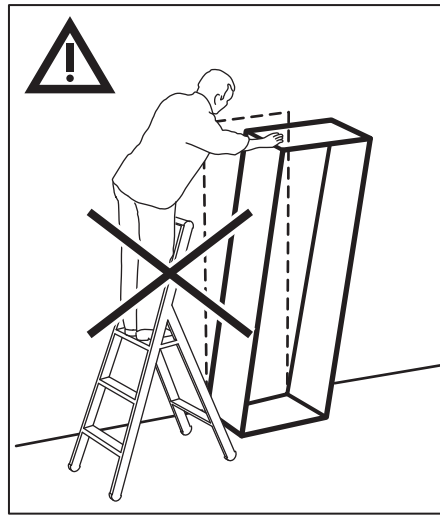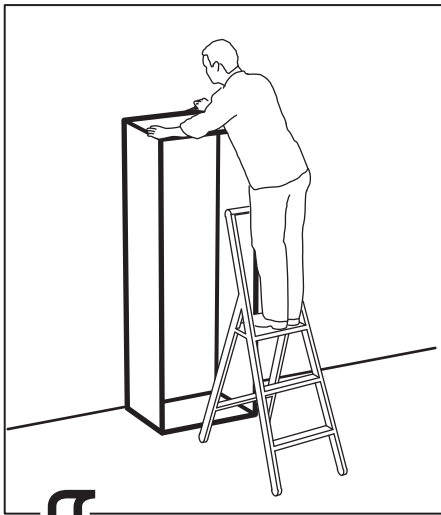

↓
18

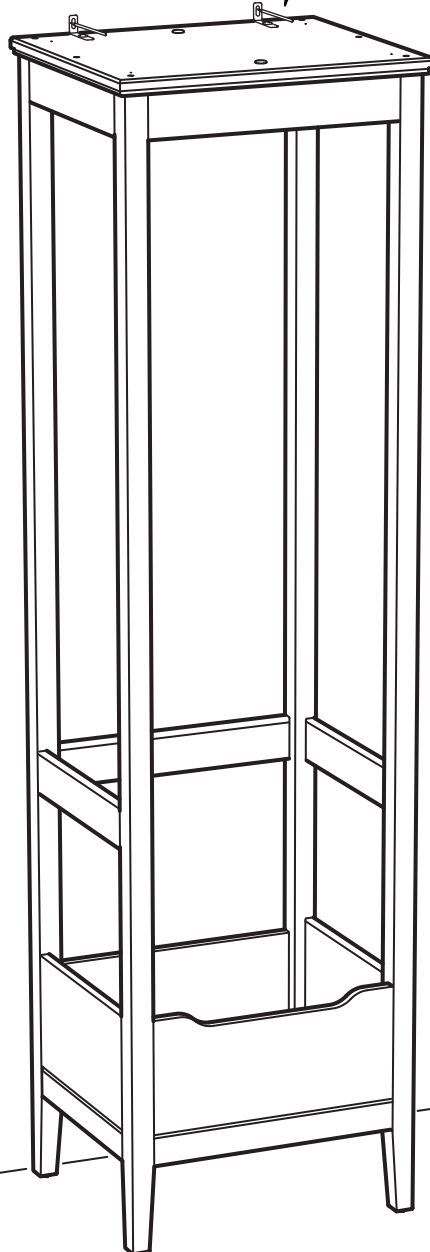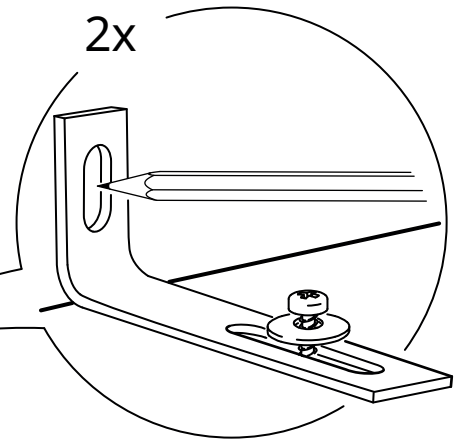  

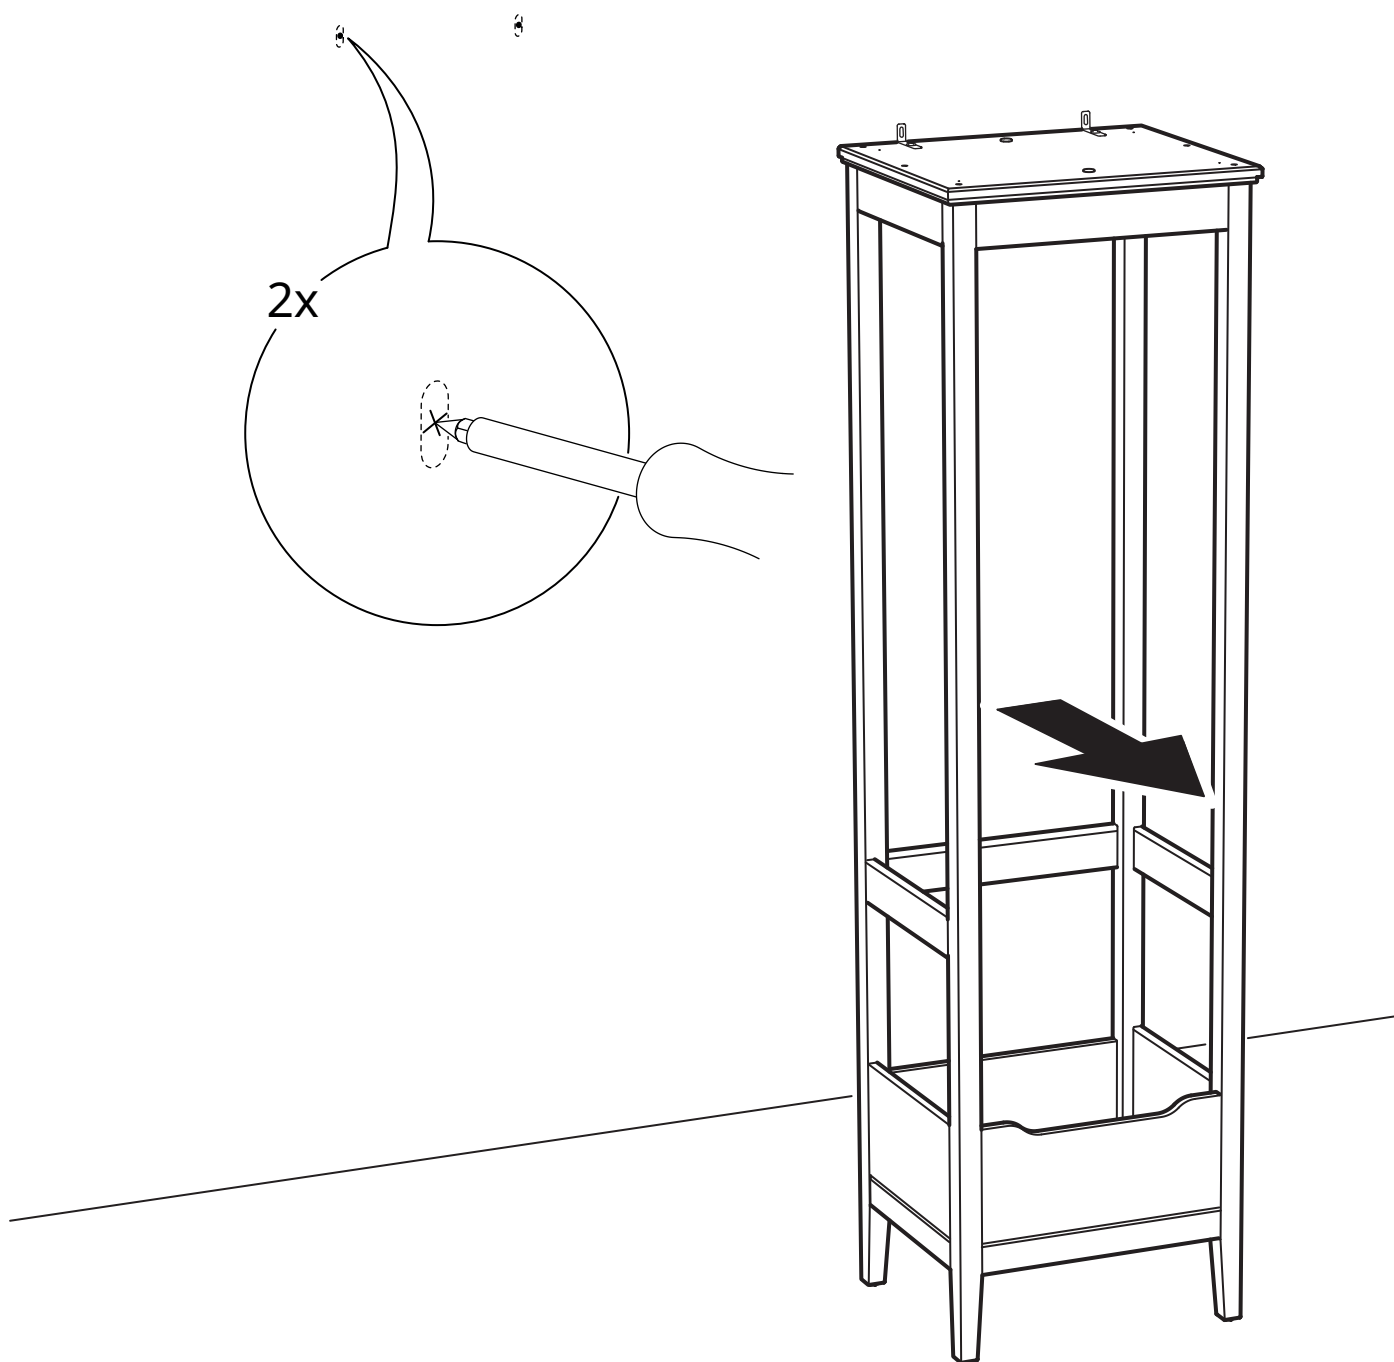 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

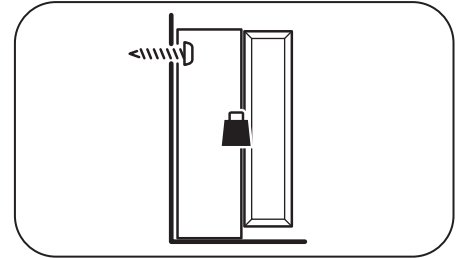

20

English

 
The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.




A

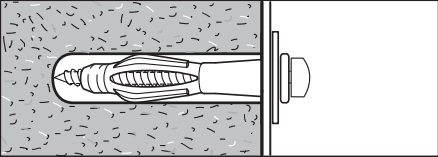


Ø 8 mm
(5/16")



 1




2

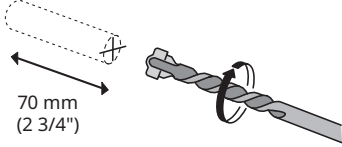 


70 mm
(2 3/4")

 3

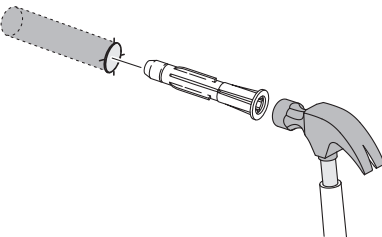


B

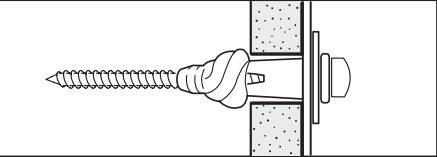 


Ø 8 mm
(5/16")



 1




2

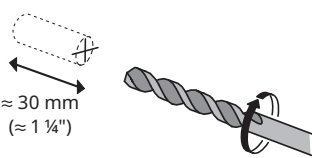 


≈ 30 mm
(≈ 1 1/4")

 3

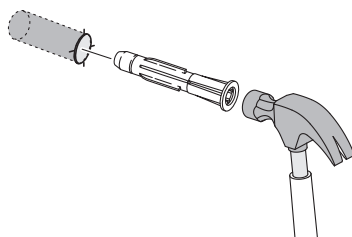


C

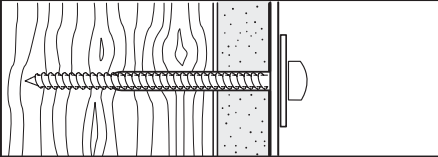 

Ø 3 mm
(1/8")



 1




2





≈ 30 mm
(≈ 1 1/4")

   3





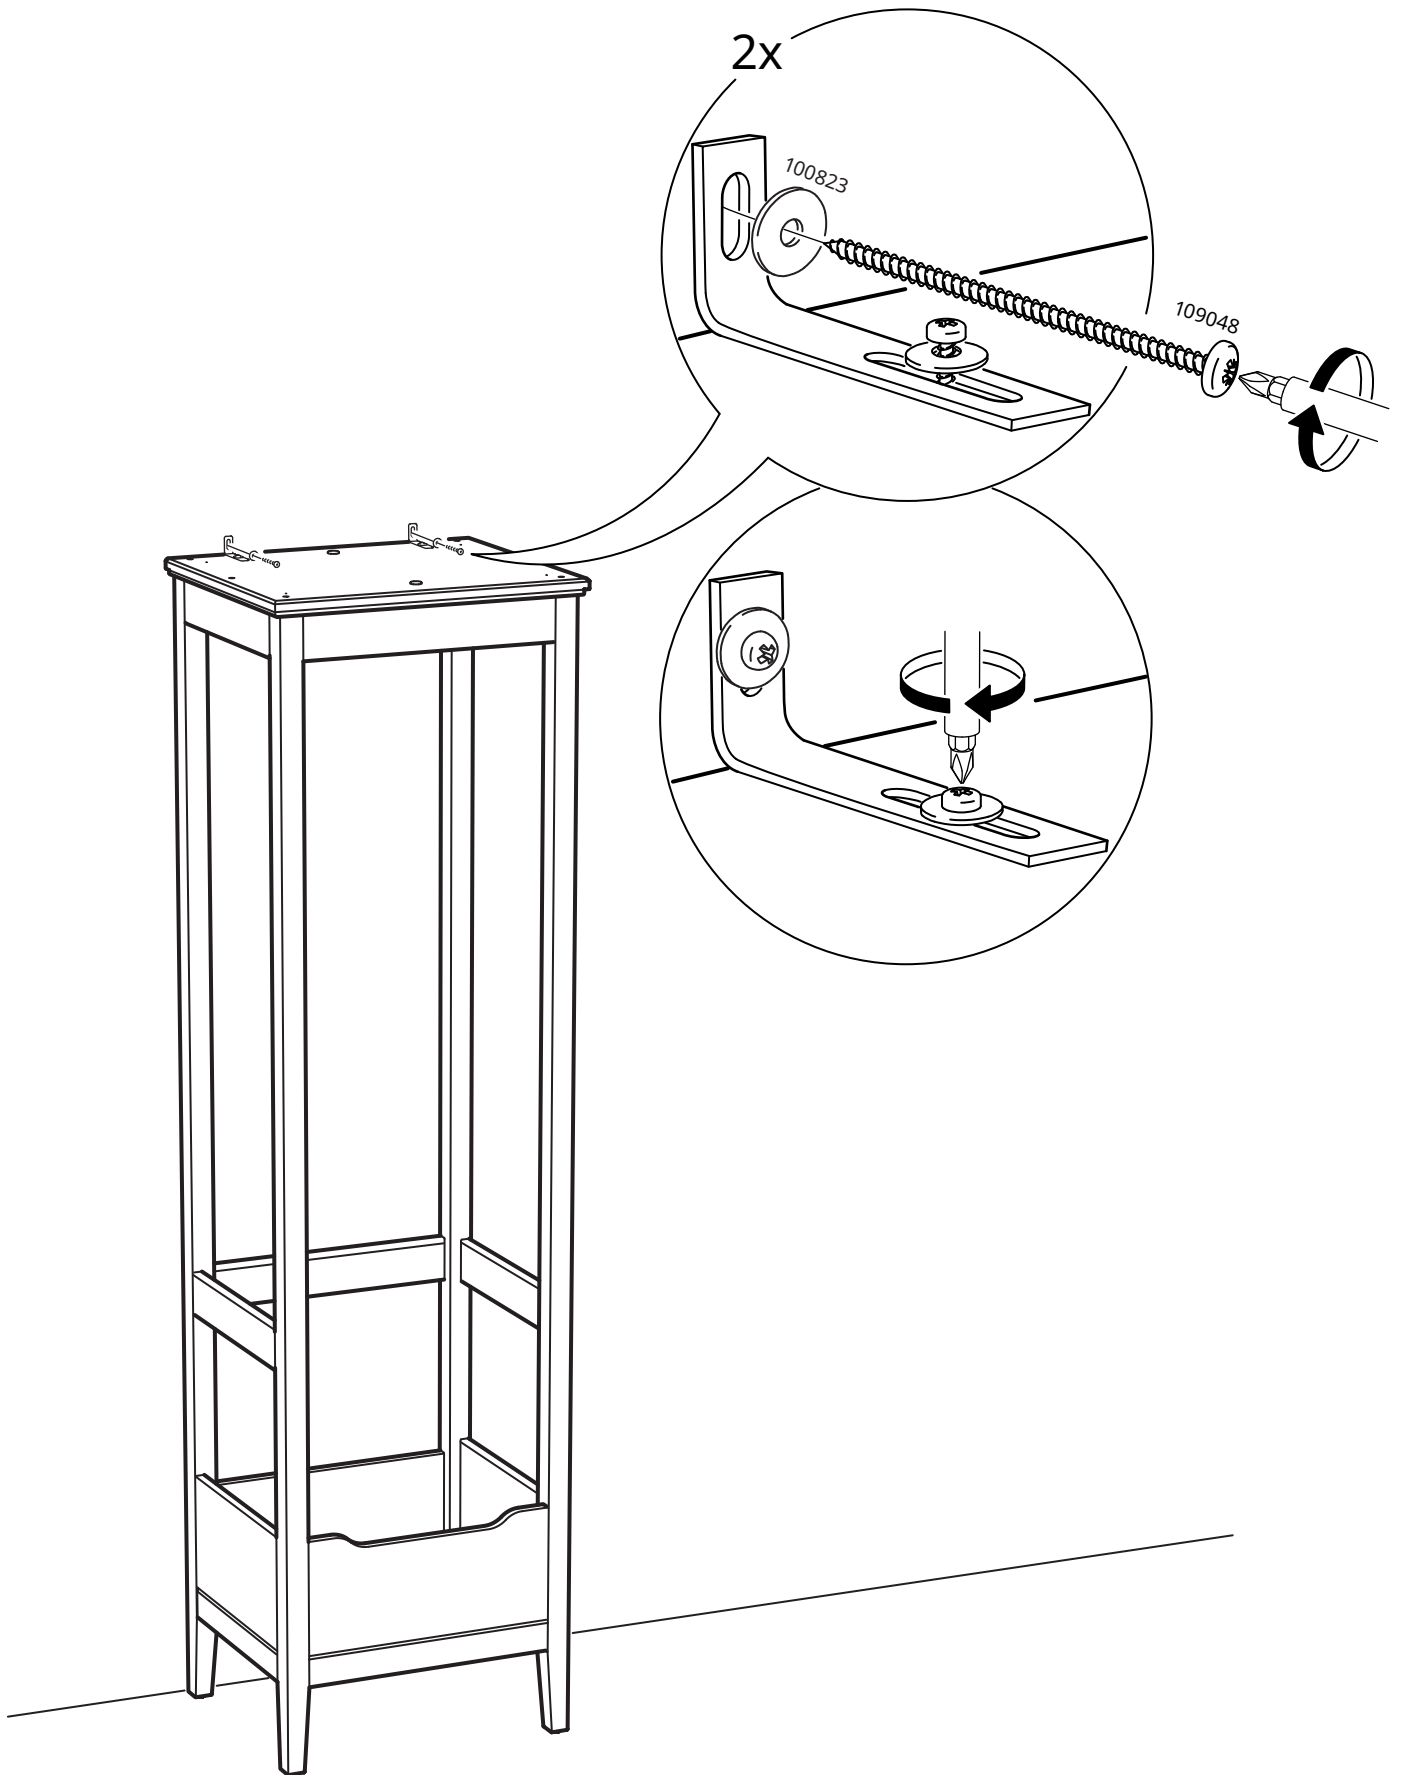

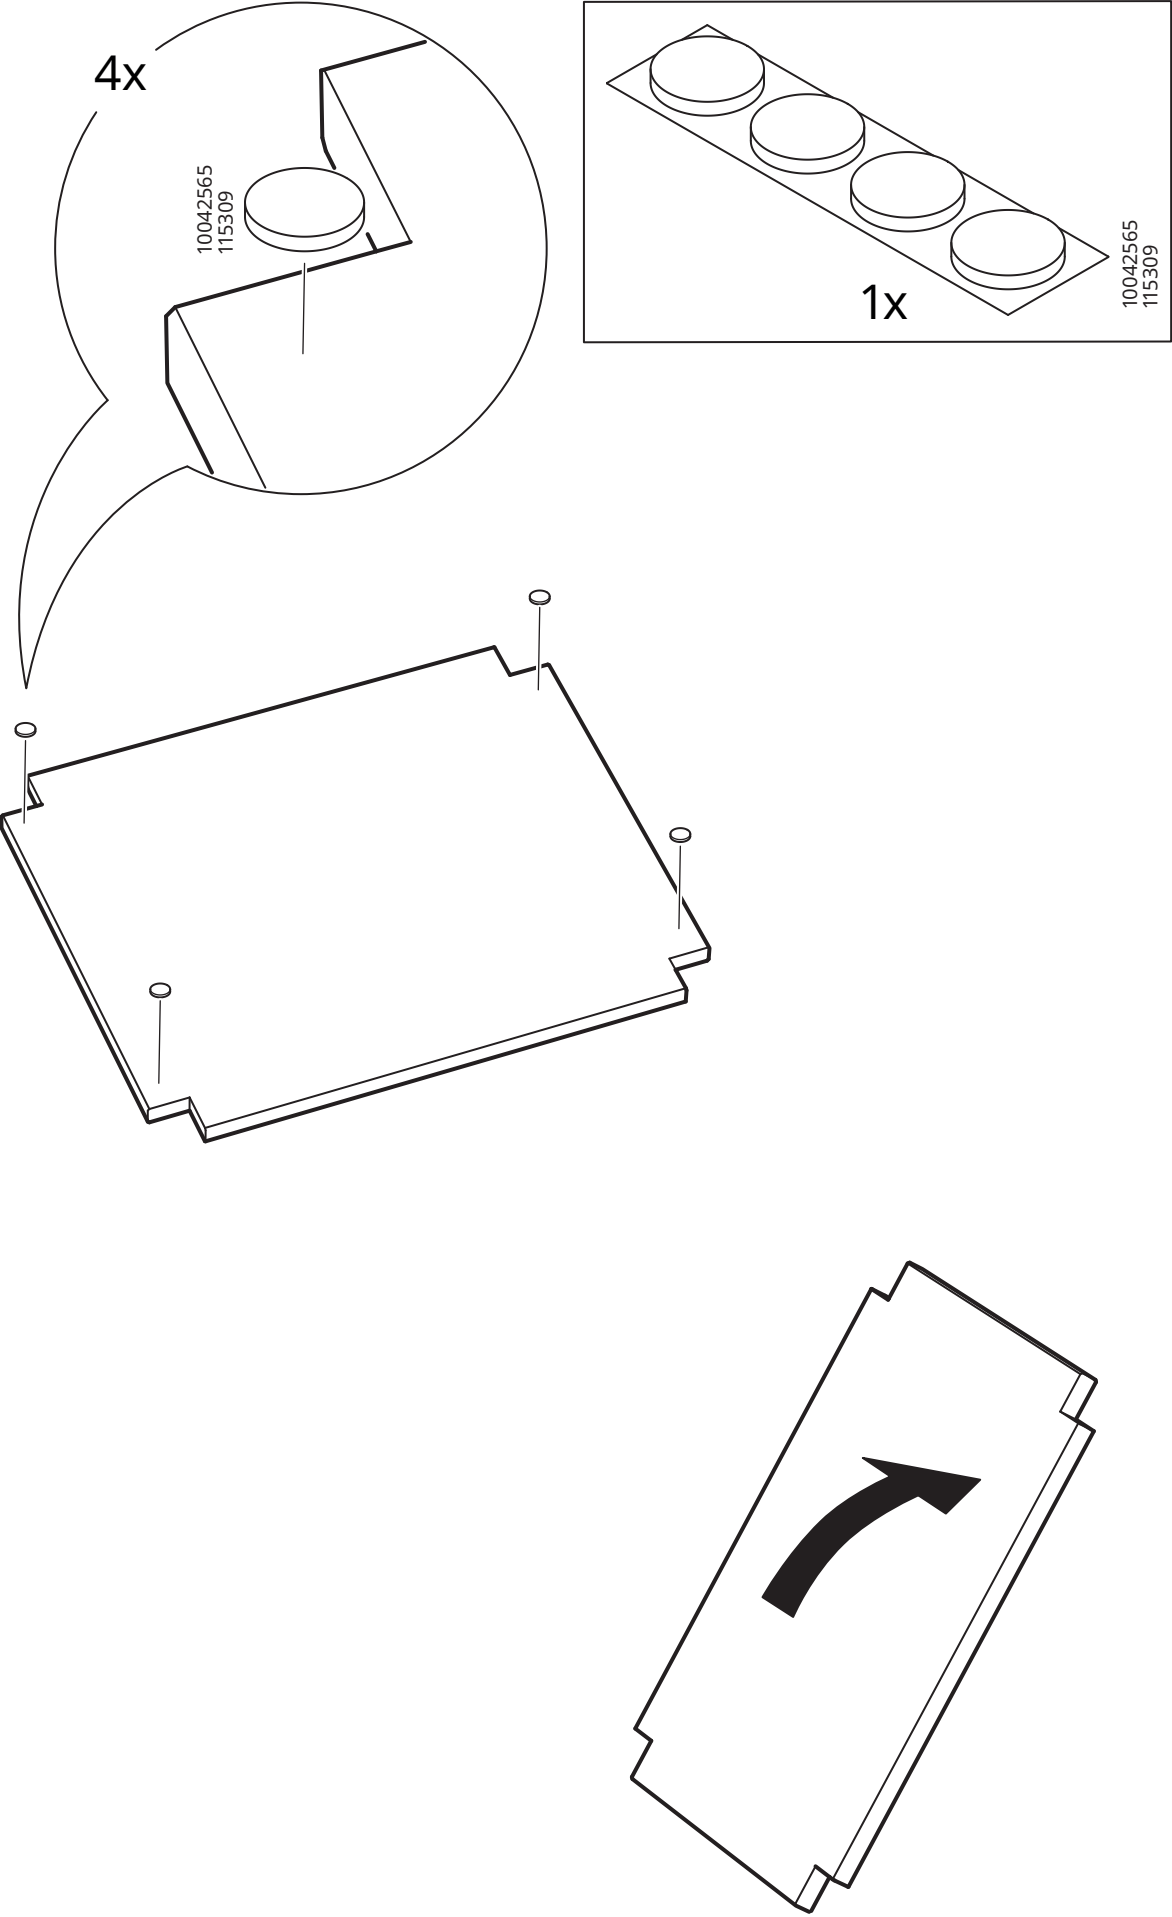

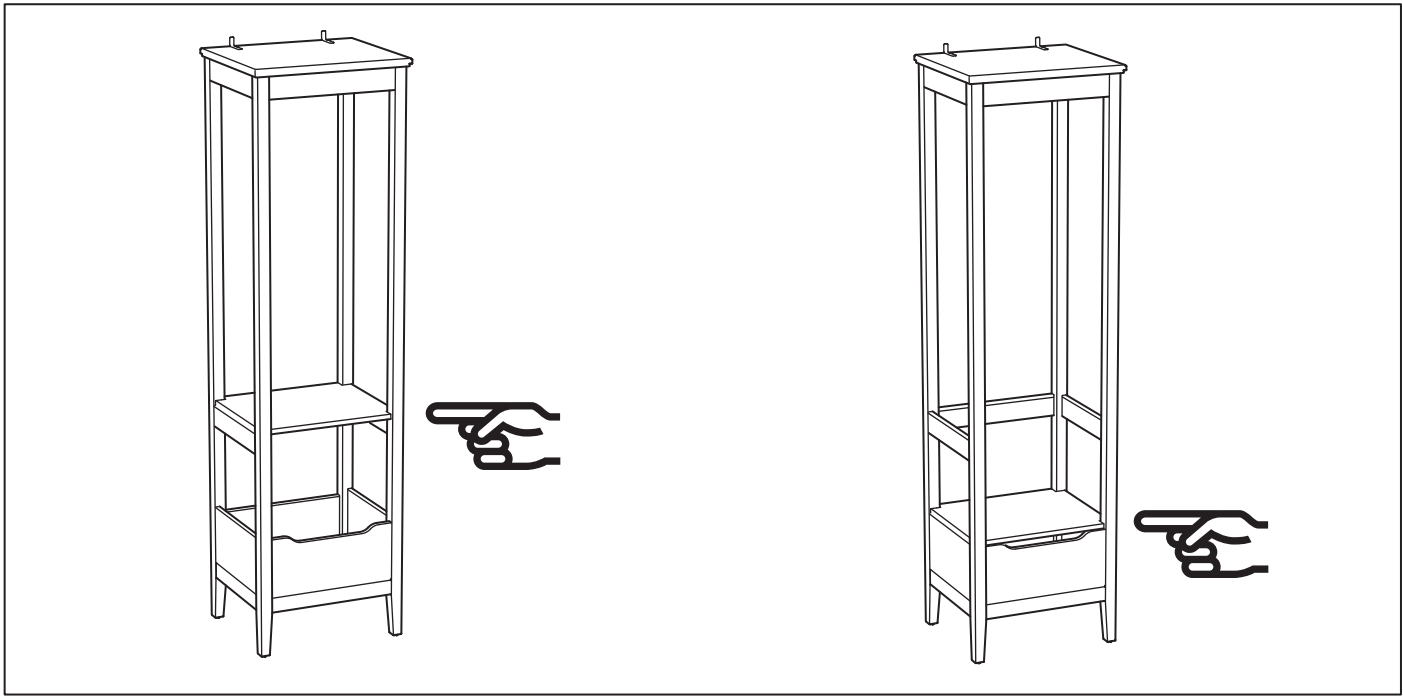

23

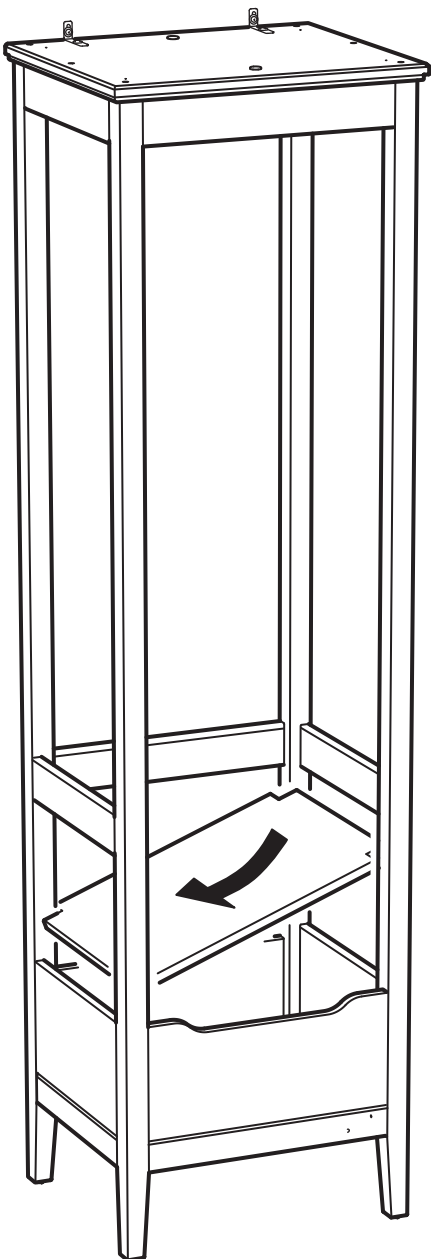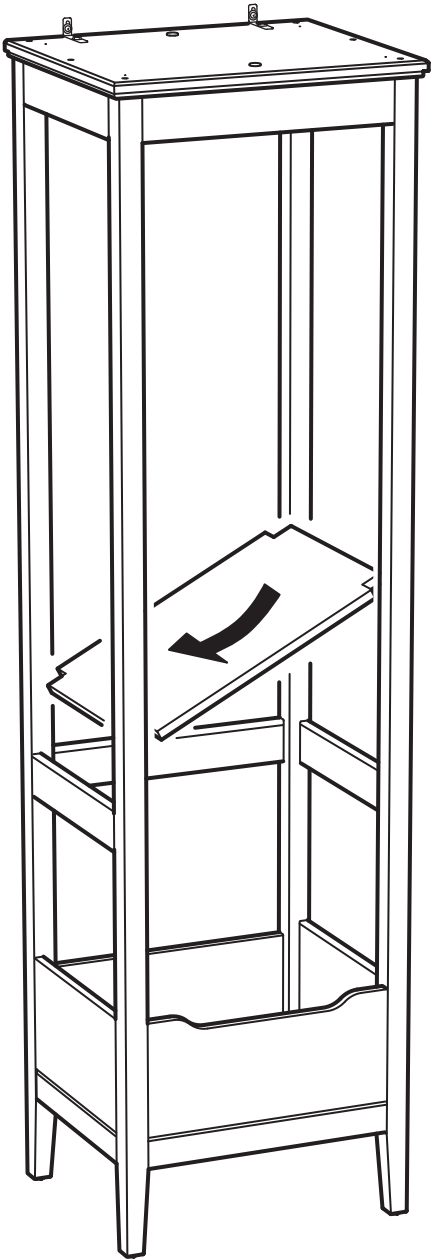  

English

Wipe clean with a cloth dampened in a mild cleaner.

Wipe dry with a clean cloth.

עברית

נקו בעזרת מטלית וחומר ניקוי נוזלי.

נגבו לייבוש בעזרת מטלית רכה.

