

## TABLE OF CONTENTS

|                                  |    |
|----------------------------------|----|
| INFORMATION TO THE USER .....    | 2  |
| BEFORE YOU START .....           | 3  |
| GETTING TO KNOW YOUR PSX18 ..... | 4  |
| BEFORE YOU START .....           | 5  |
| BLUETOOTH OPERATION .....        | 6  |
| STREAMING MUSIC .....            | 7  |
| AUX INPUT .....                  | 8  |
| USB INPUT .....                  | 9  |
| REMOTE CONTROL .....             | 10 |
| INSTALLATION .....               | 11 |
| TROUBLESHOOTING .....            | 12 |
| WIRE DIAGRAM .....               | 13 |
| SPECIFICATIONS .....             | 13 |

### SUPPORT

For the latest information about this product please visit [www.planetaudio.com](http://www.planetaudio.com)

TECH SUPPORT: 805-751-4854  
[www.planetaudio.com/customer-support](http://www.planetaudio.com/customer-support)

ENGLISH

Thank you for purchasing this

### PSX18 All-Terrain Sound System

Please read through these instructions carefully so you will know how to operate your model properly.

After you have finished reading the instructions, keep this document in a safe place for future reference.

### THIS PACKAGE CONTAINS

1- PSX18 All-Terrain Speaker System

1- Mounting Kit

1- Power Accessory Extension Adaptor

1- Remote control

1- User Manual

1- Warranty Card

### INFORMATION TO THE USER

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks is under license. Other trademarks and trade names are those of their respective owners.

2

• Do not  
 others s  
 • In the  
 immedi  
 Center  
 • Set yo  
 without  
 • BE SU  
 - Use ca

### WARN

• Do not  
 without  
 be clamp  
 • Refer  
 • The P  
 battery  
 • When  
 starting  
 minimum  
 • The gr  
 • The P  
 circuit  
 • Use on  
 • Wash  
 clean wa

### "Don't

• DON'T  
 • DON'T  
 • DON'T  
 • DON'T

**BEFORE YOU START**

**IMPORTANT SAFETY PRECAUTIONS**

Do not operate mobile equipment while driving a motorized vehicle - safe driving and safety consideration of should always be your highest priority.

Be aware you should notice smoke, strange noises or odor from this product, or any other abnormal signs, relay turn off the power and consult your dealer or the nearest authorized **Planet Audio** Service Center. If you find this product in poor condition or in permanent damage to the system, please return it to the dealer.

Do not use volume control all a low setting, then slowly increase the sound until you can hear it comfortably, distortion, or ear discomfort.

**BEFORE TO OBSERVE THE FOLLOWING GUIDELINES:**

Turn up the volume so high that you can't hear what's around you.

Reduction or temporary discontinuation is used in potentially hazardous situations.

**INSTALLATION PRECAUTIONS**

**WARNING - Always consult a professional installer**

Attempt to install or service this product by yourself. Installation or servicing of this product by persons without appropriate training and experience in electronic equipment and motorized vehicle accessories may attempt and could expose you to the risk of electric shock, injury or other hazards

Any repairs to a qualified **Planet Audio** Service Center

Planet Audio can be powered from a vehicle cigarette lighter / auxiliary power port, or hard wired directly to the through an optional relay / accessory switch

Wiring directly to the vehicles battery, be sure to disconnect the batteries negative terminal wire before any wiring procedures, it is suggested that an optional fuse and fuse holder (not included) with a rating of 15 Amperes in line with the positive battery terminal

Maximum cable length should not exceed 16-inches (See wiring diagram)

Planet Audio's has a weather resistant design, it should not be submerged in or under water under any circumstances

After the installation parts provided with the PSX18

Use with a mild soap or detergent and lukewarm water using a clean sponge or a soft cloth. Rinse well with water.

**CAUTION - Very Important**

Do not clean in hot sun or on very hot days.

Use abrasive or highly alkaline cleaners on the main body

scrape the main body with razor blades, or other sharp instruments

ever use, gasoline, acetone or carbon tetrachloride

**CAUTION!!**

Using other mounting methods may void this warranty

**Planet Audio®**


3

**GETTING TO KNOW YOUR PSX18**

The diagram shows the Planet Audio PSX18 car stereo unit. It is a rectangular device with a silver faceplate. The faceplate features a large speaker grille on the left, a circular control knob in the center, and a smaller speaker grille on the right. A USB port is located on the left side of the unit. The unit is shown from a slightly elevated perspective, with its mounting bracket visible. The following table lists the components identified by the numbered callouts and letter A:

|          |                               |
|----------|-------------------------------|
| <b>A</b> | Planet Audio PSX18            |
| <b>1</b> | 3.5mm AUX-INPUT               |
| <b>2</b> | CIGARETTE POWER CABLE ADAPTOR |
| <b>3</b> | LED POWER INDICATOR           |
| <b>4</b> | CONTROL PANEL                 |
| <b>5</b> | USB JACK                      |

 **BEFORE YOU**

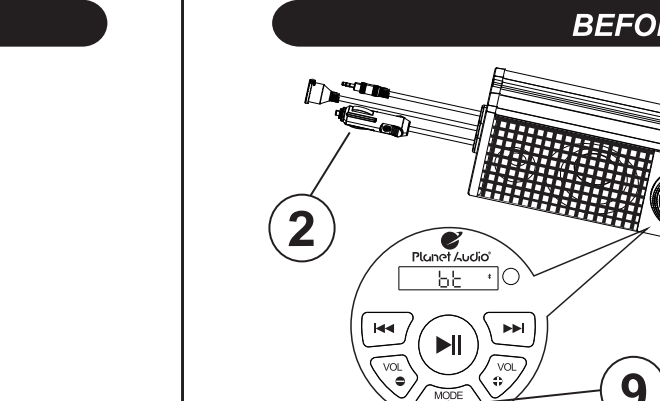

**PAIRING & DISCOVERING A NEW BT DEVICE**

- 1) Power on the **PSX18** by plugging in the male cigarette lighter plug into the female cigarette lighter receptacle.
- 2) Press the button **9**. The **PSX18** will automatically enter pairing mode.

**ANDROID users:**

- a. Go into the **Settings Menu** of your device.
- b. Enter the **Bluetooth Menu**
- c. **TURN ON Bluetooth** and press **SCAN**
- d. "**Planet Audio PSX18**" will now be displayed.
- e. If prompted, enter passcode: "**0000**"

 
**iOS users:**

- a. Go into the **Settings Menu** of your iOS device.
- b. Enter the **Bluetooth Menu**
- c. **TURN ON Bluetooth**
- d. "**Planet Audio PSX18**" will now be displayed.
- e. If prompted, enter passcode: "**0000**"

- 3) If **Planet Audio PSX18** is not seen, repeat the "**Device List**"
- 4) When the connection is successful, you are now ready to use the favorite media player to the **PSX18**


**Planet A**

## START

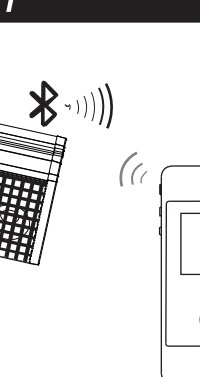

**BLUETOOTH CONNECTION**

1. Cigarette lighter adapter into (2) a smartphone.

2. Put the smartphone into pairing mode.

 
3. The device is displayed under **AVAILABLE DEVICES**.

4. Select the device.

5. Press the button **5** on the device.

6. The device is ready to stream music from your smartphone.

## RECONNECTION

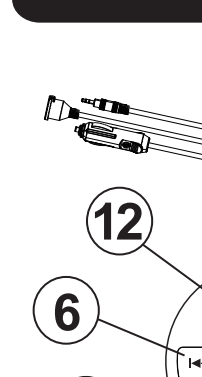

- 1) Power on the **PSX18** and the device.
- 2) Press the button **9**. The u
- 3) If your device was previously connected, the device will automatically connect.
- 4) If the device is out of range or powered off, you must reconnect it.
  - a. Ensure no other device is connected to the Bluetooth module.
  - b. Enter the **Bluetooth Mode** on the device.
  - c. "Planet Audio PSX18" will appear on the screen.
  - d. Choose the "Planet Audio PSX18" device.

**NOTE:** You have 2 minutes before you must restart this procedure over again.

**Light Tips:** To avoid battery drain, turn off the vehicle engine when not using this product.

 
5

6

[illegible]

STREAMING MUSIC

ENGLISH

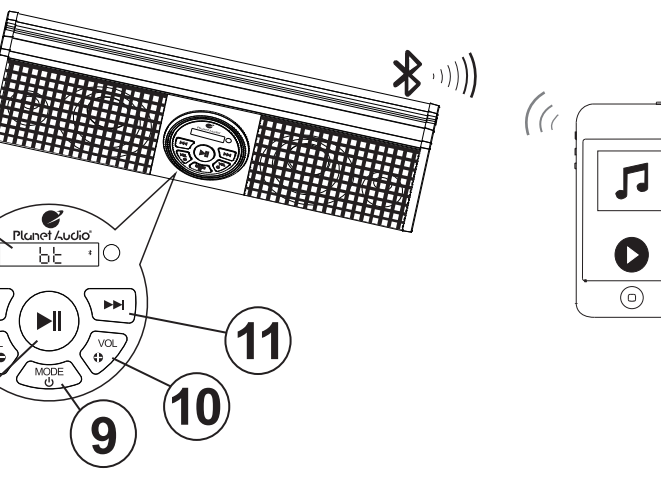

**FUNCTION CONTROLLER BLUETOOTH OPERATION**

Press the **(8) PLAY/PAUSE** once to start playing music or press the **PLAY** button from your device's touchscreen.

To skip forward to the next song, press the **(11) NEXT TRACK** button.

To skip backward to the previous song, press the **(6) PREVIOUS TRACK** button.

**VOLUME CONTROL**

To increase the volume, press the **(10) VOLUME UP** button or use your device's controls.

To decrease the volume, press the **(7) VOLUME DOWN** button or use your device's controls.

For maximum audio performance, ensure your device Bluetooth volume is set to a minimum 75% level before streaming.



7

**AUX INPUT**

**PSX18** can play audio from any device that has a headphone audio jack.

**AUX-IN OPERATION**

- 1) Power on the **PSX18** by plugging in the male cigarette lighter adaptor into the female cigarette lighter receptacle.
- 2) Press the button **(9)**. The **PSX18** will automatically go in to **AUX** mode.
- 3) Connect the integrated 3.5mm **AUX-IN** cable **(1)** to your devices headphones.
- 4) Route the wire back to **PSX18**, and secure your device.

**VOLUME CONTROL**

- 1) To raise the volume press the **(10) VOLUME UP** button or use your device's volume controls.
- 2) To lower the volume press the **(7) VOLUME DOWN** button or use your device's volume controls.

**Tips:** For maximum audio performance, ensure your device's volume is set to a minimum 75% level before stowing.

8

Planet Audio®



audio from  
the car: a 3.5mm  
cable.

to ② a

 
g:  
headphone jack

ces controls

devices controls

headphone

**USB INPUT**

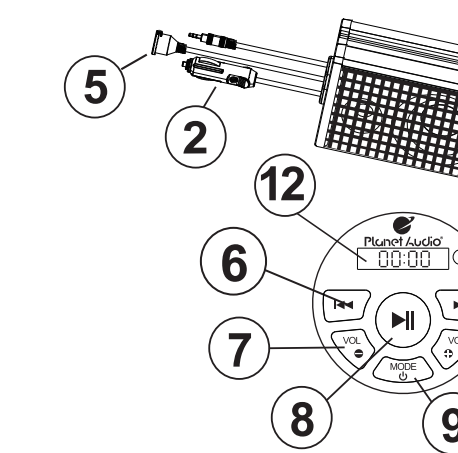

**USB IN OPERATION**

- 1) Power on the **PSX18** by plugging in the male cigarette lighter receptacle.
- 2) Press the button ⑨. The **PSX18** will automatically
- 3) Insert the USB Flash drive on ⑤ and play the music.
- 4) Press the ⑧ **PLAY/PAUSE** once to start playing the music.
- 5) To skip songs or advance, press the ⑪ **NEXT TRACK**.
- 6) To select the previous song, press the ⑥ **PREVIOUS**.
- 7) To raise the volume press the ⑩ **VOLUME UP** button.
- 8) To lower the volume press the ⑦ **VOLUME DOWN**.

**Tips:** USB can play music formats MP3 and WMA. USB can provide 1A current.

 
**ENGLISH**

**REMOTE CONTROL OPERATION**

- 1) Remote control receiver window

**POWER**


**REMOTE CONTROL**

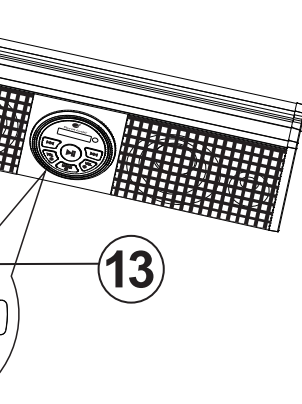

1) use the supplied remote control  
2) always recharge the battery

**OPERATION**

 13



**REPLACEMENT BATTERY - CR2025**



 
**Planet Audio®**

**ENGLISH**

**INSTALLATION**

plied adjustable bracket to secure to rails.

eck bracket before every ride

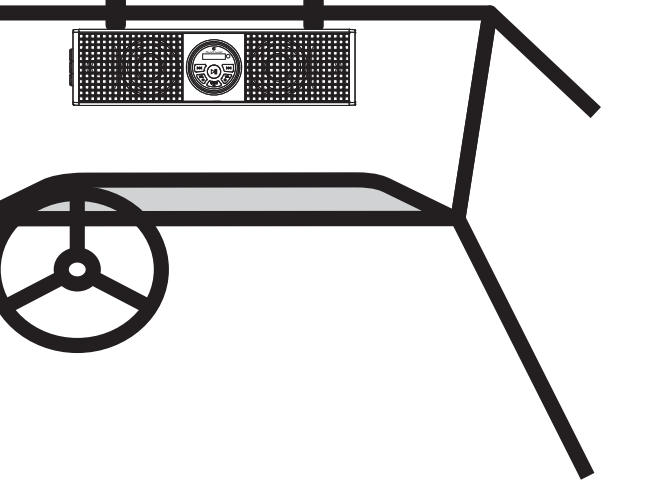

The diagram shows a side view of a horse trailer. A rectangular speaker with a circular driver is mounted in the side panel. A bracket is shown securing the speaker to the trailer's frame. A large wheel is visible at the front of the trailer.

**Planet Audio®**

**11**

| TROUBLESHOOTING              |                                                     |                                                                                  |
|------------------------------|-----------------------------------------------------|----------------------------------------------------------------------------------|
| TROUBLE                      | CAUSE                                               | SOLUTION                                                                         |
| Unit will not turn on        | The fuse is blown                                   | Check / replace the fuse                                                         |
|                              | Main acc switch not engaged                         | Turn switch to on position                                                       |
| No sound is heard            | Device volume is low / muted                        | Turn the volume level up                                                         |
|                              | Device is paused or muted                           | Check your device's volume status                                                |
| Cannot pair Bluetooth        | The Bluetooth function of the device is not enabled | Refer to the user manual for the device for how to enable the Bluetooth function |
|                              | The Bluetooth reception is poor                     | Move the device closer to the audio system or remove any obstacles between them  |
| Unit has become unresponsive | Power glitch or interference                        | Disconnect power for 10 seconds to reset                                         |

SUPPORT

For the latest information about this product please visit [www.planetaudio.com](http://www.planetaudio.com)

TECH SUPPORT: 805-751-4854  
[www.planetaudio.com/customer-support](http://www.planetaudio.com/customer-support)

DIMENSIONS

Technical drawing of the Planetaudio 12 car stereo unit. The front view shows a rectangular unit with a width of 181 mm (6 11/16 inches) and a height of 48 mm (1 7/8 inches). It features a digital display screen in the center, flanked by two circular speakers. The side view shows a depth of 59 mm (2 3/8 inches) and a height of 48 mm (1 7/8 inches). The unit is shown with two mounting brackets attached to the top.

12

