

AIM

USER MANUAL

PORTABLE DECKLESS RADIO WITH BLUETOOTH



- BLUETOOTH
- FM TUNER
- USB PLAYBACK
- AUX INPUT
- MMC PLAYBACK



INDEX

• OPERATING INSTRUCTIONS	3
• LOCATION OF CONTROLS	5
• CONNECTING THE UNIT TO POWER	6
• SPECIFICATIONS	9
• 1 YEAR LIMITED WARRANTY	10
• REPAIRS PROCEDURE	11

USER INSTRUCTIONS

Please read this instruction manual carefully before using for the first time and always keep these instructions.

OPERATING INSTRUCTIONS

When using electronic equipment, basic safety precautions must be followed, including the following:

WARNING: To reduce the risk of electric shock, fire or injury to persons:


1. Read all instructions before using the unit.
2. Use this unit only for its intended use as described in this manual.
3. Do not operate this unit if it has a damaged cord or plug, is not working properly or has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
4. **WARNING:** Do not allow children to use the unit without supervision.
5. **WARNING:** Liquids and foodstuffs must not be spilled or dropped into the unit.
6. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation.
7. This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
8. Children should be supervised to ensure that they do not play with the unit.
9. Never leave the product unsupervised. Switch off the product when it is not in use, even if this is only for a short while.
10. The unit must be free-standing. It must not be placed in a cabinet.
11. The temperature of accessible surfaces may increase when the unit is operating.
12. This unit is not intended to be operated by means of an external timer or separate remote control.



OPERATING INSTRUCTIONS - CONTINUED

13. If smoke is emitted, switch off and unplug the unit immediately.
14. **Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a slightly dampened cloth for cleaning and immediately wipe dry.
15. **Attachments:** Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
16. **Water and Moisture:** Do not use this product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
17. **Ventilation:** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided.
18. This unit must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on the apparatus.
19. **Replacement Parts:** When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
20. **Safety Check:** Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
21. **Overloading:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
22. When the AC/ DC adapter is used as the disconnect device, the disconnect device must remain readily operable. To completely disconnect the power input, the AC/ DC adapter must be completely disconnected from the mains.

LOCATION OF CONTROLS

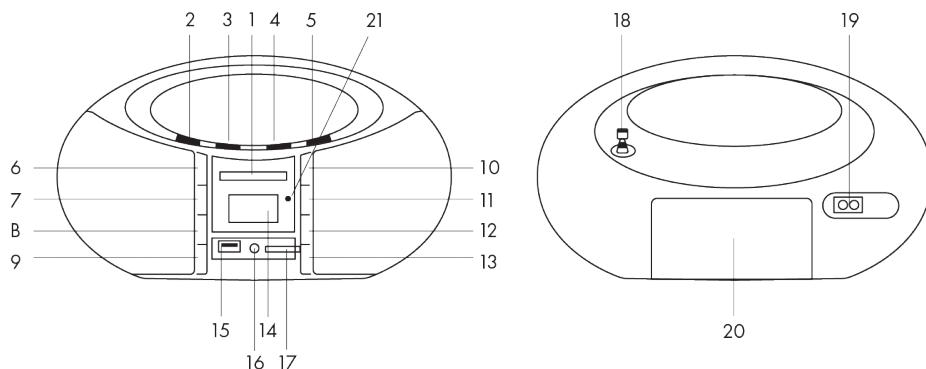

1. DIAL Scale
2. VOLUME Control
3. FUNCTION Switch
4. BAND Switch
5. TUNING Control
6.  Button
7.  Button
8. USB/SD Button
9. MODE Button
10.  Button
11.  Button

12. ALBUM UP Button
13. ALBUM DN Button
14. LCD Display
15. USB Slot
16. AUX-IN Jack
17. SD Card Slot
18. ANTENNA
19. AC Socket
20. BATTERY Compartment
21. Power Indicator

CONNECTING THE UNIT TO POWER

AC OPERATION

1. Before operating, check that the power supply voltage is the same as the power marked on the rating label.
2. Unravel the power cord and insert one end of the cord into the AC socket on the unit and the other end into a standard AC outlet.

ATTENTION

1. Never plug or unplug the power cable with wet hands.
2. When planning not to use this unit for a long time, disconnect the power cable from the wall outlet.
3. When disconnecting the power cord from the wall outlet, do not pull on the cord in order to avoid damaging the cable. Pull out the plug.

BATTERY OPERATION

1. Disconnect the AC cord set completely. Open the battery compartment door and insert 4 pieces UM-2 "C" size batteries into the battery compartment with battery polarity as shown inside the battery compartment.

LISTENING TO THE RADIO

1. Slide the FUNCTION switch to the RADIO position.
2. Slide the BAND switch to the desired radio band.
3. Turn the TUNING control to your desired radio station.
4. Adjust the sound level by rotating the VOLUME control.
5. To turn off the radio, set the FUNCTION switch to the OFF position.

AUTO PARING

1. Once the unit paired with the Bluetooth device, it will automatically pair with that device next time when you turn on the unit and that Bluetooth device.

CONNECTING THE UNIT TO POWER - CONTINUED

PLAYING MP3 FILES THROUGH SD CARD READER OR USB PORT

1. Slide the FUNCTION switch to the USB/SD position.
2. Insert your SD card into the SD card slot on the unit or plug your USS device into the USB slot on the unit.
3. The unit will read the MP3 files in the device and will play the first MP3 file.
4. Press the **▶▶** button to skip to the next track.
5. Press the **◀◀** button to go back to the previous track.
6. If your storage device has folders, press the ALBUM UP button to go to the next folder or press the ALBUM DN button to go back to the previous folder.
7. If you are playing the device using a USB and you insert a SD card into the SD card slot, the unit will stop playing the MP3 files in the USB and will start playing the MP3 files in the SD card and vice versa.
8. Press the **⏸** button to temporarily stop play and press the **▶** button again to resume play.
9. Press the MODE button to select PLAY mode in the following sequence: Repeat ONE ➡ Repeat ALL ➡ Repeat FOLDER ➡ Normal PLAY.

BLUETOOTH CONNECTION

1. Slide the FUNCTION switch to BT/AUX position and then the Bluetooth indicator will flash.
2. Turn on your Bluetooth of your Bluetooth device and search the speaker for connection. Your Bluetooth device should find "POR1001XD".
3. The speed of flash of the Bluetooth indicator will be slower if the connection is successful.
4. Select and play the audio file though your Bluetooth device.
5. Press the **▶▶** button to skip to the next track.
6. Press the **◀◀** button to go back to the previous track.
7. Press the **⏸** button to temporarily stop playing and press the **▶** button again to resume playing.
8. Adjust the sound level by rotating the VOLUME control.
9. To stop Bluetooth operation, disconnect your Bluetooth device.



CONNECTING THE UNIT TO POWER

AUX-IN CONNECTION

1. Slide the FUNCTION switch to the AUX position.
2. Insert one side of the audio cable (requires 3.5 mm stereo plug, not supplied) into the line-out jack or phone jack on your MP3 player or audio device and insert the other side into the aux-in jack on the unit.
3. Turn your audio MP3 player or audio device on and follow the playback instructions.
4. To turn off this function, simply turn off your MP3 player.



SPECIFICATIONS

Frequency Range: AM : 540-1600 kHz
FM :88-108 MHz

Power Supply: AC 230V - 50Hz
DC 6V (4 x UM2 'C' size batteries)
Batteries not supplied



1 YEAR LIMITED WARRANTY

The Manufacturer hereby provides a warranty to the original purchaser of this product (the consumer) that this product will be free of manufacturing defects in materials and workmanship which under normal, personal, family or household use (commercial use expressly excluded) manifest themselves within the 1 year from the date of purchase.

EXCLUSIONS

- The warranty does not include and will not be construed to cover products damaged as a result of disaster, misuse, commercial use, not in accordance within the written instructions included with the product, abuse and/or any non-authorised modification of the product, incorrect installation of the product or normal wear and tear.
- Insect infestation of the electrical or motor makes the claim invalid.
- Customer abuse do not fall under warranty.

WAIVER

The warranty and the obligations of the Manufacturer provided herein are in lieu of, and the consumer, waives all other warranties, guarantees, conditions or liabilities, express or implied, arising by law or otherwise, including without limitation, any obligation of the manufacturer in respect of any injury, loss or damage (direct, indirect or consequential) arising out of the use of, or inability to use this product and whether or not occasioned by the manufacturer's negligence or any act or omission on its part.

PROOF OF PURCHASE

Any claim in terms of the warranty must be supported by a proof of purchase. If such proof is not available, then notwithstanding anything to the contrary herein, the service agent's prevailing charges for services/repairs and/or spares will be payable by the Consumer upon collection of the repaired product. The Consumer should **call the Pick n Pay CUSTOMER CARE** number on 0860 30 30 30 (only in South Africa). Customers residing outside South Africa may return the product back to a Pick n Pay store. During the warranty period the product may only be serviced and/or repaired by the Manufacturer's duly authorised agent(s).



If this product proves to be faulty during normal use due to defective materials or workmanship. Refer to our website for terms and conditions.



REPAIRS PROCEDURE

Should you experience any faults on your Aim product, please adhere to the following procedure to have the fault rectified speedily and professionally.

You can return the product to the store.

Call the Pick n Pay CUSTOMER CARE number on 0860 30 30 30 (only in South Africa) to report the fault and make arrangements for the next steps.

Note: Should you live in an outlying area or outside South Africa, it may be necessary to return the product to the store nearest to you.

COST OF REPAIRS

UNDER WARRANTY

Any items still under warranty will be repaired free of charge, as long as it complies with the terms and conditions of the warranty (refer to "warranties" section in this manual). Any items that need to be repaired that are NOT covered in the warranty will be for the consumer's expense. A quote for the repair/replacement of these items will be provided to the consumer for approval prior to repairs being conducted.

OUT OF WARRANTY

Any items that need to be repaired once the warranty has expired will be for the consumer's expense including call out fees. A quote for the repair/replacement of these items will be provided to the consumer for approval prior to repairs being conducted.

We are confident about the quality of our products. If you are not 100% satisfied with our product we will gladly exchange or give you your money back.

Raymond Ackerman
Founder of Pick n Pay

Specially packed for
Pick n Pay Retailers (Pty) Ltd.
Pick n Pay Office Park,
101 Rosmead Avenue,
Kenilworth, Cape Town, 7708
www.picknpay.co.za

CUSTOMER CARE
Sharecall: 0860 30 30 30
ONLY IN SOUTH AFRICA
customer care@pnp.co.za
Product of China

MODEL NUMBER:
POR1001XD

AIM