

CHAOBA

INSTRUCTION MANUAL

(English)

ELECTRIC HAIR DRYER

Model: 2800



Dear customers ! Thank you very much for buying CHAOBA products . Before use , please read this instruction manual . Save it for future reference.



IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off:

To reduce the risk of death by electrical shock:

1. Always “unplug it” immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, “unplug it” immediately. Do not reach into the water.

WARNING- To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
6. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
7. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
8. Never use while sleeping.
9. Never drop or insert any object into any opening or hose.
10. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
11. Do not use an extension cord with this appliance.
12. Do not direct hot air toward eyes or other heat sensitive areas.
13. Attachments may be hot during use. Allow them to cool before handling.
14. Do not place appliance on any surface while it is operating.
15. While using the appliance, keep your hair away from the air inlets.
16. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.




CHARACTERISTICS

- Ionic function
- 2 speed settings, 3 temperature settings
- Cool shot
- Concentrator
- Hang-up Hook
- Removable filter
- DC motor
- Nominal voltage: AC230V ~ 50Hz
- Length of the power cord : 1.5 m
- Body color: Black

DETAILS

- A. Concentrator
- B. Air Inlet Cover
- C. Cool Shot
- D. Switch (A)
- E. Switch (B)
- F. Hanging loop

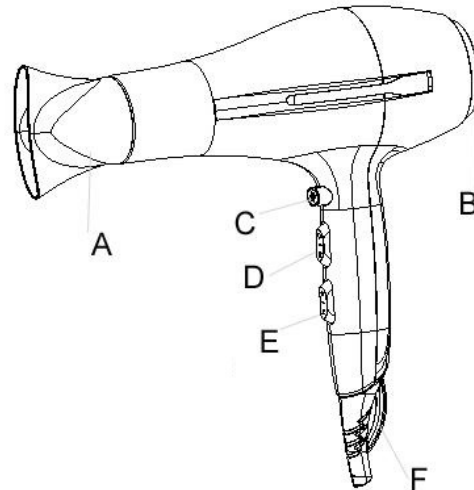

HOW TO USE

1. Adjust the desired blowing strength:
Position 0: OFF
Position 1: Half power, medium temperature for gentle drying and styling
Position 2: Full power, high temperature for quick drying
 2. Use the high setting for drying hair, and use low setting for styling.
 3. Should the hair dryer stop working for any reason, turn it off at once and let it cool down.
 4. Always ensure the switch is set to OFF position before plugging the unit in the power outlet.
- Cool shot:** with this switch it is possible to interrupt the heating process so that the air can be mixed according to individual requirements.

PACKAGE CONTENTS

Hair dryer
Concentrator

