



Thank you for purchasing Valore Wireless Portable Family Karaoke System (BTS39). Please read the user manual thoroughly before using.

Understanding the product

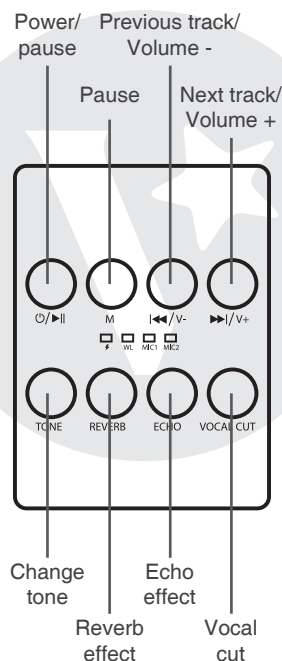

How to charge

1. When battery is low, the device will shut down automatically
2. Connect a DC 5V charger to the charging connector to charge the speaker or microphones. The charging indicator will turn red when charging and turn off when fully charged.

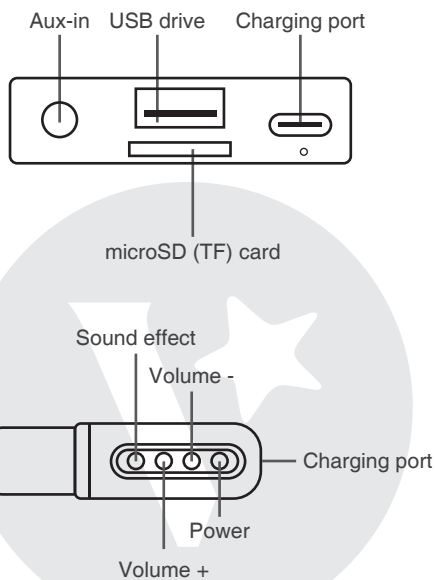

Power/Pause

Press and hold to turn on/off the power
Press to pause or play music

Previous track/Volume - & Next track/Volume +

Press to choose the previous/next track.
Press and hold to adjust volume

Mode button

Press to switch between Bluetooth, USB drive, microSD card and Aux mode

Vocal cut

Press to remove vocals from a song leaving only the background music

Reverb/Echo sound effects

Press to choose the corresponding sound effect.
The default is the Echo effect.

Change tone

Press to switch between original, male, female, child and magic sound effect

Sing via Bluetooth

1. Turn on the speaker
Press and hold the power button, BT indicator will flash.
2. Bluetooth connection
Turn on the Bluetooth on your smartphone. Search for "BTS39" to pair. The speaker will make a tone when connection is successful. BT indicator will light up.
3. Turn on the microphone
Press and hold the power button on the microphone. The microphone will be connected to the speaker automatically and the corresponding indicator on the speaker will light up.
4. Adjusting sound effect
Adjust the volume of the speaker and microphones to choose sound effect.
5. Play music
Open a music app on your smartphone and play any music. The volume of the music can also be adjusted on your phone. Press the vocal cut button to remove vocals from the song.