 


Quick Operation Guide


Attention Before Use

Please neatly arrange desks, chairs and household appliances to prevent the robot getting stuck during cleaning.

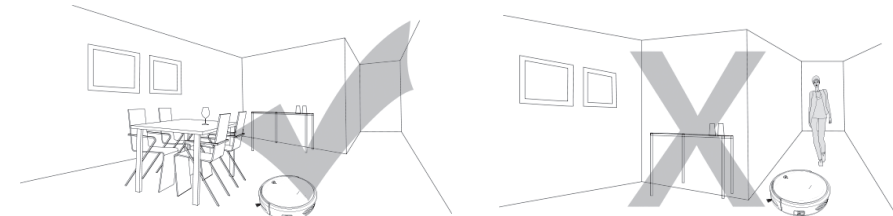

Please do not stand in such narrow areas as doorways and aisles in case the robot fails to clean these areas.

The messy power cords, toys and other objects on the floor may entangle the robot, please kindly organize them.

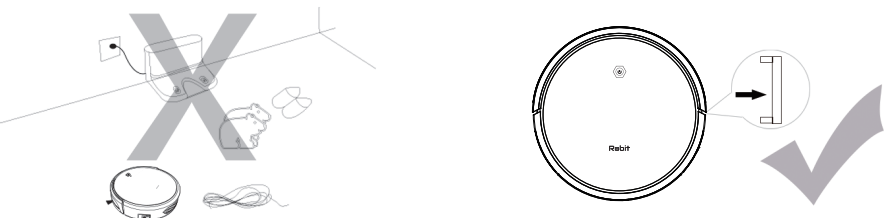


Remove the white protective strip and the transparent protective film on the infrared front bumper before using. Otherwise, the robot may not work properly.

Charging the Robot


Preparation before charging

Before installing the charging base, remove the protective film on the charging base, and wipe the installation ground till clean.

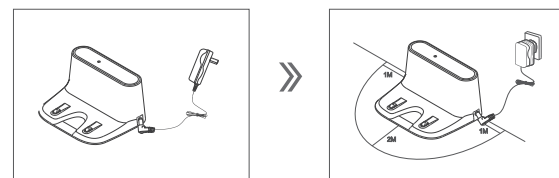

English

Place the charging base on a hard, level surface and against the wall. Remove objects within 3ft/ 1m on the left and right side and within 6ft/ 2m in the front of charging base. Please do not place objects with strong reflecting surfaces around the charging base, such as mirrors.

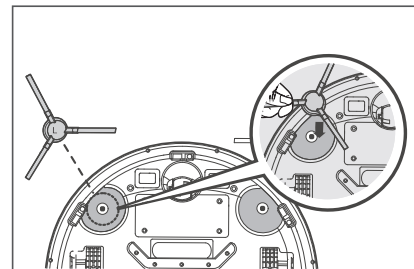

Install the side brushes properly.

Charging mode


*Turn on the power switch on the robot (1 for power on, 0 for power off)

*The blue light turns on, the robot is activated.

*When the orange light is breathing, the robot is charging.

*When the blue light is constant, the charging is completed.

*You can charge your robot in the following ways:

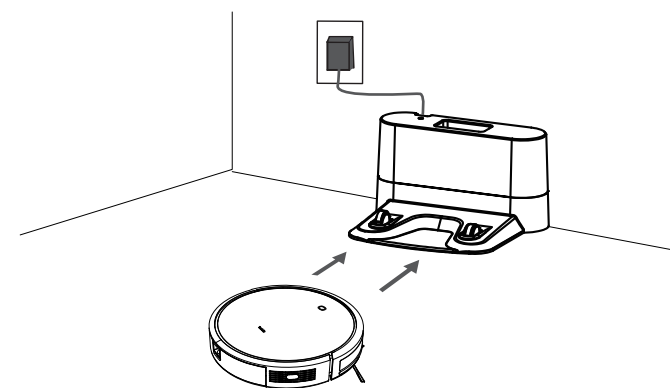


Note: Make sure that the Electrode Contact Pins on the charging base match the Electrode Contact Pins on the robot, and place the product on the charging base or press the recharge button on the remote control for 3-5 seconds, the robot will return to charge automatically. If successful, the product will emit a series of beeps, once the switch button gets bright, the product can be used.

Start Cleaning


Automatic Cleaning Mode

- Press  once to activate the host.
- Press  on the host or  on the remote control to start automatic cleaning.

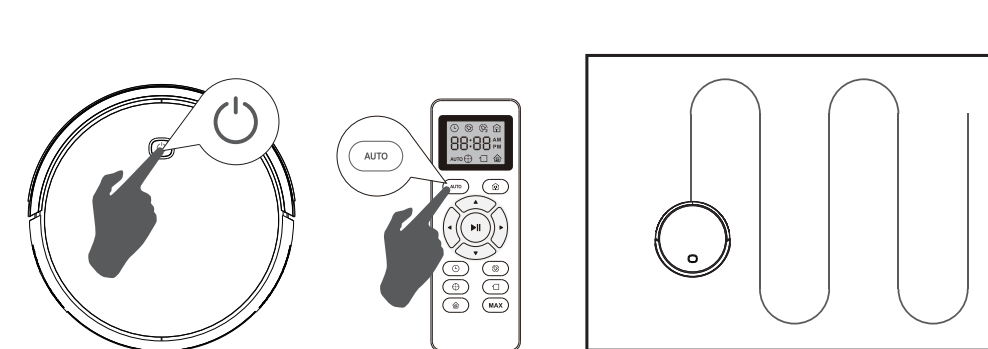


Max. Suction Cleaning Mode

 - In the automatic cleaning/single-room cleaning mode, by pressing  on the remote control, the main unit can increase the suction power and perform deeper cleaning at the maximum suction power. Vacuum suction function is off by default.

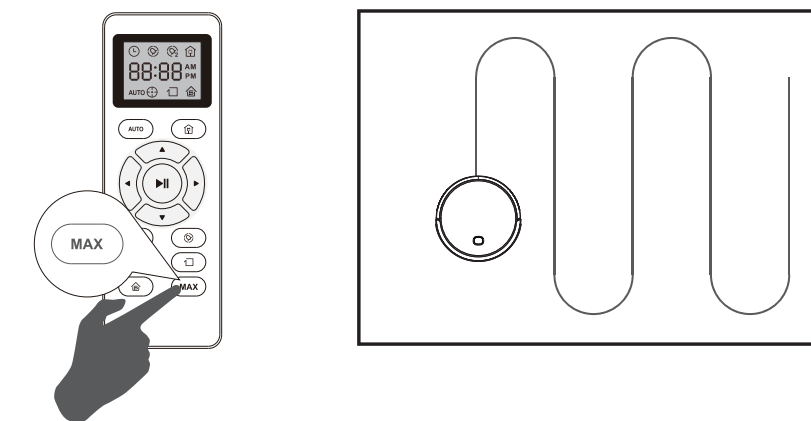


Stop Cleaning

 - Press  on the host or  on the remote control to pause the robot vacuum being cleaned.
- If you want to continue cleaning, press  on the host again or  on the remote control.

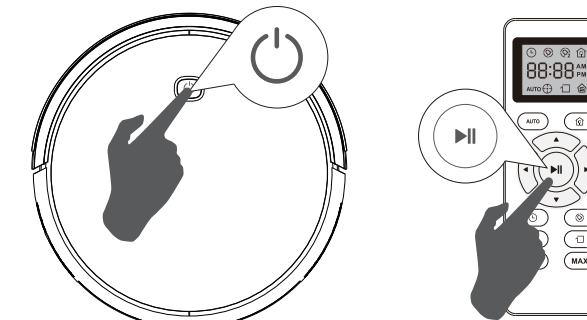

Power Off

 - Press  until the light of the host goes out.

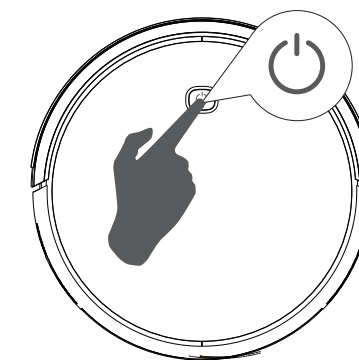

【This guide is not a substitute for instructions. Please refer to instructions if you need to learn further details and guidelines.】