


Robit

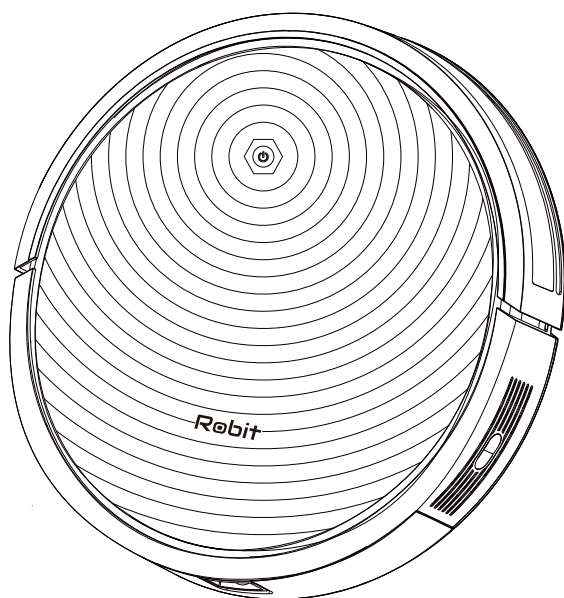

User Manual

R3000

Robot Vacuum Cleaner



Table of Contents

Important Safety Instructions	P2-P4
About Your Robit R3000 Robot	P5-P8
Package Contents	P5
Product Diagram	P6
Specifications	P8
Instructions of Indicator Light	P8
Using Your Robit R3000 Robot	P9-P17
Note Before Use	P9
Preparation Before Use	P10
Operation	P13
Cleaning Mode	P14
Reservation Setting	P15
Cleaning and Maintenance	P18-P20
Clean Dust Collector and Filter	P18
Clean Side Brushes	P19
Clean Universal Wheel	P19
Clean Downward Sensor	P20
Clean Dust Suction Port	P20
Clean Electrode Contact Pins and Charging Base	P20
Trouble Shooting	P21-P22
Robit Customer Care	P23



■ Important Safety Instructions

To reduce the risk of injury or damage, please kindly read these safety instructions before using, and carefully keep it for further reference.

Cautions

- 1.1 Please use this product according to the instructions. Any operation that is not in accordance with this manual may cause damage to this product.
- 1.2 The product cannot be operated and used by children under 8 years old or mentally impaired people. If it is necessary, please make sure you are under the supervision of the guardian or somebody else. Please do not allow children to ride on the product, or use the product as a toy.
- 1.3 Before using the product, please place the power cord and small items on the floor to avoid the product being blocked during cleaning. The edges of the carpet should be folded under the carpet. The hanging curtains, tablecloths, things like that, should not touch the floor.
- 1.4 If there is a suspended environment such as a stair, please firstly test whether the product can detect the edge of the suspended area without falling. If a protective fence is required at the edge of the suspended area to prevent the product from falling, Please ensure that the protective facility will not cause personal injury such as tripping.
- 1.5 Please ensure that the power supply voltage matches the voltage marked on the charging base.
- 1.6 This product is an indoor and household item. Do not use it in outdoors.
- 1.7 Only use the original rechargeable battery and charging base provided by the manufacturer. Non-rechargeable batteries are strictly prohibited. For battery specifications, please refer to "Specifications".
- 1.8 When using the product, please ensure that the dust collector and filter are installed in place.
- 1.9 Do not use the machine to clean objects more than 0.63inch/ 16mm in diameter to prevent the suction port from being blocked.



Dangerous

2.1 Do not use the product in an environment with open flames or fragile items.

2.2 The working temperature range is -10°C - 50°C, do not use it in low temperature or high temperature environment.

2.3 Please do not place the hair, clothes, fingers and other parts of the human body near the openings and moving parts of the product.

2.4 When in suction mode, do not use the product in a wet or stagnant environment.

2.5 Do not allow the product to pick up any flammable items, such as gasoline, printers or photocopiers and toner. Do not use the product in cleaning areas with flammable items.

2.6 Do not allow the product to pick up any burning products, such as cigarettes, matches, ashes and other items that may cause fire.

2.7 Do not place items on the suction port. Do not use it when the suction port is blocked. Please clean up the dust, cotton wool and hair around the suction port in time to ensure smooth air circulation of the suction port.

2.8 Please use the power cord carefully to avoid damage, do not use the power cable to drag or lift the product and product charging base, do not use the power cord as a handle, do not clamp the power cord in the door gap, do not pull the power cord at sharp corners, do not allow the product to run on the power cord, and the power cord should be kept away from any heat sources.

Cautions

3.1 If the power cord is damaged, it should be replaced by a professional In the manufacturer's maintenance department or similar department in order to avoid danger.

3.2 Do not use a damaged charging stand.

3.3 Do not use damaged power cord or power socket to charge the product. Do not use the product when it cannot work properly due to drop, damage, outdoor use or water ingress. To avoid injury, the product should be repaired by the manufacturer or its service department.



Cautions

- 4.1 Before cleaning and maintaining the product, be sure to unplug it from the power outlet and turn off the power switch.
- 4.2 Do not allow the robot to inhale liquids such as water, otherwise the product may be damaged.
- 4.3 Do not disassemble the battery of this machine without permission.
- 4.4 Please clean up the tangled hair on the universal wheel and side brush in time.
- 4.5 Please clean up the garbage in the dust box in time to prevent the High-efficiency filter from being blocked, affecting the vacuuming effect.
- 4.6. Before discarding the product, please remove the product from the charging base, turn off the power switch and remove the battery. Please remove and discard the product battery according to the local laws and regulations.


Dangerous

- 5.1 Even if the product is severely damaged, it is forbidden to incinerate the product because the battery of the product may cause explosion.
- 5.2 If the product is not used for a long time, please power off the product.
- 5.3 Please check whether the charger and socket are properly connected, other-wise, it may cause fire.
- 5.4 The power cord of the charger must be plugged and fastened, otherwise it may cause electric shock, short circuit, smoke or fire.
- 5.5 Do not stand or sit on the robot, otherwise it may cause damage to the robot or cause personal injury.
- 5.6 Do not touch the power cord of the appliance when your hands are wet, otherwise it may cause electric shock.
- 5.7 Only authorized technicians can disassemble this product. Users are not recommended to disassemble this product by themselves.




■ About Your R3000 Robot Vacuum Cleaner


Package Contents

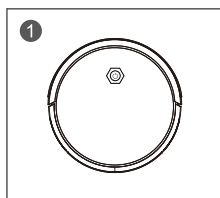


Robit R3000

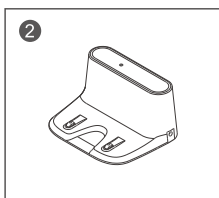


Charging Base

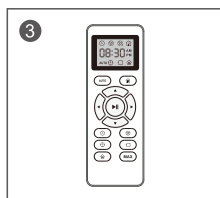


Remote Control

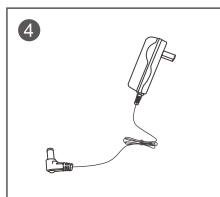


Adapter

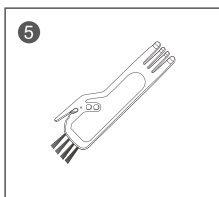


Cleaning Brush

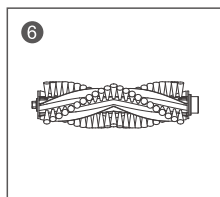


Roller Brush

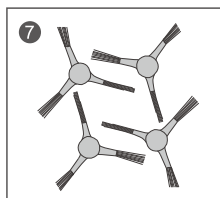

Side Brushes

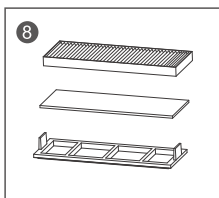



Filter

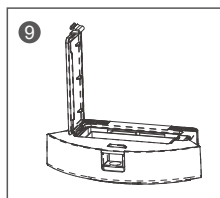



Dust Collector

■ Product Diagram


Host chart

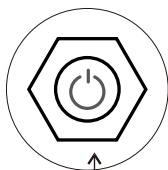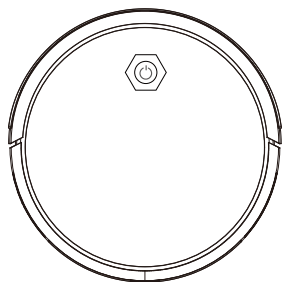


ON/OFF

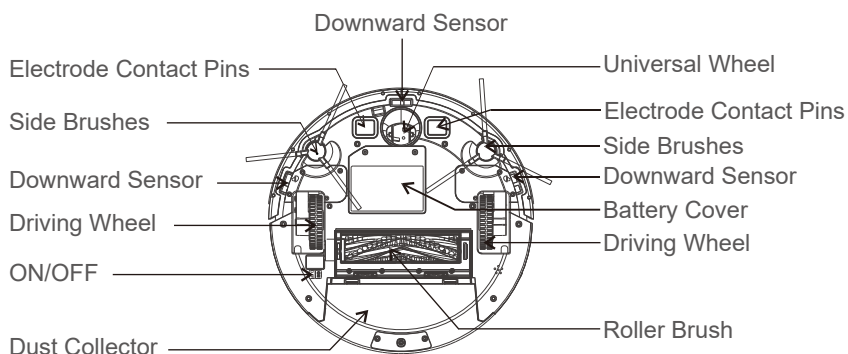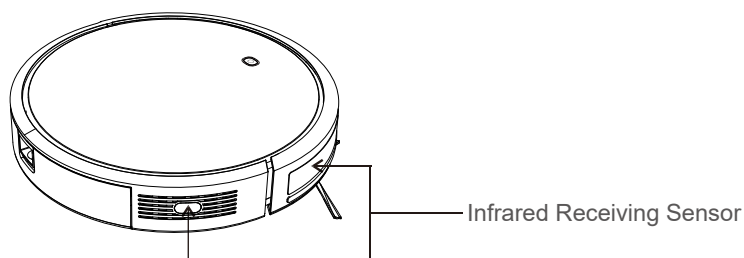

Charging Dock


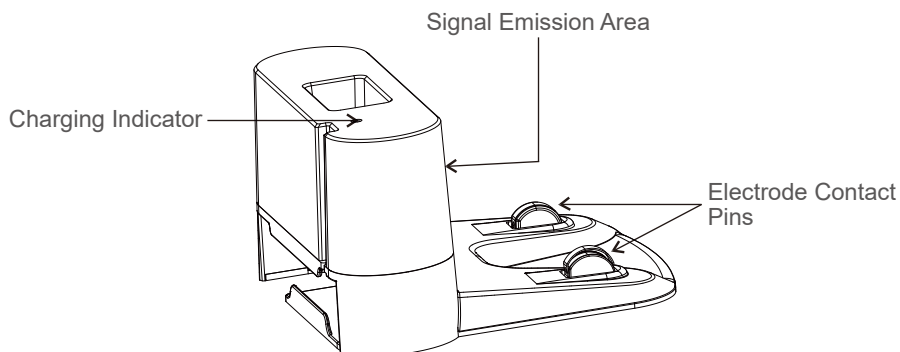


Remote Control

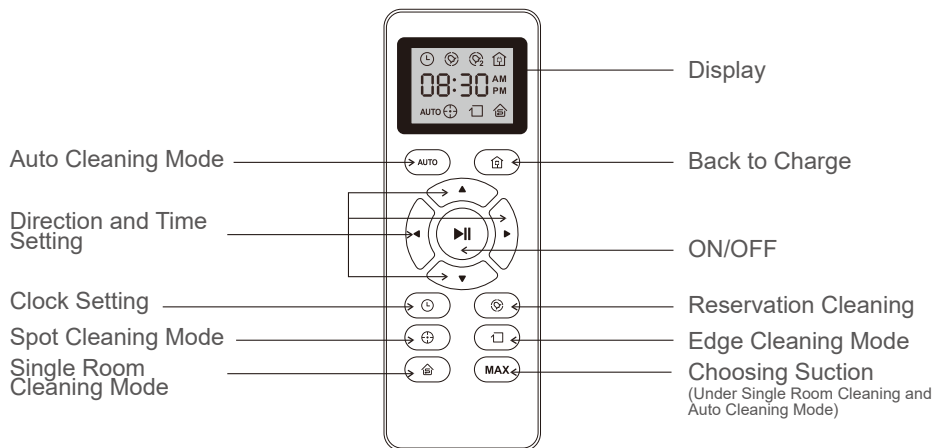

NOTE: Install a pair of AAA batteries before using the remote control for the first time, please make sure the polarity of the battery is installed correctly. When using the remote control, please point to the robot vacuum, the working distance is 0-5 meters.

 ■ Specifications



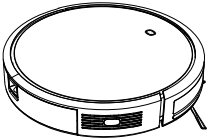

Host		
	Model	R3000
	Input	19V 0.6A
	Rated Voltage	14.4V
	Rated Power	25W
	Battery	DC14.4V Li-ion battery 2600mAh
	Dust Box Capacity	500ML
	Cleaning Time	120mins
	Charging Time	5-6h
	Input	DC19V 0.6A
	Output	DC19V 0.6A



Instruction of indicator light	
LED indicator	Status
Breathing Orange	Charging
Solid Blue	Stand by/ Cleaning/ Fully Charged
Light off	Power Off When the product is not on the charging base and inactive within 5 minutes, the indicator light will automatically turn off
Solid Orange	Low Power/ Searching Charging Dock
Breathing Red or Solid Red	The robot has a problem

■ Using Your R3000 Robot

Note Before Use

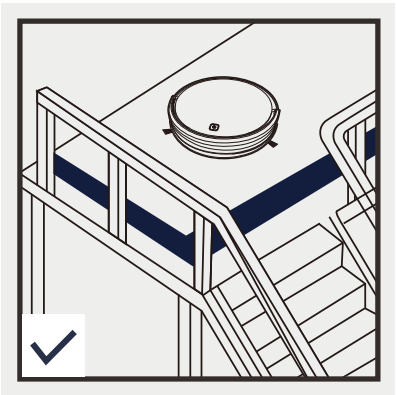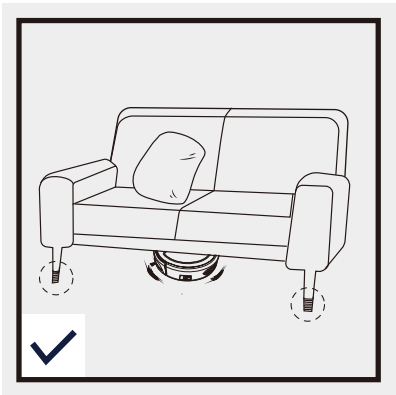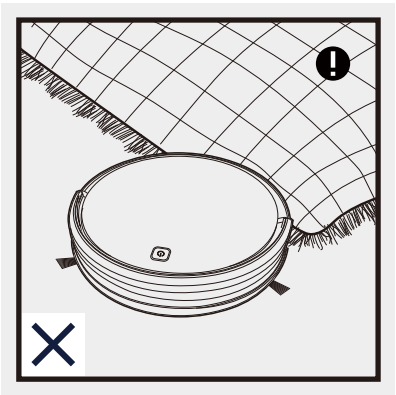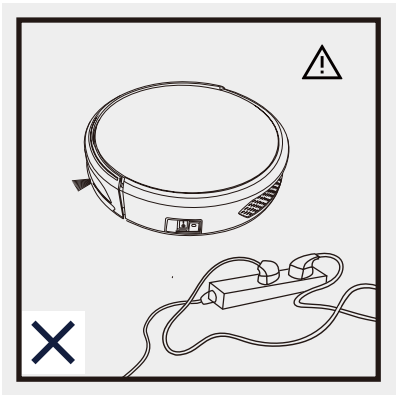


- Remove the power cords and small objects from the floor that may entangle the robot.
- The robot can cross the floor of 0.59inch/ 15mm heights and 15° inclination, but it is not suitable for long-pile carpet. It is recommended to use on the floor, tile and thin carpet. (Thinner than 0.3inch/ 0.8mm)
- Keep the robot away from space lower than 2.4inch/ 80mm to prevent it from being stuck.
- R3000 robot has anti-drop sensors to prevent it from falling down from heights. It is recommended to set up physical barriers to block off areas where the robot may fall.

■ Preparations Before Use

Quick Start



Connect the charging base and put the remaining cables into the cable storage box at the bottom of the charging base.

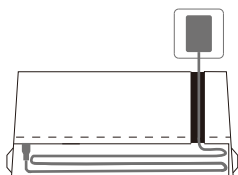


* Warm Reminder: Unsaved cables may trap the host being cleaned or retrieved.

Place the Charging Base


- Place the charging base on a hard, level surface and let it against the wall.

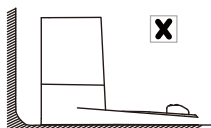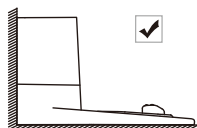


- Remove objects within 3ft/ 1m of the left and right side and within 6ft/ 2m

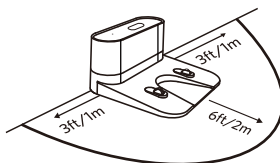


- Connect the plug of the adapter to the power socket of the charging base, and the other end to the wall socket.

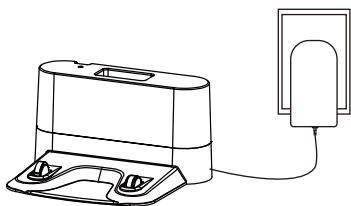

* Warm Reminders: Make sure that the charging base is on when the power is turned on, otherwise, the product cannot be automatically recharged.

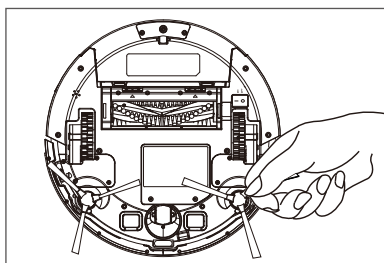


Install the side brushes properly

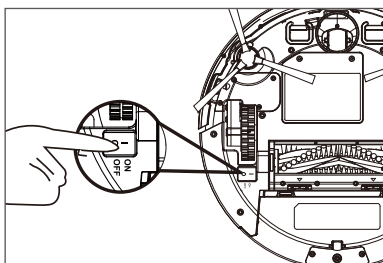

Turn on the button at the bottom of the host (1 is turn on, 0 is turn off)

Activate the Robot Vacuum


Make sure that the Electrode Contact Pins on the charging base matches the Electrode Contact Pins on the robot, and place the product on the charging base. If successful, the product emits a series of beeps, once the switch button is lit, the product can be used.

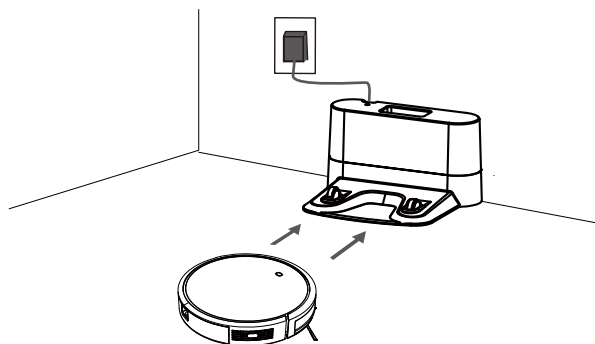

■ Operations Guide


Start Cleaning

- Press the  once to activate the host.
- Press the  on the host or the  on the remote control to start automatic cleaning.

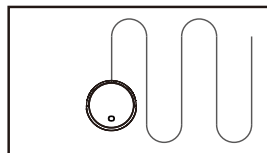

Stop Cleaning

- Press the  on the host or the  on the remote control to pause the robot vacuum being cleaned.
- If you want to continue cleaning, press the  on the host again or the  on the remote control.

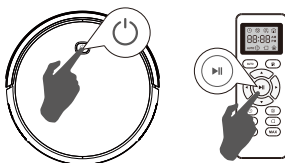

Power Off

- Press the  until the light of the host goes out.




■ Cleaning Mode

Automatic Cleaning Mode

- Press the  on the main unit or the  on the remote control to start automatic cleaning.
- If the battery is low before the cleaning is completed, the host will return to the charging base for charging.




* Warm Reminder: During the recharging process, there may be a phenomenon that the charging base cannot be found. At this time, the host will flash a red light and beep for four times. Please put the host manually into the charging base for charging.

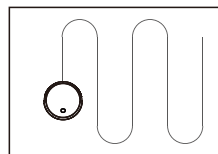


Spot Cleaning Mode

Select the spot cleaning mode, the host rotates outward spirally, about 1 m in diameter to focus on cleaning the local area, and then circle inward to the starting point. In this mode, the machine increases suction power to provide you with the best cleaning of the desired location. Place the machine in a partially dirty place, and then press the  on the remote control.

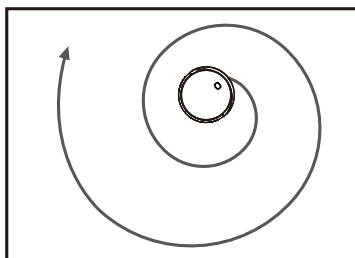


Max. Suction Cleaning Mode

In the automatic cleaning/single-room cleaning mode, by pressing the **(MAX)** on the remote control, the main unit can increase the suction force power and perform deeper cleaning at the maximum suction force. Vacuum suction function is off by default.

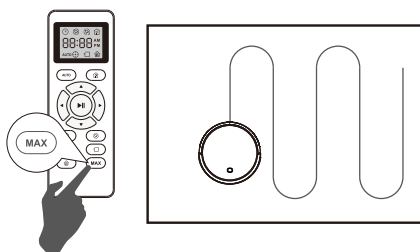


Edge Cleaning Mode

Press the **(□)** on the remote control and sweep along the edges to ensure sweeping along the walls and around the furniture legs.

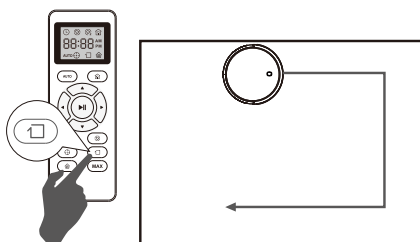

Single Room Cleaning Mode

When a specific room needs to be cleaned, press the **(🏠)** button on the remote control.

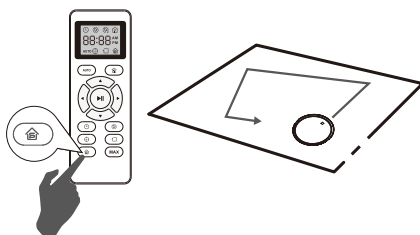

Tips: In this mode, the R3000 robot will stop after cleaning about 30 minutes. Please make sure the door is closed to prevent the R3000 from leaving the room.




Time and Schedule Cleaning

The host can make schedule settings for the cleaning time. The schedule timing function can only be realized by the remote control. Before making the schedule timing, please ensure that the time of the remote control is consistent with your local time.


* Tips: When you set the clock or the schedule, please make sure that the remote control is close to the machine.

Remote Control Display Time Setting


- Press the  on the remote control. The setting in the time display starts to flash.

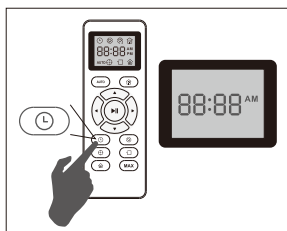

- Press the ◀ or ▶ to select the minute or hour setting. Press the ▲ or ▼ to set the desired time.



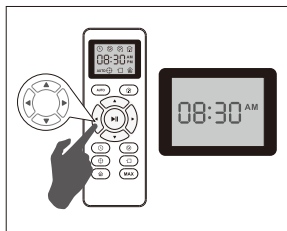


- Press the  again, after the clock is set, the machine will emit a "beep".

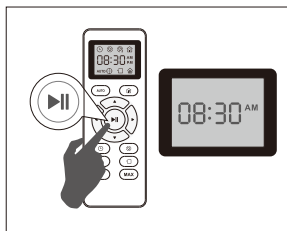


Scheduled Cleaning Setting

- Press the  on the remote control, and then start showing one hour in the display to set the cleaning schedule.
- Press the ◀ or ▶ to select the minute or hour setting. Press the ▲ or ▼ to set the desired time.
- Press the  again, when the cleaning plan setting is completed, the machine will emit a beep.

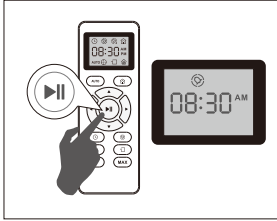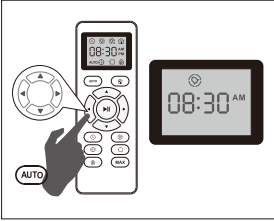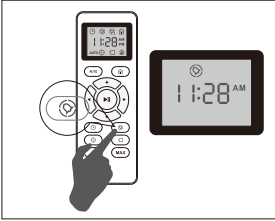

Cancel Scheduled Cleaning

- Press the  on the remote control for about 4 seconds. When the scheduled cleaning plan is canceled, the machine will make a beep.

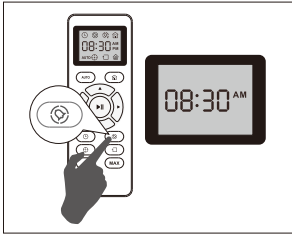


■ Cleaning and Maintenance

In order to ensure the service life and the best cleaning performance of the robot vacuum, please refer to the following instructions to clean and maintain the robot vacuum parts.


Robot Part	Care Frequency	Replacement Frequency
Dust Collector	After each use	-
Filter	Once per week	Every 2 months
Roller Brush	Once per week	Every 6-12 months
Side Brushes	Once per month	Every 3-6 months
Roller Brush Protector	Once per month	Every 3-6 months
Sensor	Once per month	-
Electrode Contact Pins	Once per month	-
Universal Wheel	Once per month	-



Clean Dust Box

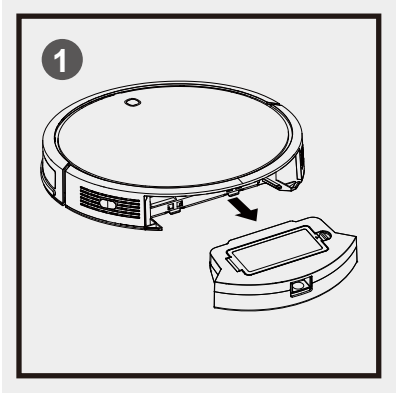


1. Press the dust box release button to remove it.

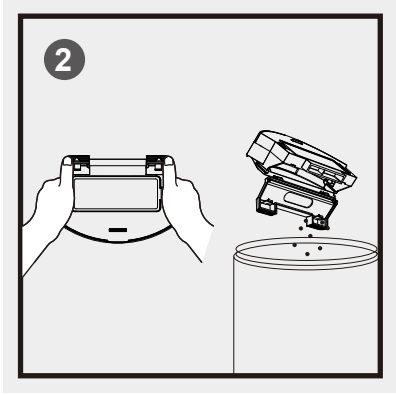


2. Open the lid of the dust box to empty it.

Clean Filter

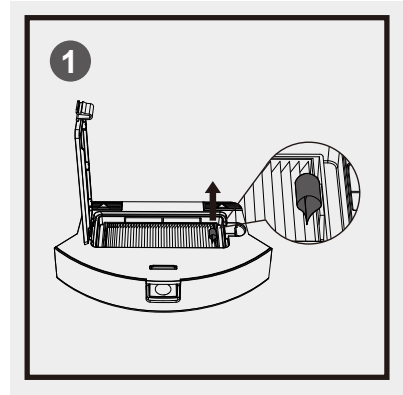

1. Pull the white label to remove the filter.


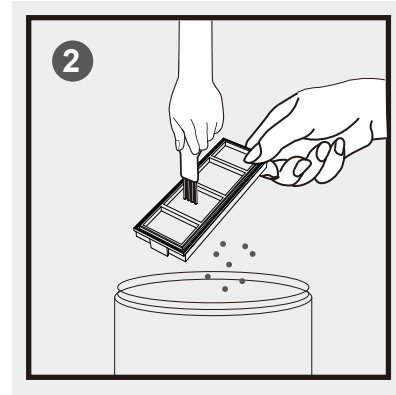


2. Shake off the dust on the filter.




■ Clean Side Brushes, Roller Brushes, Universal Wheels and Sensors

1. Remove the roller brush and clean the dust suction channel with a cloth.

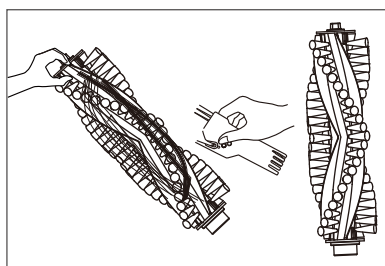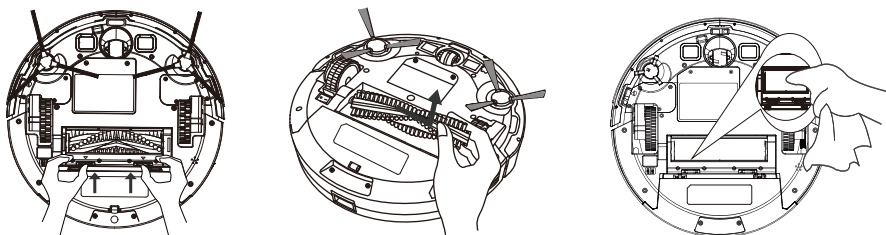


2. Clean the roller brush.


Remove the hair from the roller brush with the cleaning tool provided.

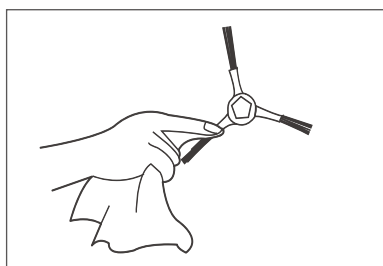

3. Remove the side brush. Clean the side brush with a cloth.

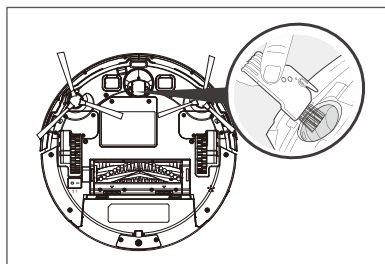

4. Clean the universal wheel with a cleaning brush.

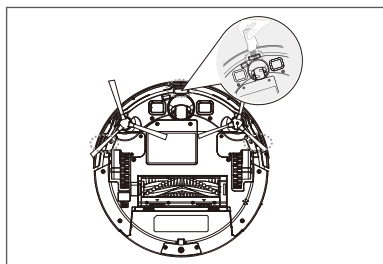

5. Use a cleaning brush to clean the dust on the sensor to ensure the best performance.

■ **Trouble Shooting**

When the machine breaks down, the red LED will flash or be always on when the LED is broken, and it will be accompanied by a beeping sound. Please refer to the following sounds and light flashing tips to solve the problem of the robot vacuum. If you still can't handle it, please contact our customer services at any time.

* Tips: For some faults, you can solve the problem by restarting the machine. To restart the machine, press the switch on the bottom of the machine, you will hear a beep, indicating that the restart was successful.

Prompt		Cause	Solution
Always Red	1 beep	There may be an obstacle stuck in the side wheel	Restart after cleaning the side wheels
	2 beeps	There may be an obstacle stuck in the side brush	Restart after cleaning the side brush
	3 beeps	The fan may has an obstacle	Clean the dust box and fan, then restart
	4 beeps	There may be an obstacle stuck in the roller brush	Remove and clean the cover and roller brush of the vacuum and restart
Flash Red	1 beep	Bumper may be held up	Press the left, center and right side of the anti-collision beam with your hand to check whether it can rebound automatically
	2 beeps	There are dirt on the downward sensor or the machine is on a suspended ground/in dark environment	Clean the down-ward sensor of the machine, place the machine on level ground, and restart
	3 beeps	The battery is low	Put the robot vacuum back to the charging base for charging



Prompt	Solution
The host cannot be activated	1. Make sure the main switch at the bottom of the host is turned on 2. Make sure the battery is fully charged 3. Replace the remote control with a pair of AAA batteries 4. Make sure the distance between the remote control and the host is 0-5 meters 5. If the problem is not resolved, turn off the main switch at the bottom of the host, and then turn it on again
Remote control fails	1. Replace the new battery and install it correctly 2. Make sure that the power switch of the host is turned on and there is sufficient power to complete the operation
The host suddenly suspends work	1. Check if the host is trapped by an obstacle 2. Check if the power is too low 3. If there is still a problem, turn off the main switch at the bottom of the host and then turn it on again
The host does not automatically clean at the scheduled time	1. Make sure the host power switch is turned on 2. Make sure that the time displayed on the remote control is consistent with the local time (AM/PM), and set the time correctly. Check whether the host has enough power to work (you can check the current indicator status)
Weak suction power	1. Check whether there is an obstruction blocking the suction port 2. Empty the dust box 3. Clean the filter 4. Check if the filter is wet, make sure the filter is completely dry before use
The host cannot charge	1. Make sure the socket is charged and fully contacts the electrode contact pins of the charging stand. When the contact is good, you will hear a beep 2. Clean the electrode contact pins with a dry cloth
The host cannot return to the charging dock	Remove obstacles within 1 meter on the left and right sides of the charging base and within 2 meters in the front. The charging base can be placed according to the instruction manual. When the host is near the charging base, it will return faster. If the charging base is located far away, the host will need more time to return, please be patient and wait for it to be recharged. If in the process of retrieving the charge, the remaining power of the host is too low, it will stop at the same place, the red light flashes, and there will be four beeps
Roller brush does not rotate	1. Check if the roller brush is installed correctly. 2. Clean the roller brush.
Abnormal running path	1. Clean the down-ward sensor with a dry cloth 2. Clean the drive wheel 3. Press the left, center and right side of the anti-collision beam with your hand to check whether it can rebound automatically 4. Turn off the power switch, restart the host



Robit Customer Care

Ultra-long Warranty Promise from Robit

30-day money back guarantee for ANY reason for 30 days after the date of purchase. Return your undamaged Robit product and receive a full refund for ANY reason.

12-Month Limited Product Warranty for quality-related issues.

For 12 months after the date of purchase, we deal with all quality related issues with a replacement or a limited refund.

Warm Tip: Be sure to use your product as directed.

Limitations

Our return and exchange service is limited to all purchases made from Robit Direct on Amazon. If you purchased through a different retailer or other stores, please contact them directly.

Unauthorized reselling of Robit Direct products is prohibited.

Warranty-related shipping costs can only be covered in the country of purchase.

For orders over 30 days, the buyer is responsible for return shipping expenses. We will arrange the replacement shipment after our warehouse received the returned item.

Thank you for choosing Robit.



