 


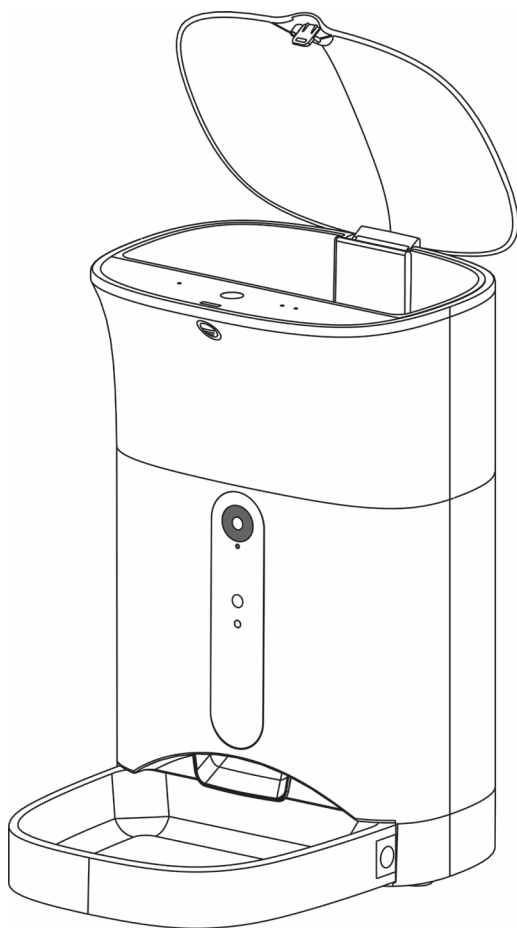


KOGAN SMARTERHOME™ SMART WI-FI PET FEEDER 4.3L

WITH HD CAMERA


KASMPFDCMA



 
COMPONENTS

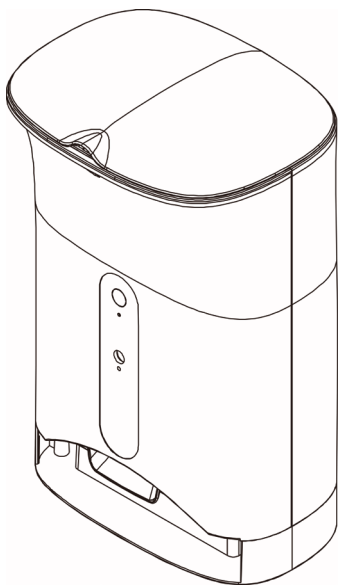

1 Main body

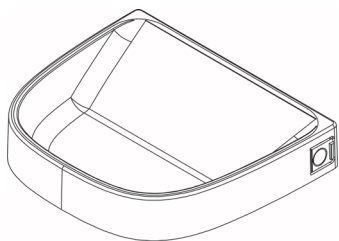 

2 Food tray

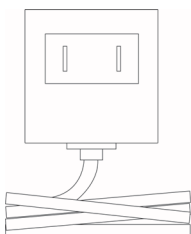 


3 Power adapter




4 User guide

 OVERVIEW

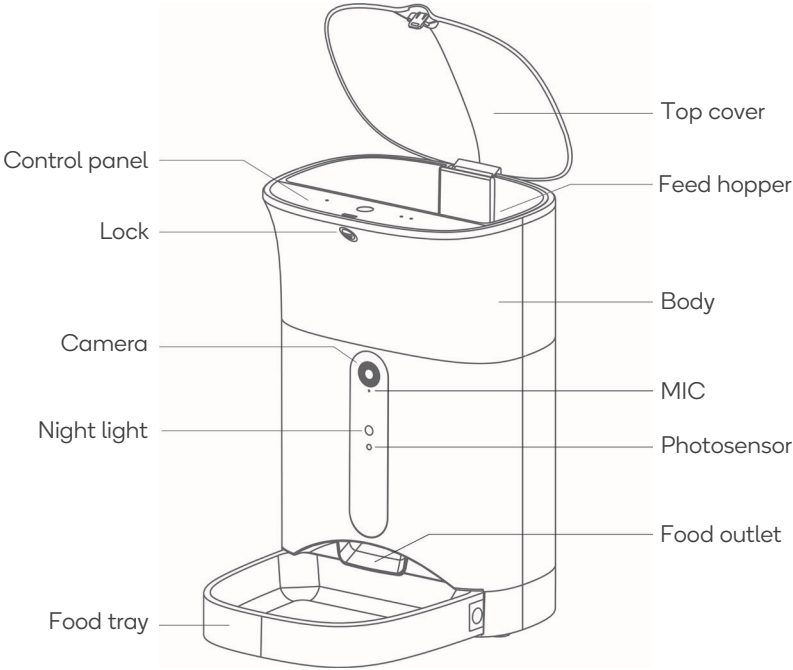

Control panel

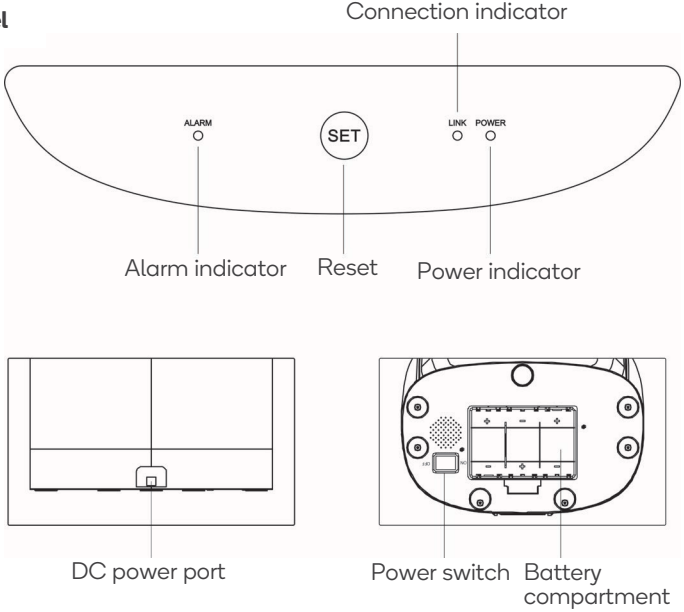 

CONNECT TO SMARTERHOME™ APP

Install App


Download the “Kogan SmarterHome” app from the Play Store (Android) or App Store (iOS).

Register


If you do not have a Kogan SmarterHome™ account, register or sign in with a verification code sent by SMS.

To register:

1. Tap to enter registration page.
2. The system automatically recognises your country/area. You can also select your country code manually. Enter your email address and tap ‘Next.’
3. Alternatively, you can select ‘Register by mobile number’ and enter the verification code sent to you by SMS.
4. Create a profile on the next page to define your location and room.

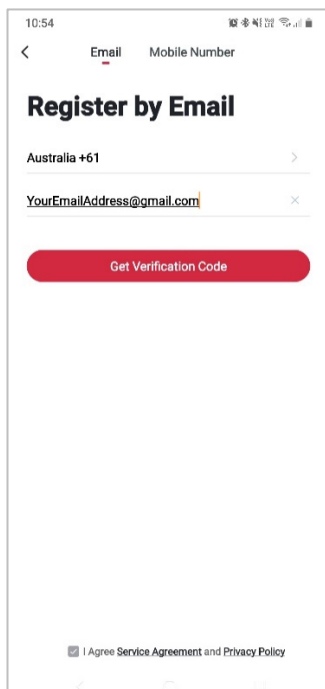

The screenshot shows the 'Register by Email' screen. At the top, there is a navigation bar with a back arrow, 'Email' (underlined), and 'Mobile Number'. The title 'Register by Email' is centered. Below it, 'Australia +61' is selected for the country code. An email address 'YourEmailAddress@gmail.com' is entered in the text field. A red button labeled 'Get Verification Code' is at the bottom. At the very bottom, there is a checkbox labeled 'I Agree Service Agreement and Privacy Policy' which is checked.

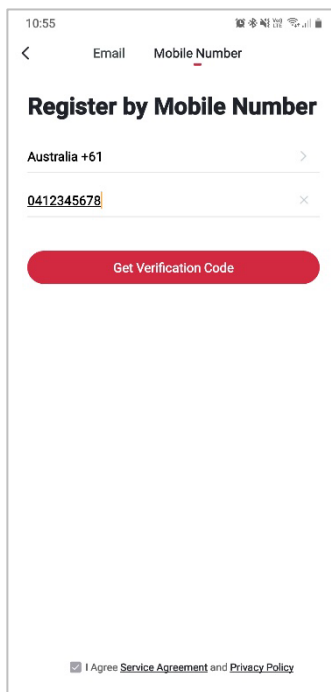

The screenshot shows the 'Register by Mobile Number' screen. At the top, there is a navigation bar with a back arrow, 'Email', and 'Mobile Number' (underlined). The title 'Register by Mobile Number' is centered. Below it, 'Australia +61' is selected for the country code. A mobile number '0412345678' is entered in the text field. A red button labeled 'Get Verification Code' is at the bottom. At the very bottom, there is a checkbox labeled 'I Agree Service Agreement and Privacy Policy' which is checked.




Set device in pairing mode

When the device is first turned on, it may automatically enter pairing mode (the connection indicator will be rapidly flashing).


If not automatically in pairing mode when powered on, please wait until you hear an “EZ mode” voice prompt.

Add device through network

5. Once registered, tap “+” in the upper right corner of the app’s home page to add a new device through the network.
6. Select the product type from the list of options in the app (Other > Smart Pet Feeder 4.3L).
7. Ensure that the device is in pairing mode, with the connection indicator flashing, and tap “Confirm light is rapidly flashing”.

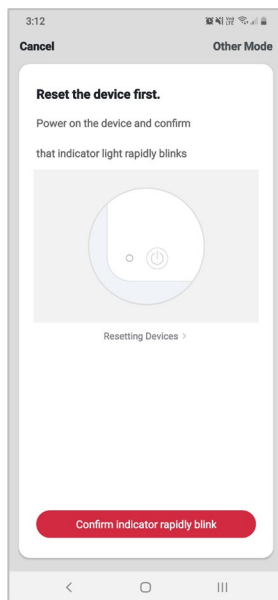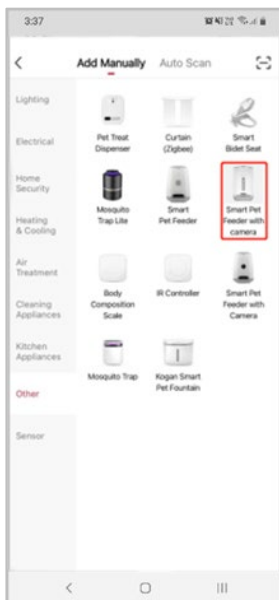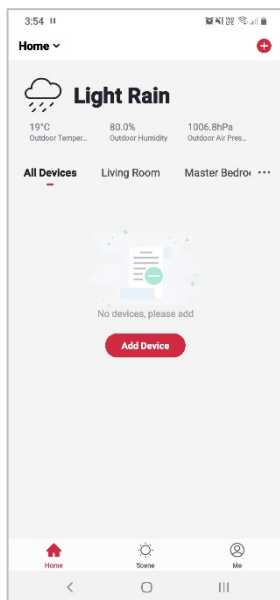

8. Upon successfully confirming pairing mode, enter your Wi-Fi details. It is important that your SmarterHome™ device and the app are connected to the same Wi-Fi network during setup.
9. The device will commence the pairing process and connect to the app. Ensure your Wi-Fi router, mobile phone, and the SmarterHome™ device are kept close until connection is complete.
10. After successfully being added, you will have the option to rename the device and assign it to a location. It will now be listed on the app's home page. Tap the device listing to enter its control page.

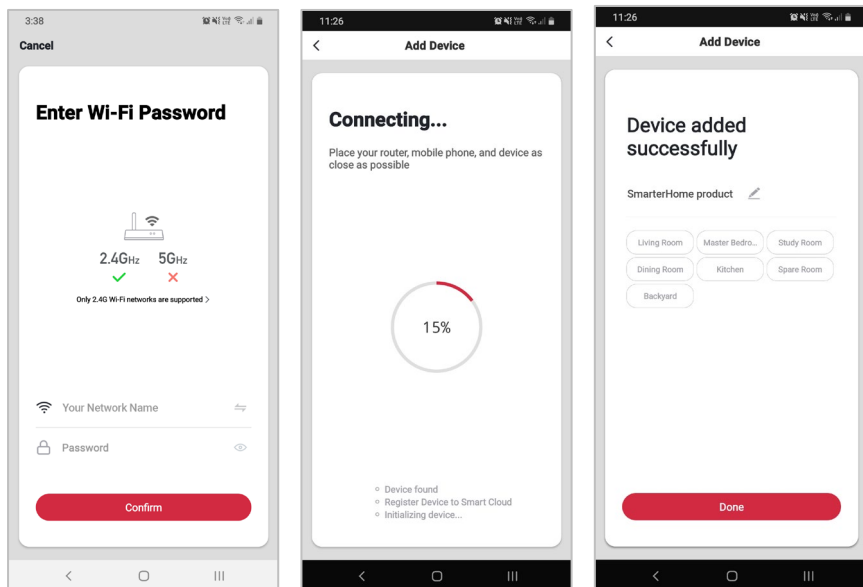

Notes:

- The device and the app have to use the same Wi-Fi network.
- The device is only compatible with 2.4Ghz networks.

If you are unable to connect the pet feeder after repeated attempts, try following the AP mode connection steps on the following page.




AP mode connection steps

Set device in pairing mode




To set the device to AP mode pairing, press and hold the Reset button for 5 seconds and wait until you hear an “AP mode” voice prompt. The connection indicator will be slowly flashing.

Using AP Mode to add device

1. Once registered, tap “+” in the upper right corner of the app’s home page to add a new device through the network.
2. Select the product type from the list of options in the app (Other > Smart Pet Feeder 4.3L), and then select **“Other Mode”** from the top-right corner when asked to proceed.

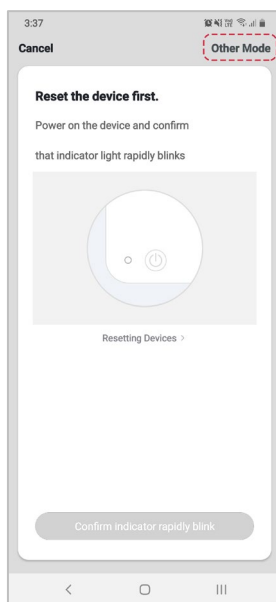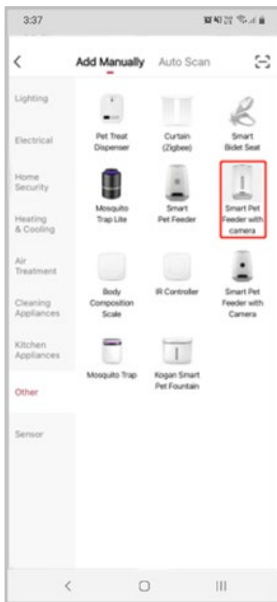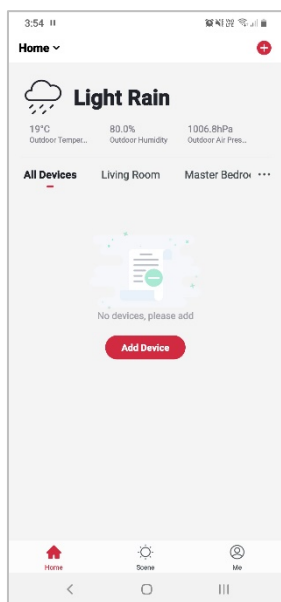

3. Select **“AP Mode”** for the set-up type.
4. Ensure that the device is in pairing mode, with the connection indicator slowly flashing, and tap **“Confirm light is slowly flashing”**.
5. Enter your Wi-Fi details. It is important that your SmarterHome™ device and the app are connected to the same Wi-Fi network during setup.

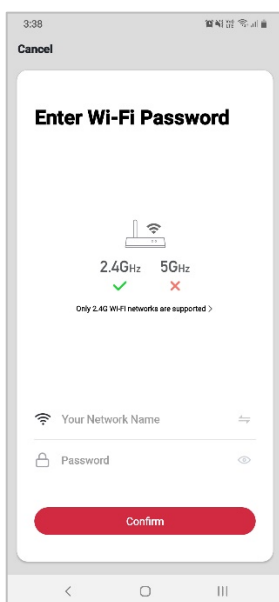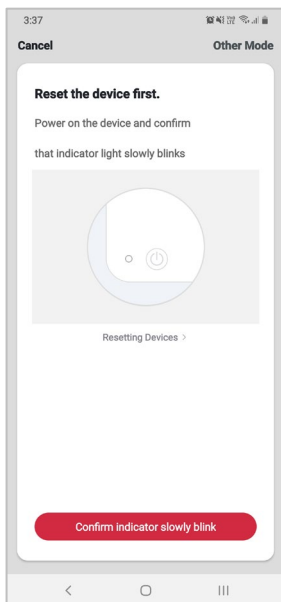
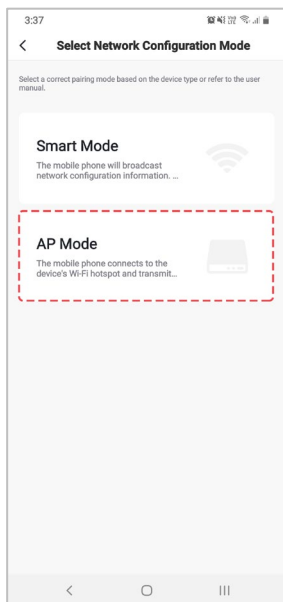


- Follow the in-app prompts to continue AP Mode connection, which will pair your mobile phone to the device's Wi-Fi hotspot to ensure a connection.

Note:

If the Wi-Fi hotspot does not appear on your phone in the list of available networks, your device may not be set in AP Pairing Mode correctly. Try repeating the steps outlined above to ensure your device is ready for connection.

- The device will commence the pairing process and connect to the app. Ensure your Wi-Fi router, mobile phone, and the SmarterHome™ device are kept close until connection is complete.
- After successfully being added, you will have the option to rename the device and assign it to a location. It will now be listed on the app's home page. Tap the device listing to enter its control page.

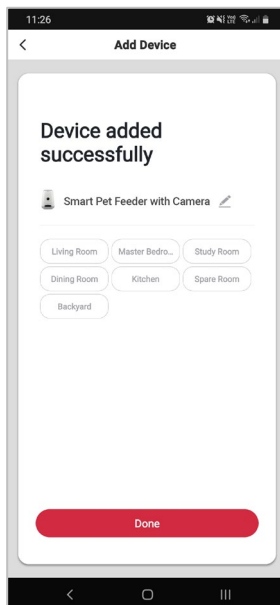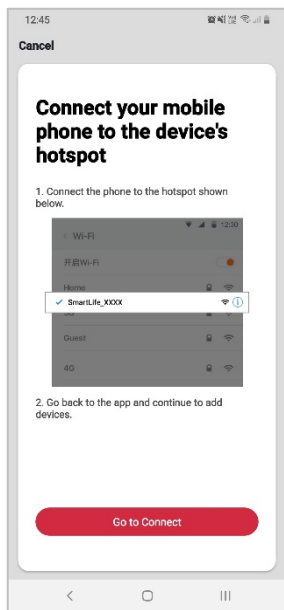


Notes:

- The device and the app have to use the same Wi-Fi network.
- The device is only compatible with 2.4Ghz networks.

OPERATION

App interface

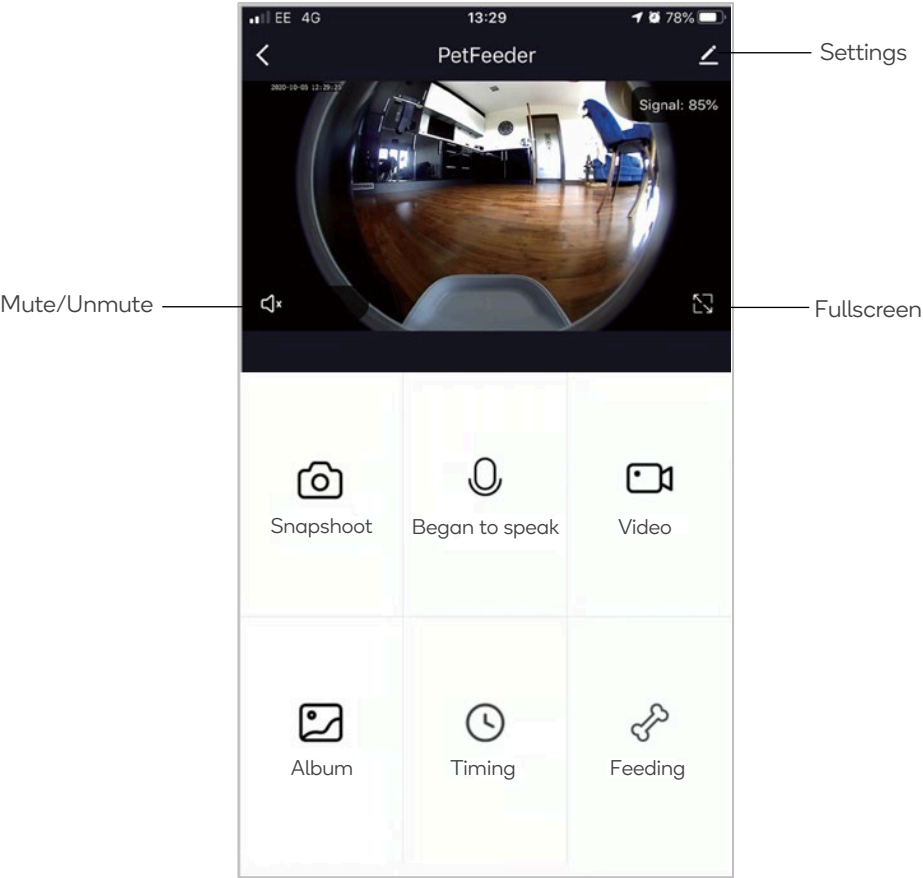

Functions


- Snapshot** Tapping will capture a photo of the camera's current view.
- Began to speak** Turns on the microphone to talk to whoever is near the pet feeder.
- Video** Records video footage.
- Album** View captured photos and videos.
- Timing** Allows scheduling for feed times.
- Feeding** Allows for manual feeding.

Powering the pet feeder




This pet feeder can be powered via batteries or the included power adapter.

If powering by batteries, insert 3x D batteries (not included) into the bottom of the main body. Turn the power switch on.

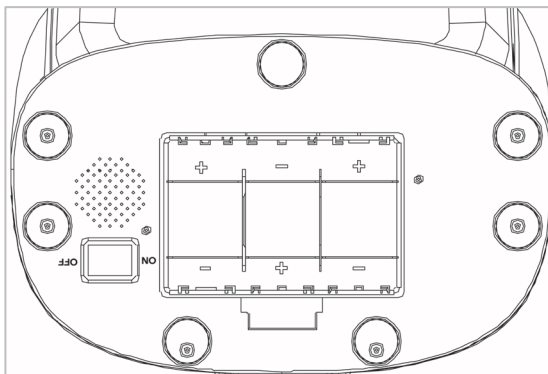


If using the power adapter, plug the cable end into the DC power port, and the other into a pocket socket. Turn the power on.

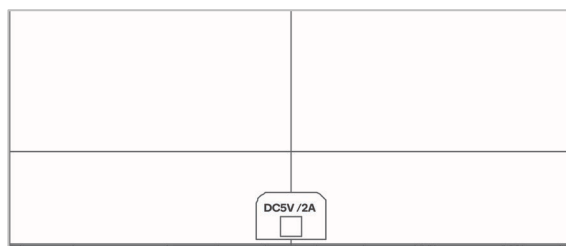

Notes:

- If powered by batteries, the pet feeder will only dispense food based on the scheduled feeding times set by users on the SmarterHome™ app. The pet feeder will appear as offline.
- If users wish to gain full functionality, or change any settings using the SmarterHome™ app, use the power adapter to power the pet feeder.

1. Connect the pet feeder with the SmarterHome™ app as above.
2. Press the lock button to lift the top cover and reveal the feed hopper.
3. Pour pet food into the feed hopper. Press down on the cover to lock.
4. Push the food tray under the pet feeder.

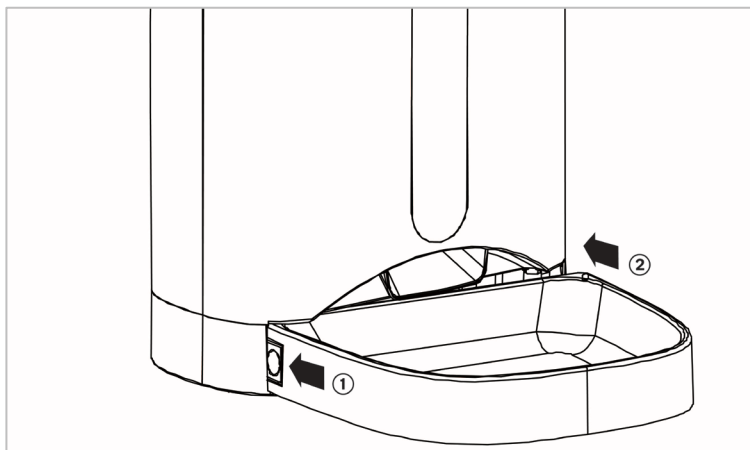


5. Open the SmarterHome™ app and press “Feed”. Choose the number of portions you would like dispensed. Upon confirming, the pet food will be released into the food tray.

Scheduling multiple feeds

In the SmarterHome™ app, you can schedule times for the pet feeder to dispense food for your pet.


Tap “Schedule” to add feeding times. Various feeding times and their respective portions can be set. Tap “Save” after each scheduling each meal. You can set up to 4 meals and 10 portions per meal.

In the overview displaying all pre-scheduled times, you can also activate or deactivate individual times.

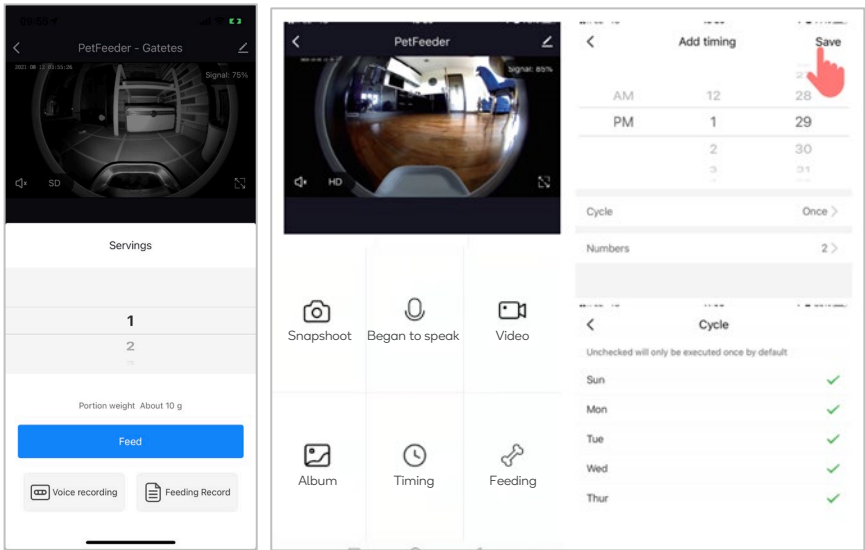

Voice recording


You may also record a short 10 second recording that is activated whenever your pet has their scheduled feeding time. Tap “voice recording” to record.

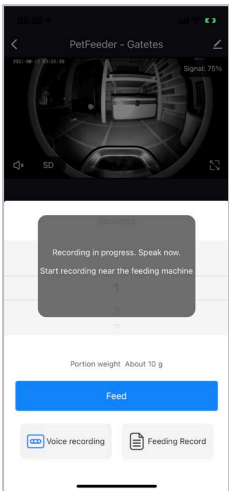

Notifications centre

In the “Message Center” under the “Me” tab in the SmarterHome™ app, you can manage, activate or deactivate notifications.

Activating notifications will allow the pet feeder to send alerts at each feeding time, when the feed hopper needs refilling, and when your pet approaches the pet feeder.

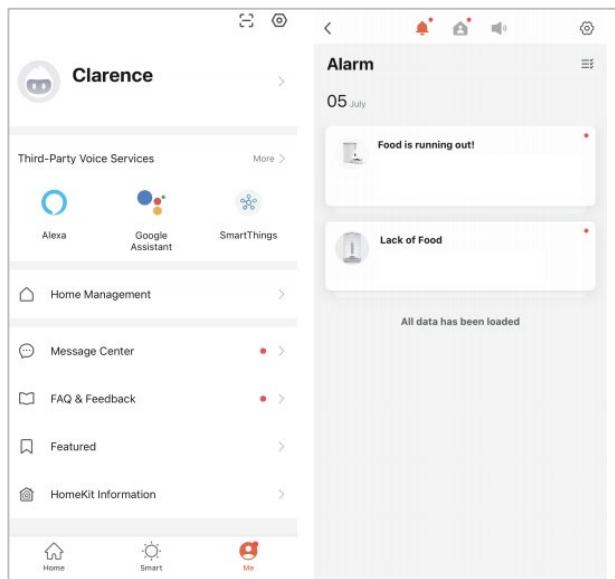

Note:

The images shown in this user guide are for reference only.

Other settings


You can access additional features by tapping “Settings” to go to the settings menu. These include:

- Checking the feeder’s status.
- Activating IR (night) vision
- Activating and deactivating motion detection
- Flipping the display on the screen
- Sharing the pet feeder with other users (for example, others living in the household).
- Setting one or two-way audio.


CLEANING & CARE

Ensure the pet feeder is turned off and the power is disconnected before attempting to clean.


- 1. Open the top cover and use both hands to lift out the feed hopper.

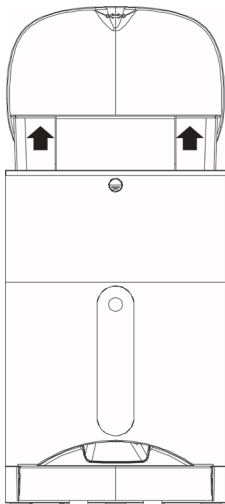

- 2. The food tray can be removed for cleaning. Press the side buckles on the left and right of the bowl to release. Pull the food tray out and slightly upwards.

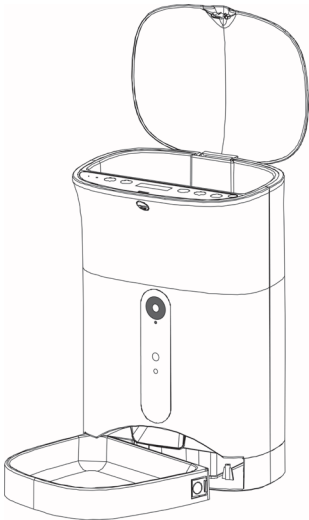

3. Wipe the feeder's body with a damp soft cloth dipped in a small amount of soapy water. Do not use a fully soaked cloth. The feed hopper and food tray may be washed with soap with water.
4. Once cleaned, open the top cover and rotate the impeller inside, placing the feed hopper back in to secure the feed hopper to the bottom.

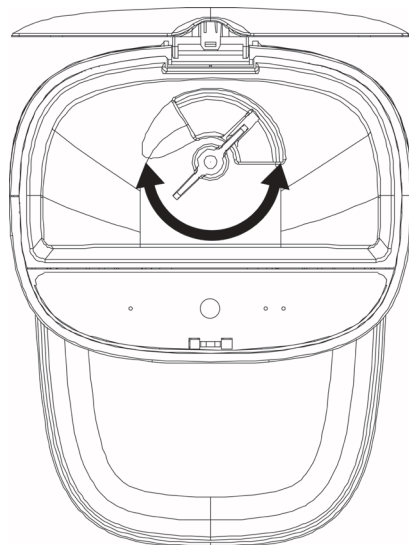

5. Push the food tray under the pet feeder. The pet feeder is now ready for use.

Notes:

- Never submerge the main body in water as it may cause the pet feeder to short circuit.
- Ensure that all parts are clean and fully dry before operating the pet feeder.
- The food tray and feed hopper are dishwasher safe.

NOTES

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com