

GEONFINO



Smart Lock
Model No.G5
Installation instruction



PASSWORD



APP



RFID CARD



BLUETOOTH

Please keep and read this instruction before installation, we also prepared instruction video to help on Amazon Page. If you need further assistance, please contact Customer Service by email: support@geonfino.com



Table of Contents

- <1> Installation Guide
- <11> How to Use
- <13> Programming Instructions
- <15> APP Guide
- <23> Low Power
- <24> Restore Factory Settings
- <25> Troubleshooting
- <26> FCC Warning
- <27> About GEONFINO



Installation Guide

What is inside		
A.Latch	B.Keypad	C.Battery Cover
D.Interior Assembly	E.Mounting Plate	F.Strike
G.Strike Box	H.Interior Assembly Screws	I/J.Mounting Plate Screws
K.Latch / Strike Screws	L.RFID Card	M.Keys



1 Prepare the door and check dimensions


- A** Measure to confirm that the backset is either 2-3/8" or 2-3/4" (60 or 70 mm) .

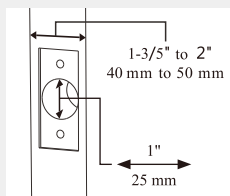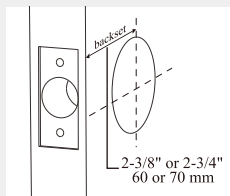

- B** Measure to confirm that the hole in the door edge is 1" (25mm). And measure to confirm that the door is 1-3/5" to 2" (40 mm to 50 mm) thick.


Is the slotted hole centered in the door hole?

YES

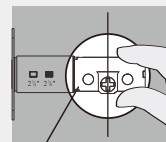


No adjustment is required. Proceed to next step.

Slotted hole is centered.

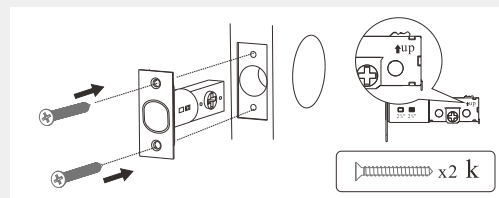


2 Install the latch and strike

- A** Hold the latch in front of the door hole, with the latch face flush against the door edge.

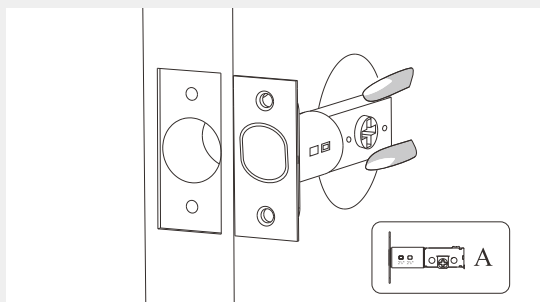


NO

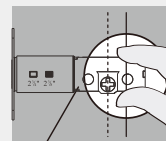


Rotate and pull the latch as shown to extend latch.


Slotted hole is not centered.

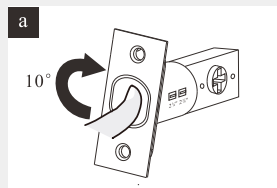


Rotate the head of latch 10°

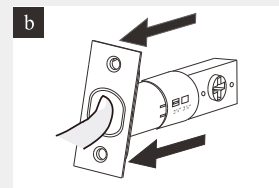


Stretch the latch

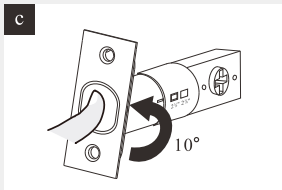

Rotate the head of latch back to right position.

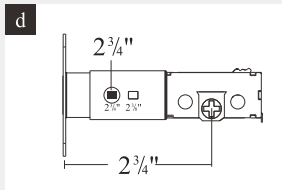


- B** Use a screwdriver to test if deadbolt works smoothly. When the screwdriver turn, the deadbolt would be lock/unlock.

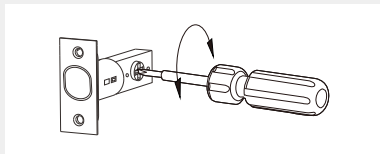

- C** Install strike on the door frame.


⚠ IMPORTANT: Make sure hole in door frame is drilled a minimum of 1" (25 mm) deep.

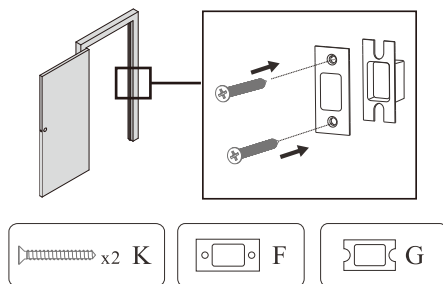

< 4 >



3 Installation instructions

- A** **⚠ IMPORTANT:** Before installation, make sure the latch is fully retracted (in the unlocked position) .

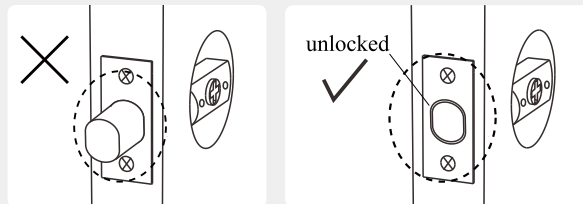

- B** Install Keypad


If the hole is bigger than 2 1/8" (54mm), install the keypad directly

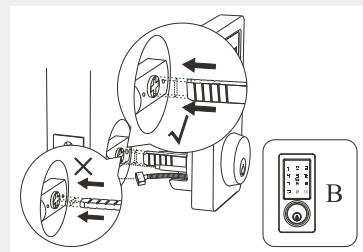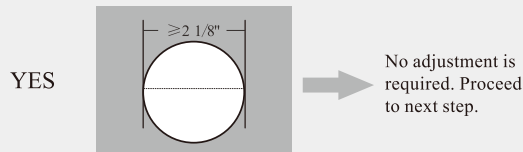


Please ensure the tail bar is vertical during installation. The IC wired need to under the deadbolt.

< 5 >


NO

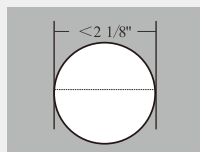


Remove the hole cover

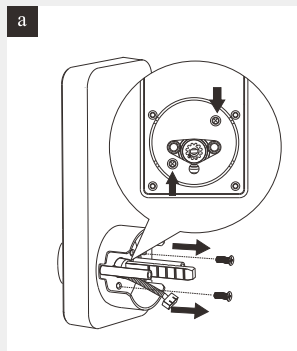

Remove screw from hole cover

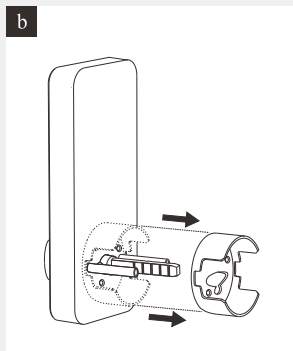


Remove the hole cover

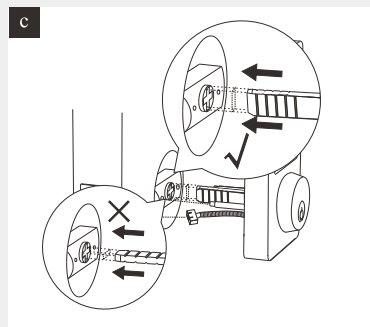


Please ensure the tail bar is vertical during installation. The IC wired need to under the deadbolt.

<6>


C Install Mounting Plate

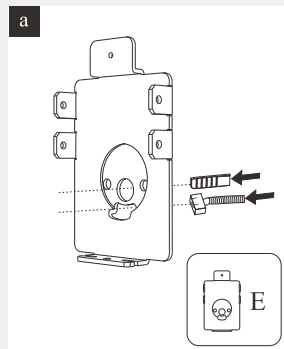

The IC wired and tail bar go through the hole of mounting plate

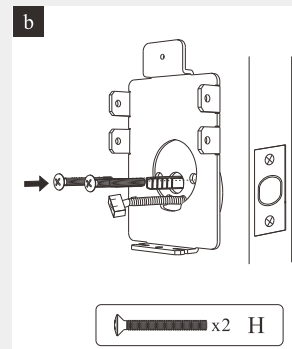


Secure the mounting plate with the supplied screws.

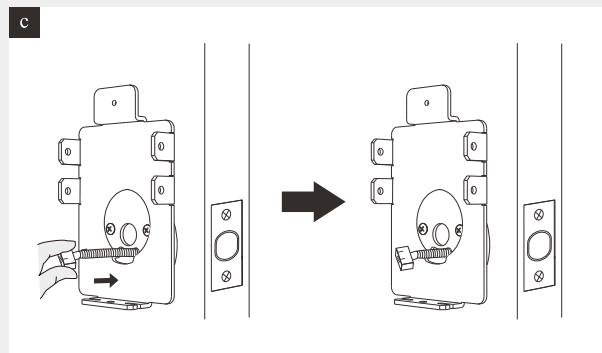

Make sure the IC wired not too long.


<7>

D Confirm the direction of the door

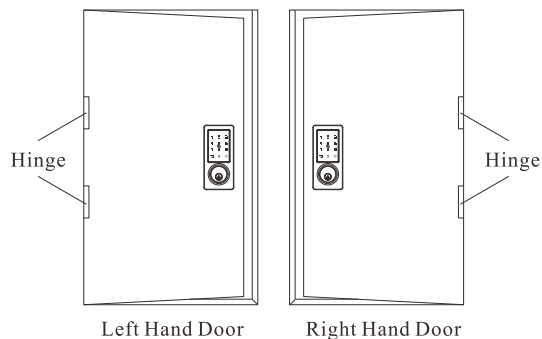

If the door is left handle.


- 1.To install the lock for left side handling, ensure the toggle button on the back assembly is set to "L".
- 2.Setting direction of the turnpiece : Horizontal for Left handle when in unlock status.

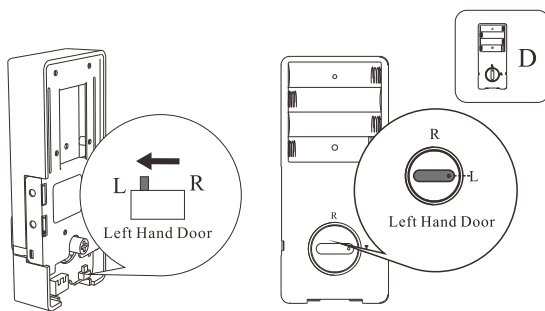


< 8 >

If the door is right handle.

- 1.To install the lock for right side handling, ensure the toggle button on the back assembly is set to "R".
- 2.Setting direction of the turnpiece : Vertical for Right handle when in unlock status.

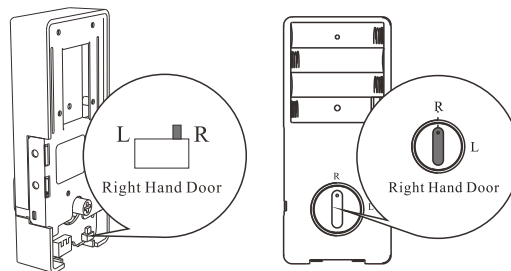


E Install Interior Assembly

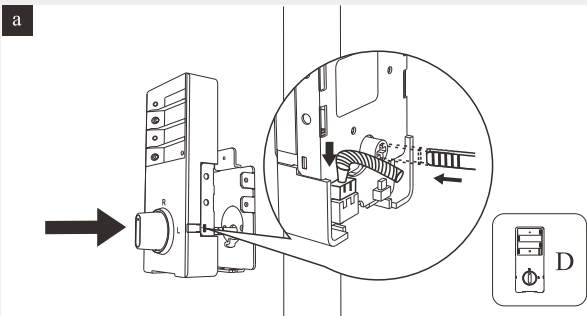


Connect the cable and ensure tight cable connection. And the tail bar insert the turnpiece hole.


< 9 >

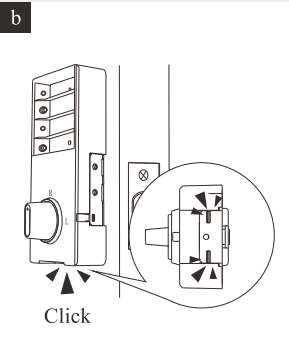

Install the interior assembly on mounting plate and make sure they click on together

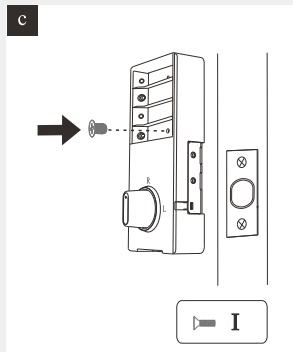


Secure the interior assembly with the supplied screws.

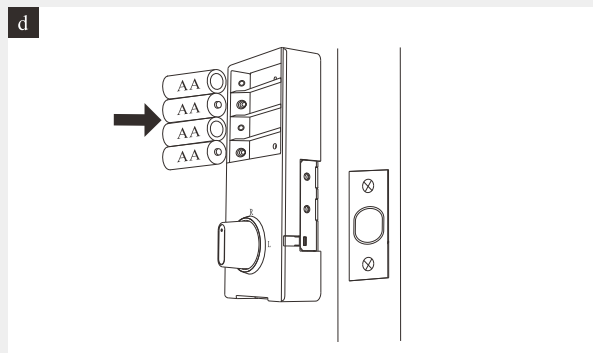


Load 4 AA batteries into the interior assembly.

⚠ IMPORTANT: For best results, use new, non-rechargeable Alkaline batteries only.

F Install Battery Cover

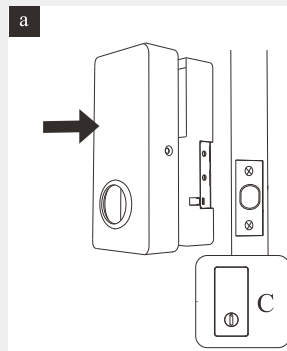

Install battery cover

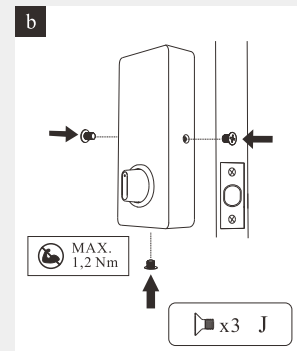

Secure the interior assembly with the supplied screws.

How to Use

LOCK the door from outside

Manual Mode

Press "✓" key on keypad for 3 seconds.



LOCK the door from inside

 
Manual Mode

Rotate the thumb turn to Lock position.



UNLOCK the door from outside

RFID Card




Master/
User code




Key



UNLOCK the door from inside

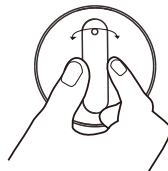

Rotate the thumb turn to
Unlock position.

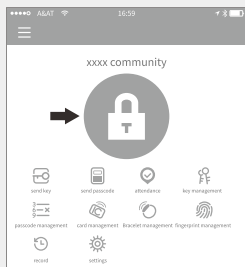



Via APP

Long press "🔒" to LOCK the door from outside or inside.
Click "🔓" to UNLOCK the door from outside or inside.

Note: Please keep your phone near the door lock within 32.8ft(10m).

Auto Re-lock Mode

Auto Re-lock Mode can be set up in APP.(5s,10s,15s,30s,60s,Custom) When the lock be unlocked via APP, passcode or RFID card, it will re-lock automatically in the reset time.

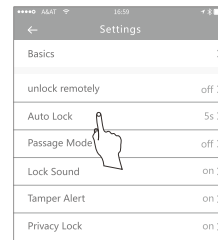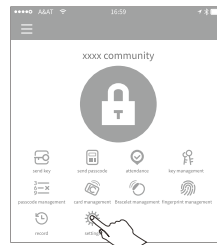

Programming Instructions

Information & Safety Warnings

- Protect your User Codes and Master Code.
- Protect your key. It is suggested to put it outside the door, such as your car.
- Restrict access to your lock's interior assembly and routinely check your settings to ensure they have not been altered without your knowledge.
- This lockset is designed to provide the highest standard of product quality and performance. Care should be taken to ensure a long-lasting finish. When cleaning is required use a soft, damp cloth. Using lacquer thinner, caustic soaps, abrasive cleaners or polishes could damage the coating and result in tarnishing.

⚠ IMPORTANT: Do not load batteries until lock is completely installed.

Definitions

Master Code

Required for programming and feature settings. Master code can be used to unlock the door under vacation mode. The default master code needs to be changed before programming.

Property owner/manager should keep this information confidential.

1. Master Code(6 to 8) digits: The default Master Code is 123456.

It is required that you change it to a code of your own before programming.

2. User Code(6 to 8) digits: A total of 200 User Codes may be programmed.

Auto Lock

Automatically locks the deadbolt after unlocking. This feature is off by default. You can set the auto lock time in the app.

Wrong Entry Limit

After 5 unsuccessful attempts at entering a valid PIN code, the unit will shut down for 5 minutes.

Unlock with Fake Code

User can prevent PIN code exposure from strangers by entering random digits before or after PIN code.

83618 137192 14710

password

Random digits



APP Guide

A Download APP "TTLock"




Android Mobile Phone--Search "TTLock" from Google Play.
Apple Mobile Phone--Please search "TTLock" from App Store.

B Register a new account(phone number or email)

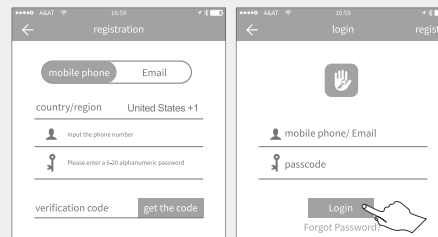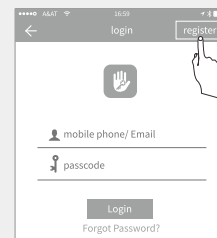


a Permanent passcode

The permanent passcode must be used within 24 hours after it is generated, otherwise it will automatically expire.

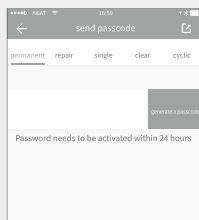


b Time-limited passcode

The time-limited passcode can own an expiration date, which is a minimum of one hour and a maximum of three years. If the validity period is within one year, the time can be accurate to the hour; if the validity period is more than one year, the accuracy is month when the time-limited passcode is valid, it should be used within 24 hours, otherwise it will automatically expire.

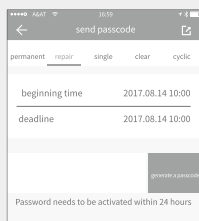


c One-time passcode

One-time passcode can only be used for onetime, and which is available for 6 hours. It will automatically expire.

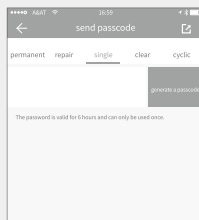


d Clear code

Clear code is used to delete all the passcodes the lock has set, and which is available for 24 hours.

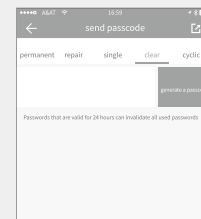


e Cyclic passcode

The cyclic password can be reused within a specified time period, including daily type, weekday type, weekend type, and more.

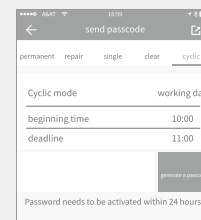


f Custom passcode

User can set any passcodes and validity period he wants.

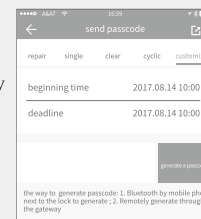


g Passcode sharing

The system add new communication ways of Facebook Messenger and Whatsapp to help users share the passcode.

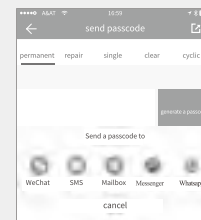

h Password management


All generated passcodes can be viewed and managed in the password management module. This includes the right of changing the password, deleting the password, resetting the password, and unlocking the password.

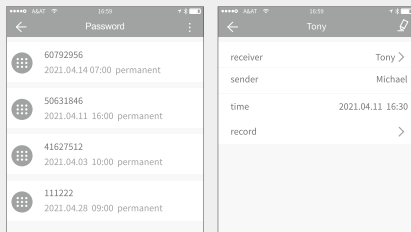

F Card management

You need to add the RFID card first. The whole process needs to be done via the app beside the lock. The validity period of the IC card can be set, either permanent or time-limited.

All RFID cards can be queried and managed through the RFID card management module. The remote card issuance function is displayed in the case of a gateway. If there is no gateway, the item is hidden.

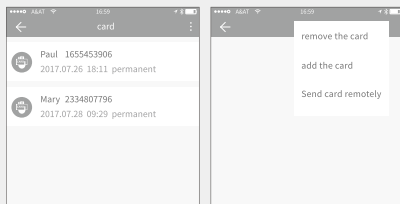

<20>

G Records

It records who comes and goes, and when for 24/7 access logs, get all records about the door unlock/ lock anytime and anywhere.




H Setting

In the system settings, it includes touch unlock switch, group management, gateway management, security settings, reminder, transfer smart lock and so on.



a User management


The user name and phone number can be seen in the user list. Click the customer you want to view to get the door lock information.

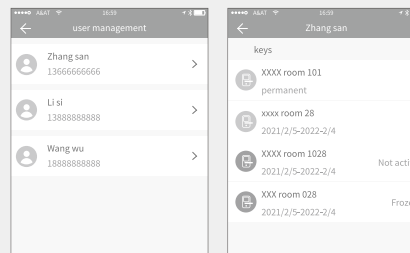

<21>

b Key groups management

In the case of a large number of keys, you can use group management module.

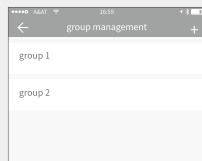


c Transfer admin rights

The administrator can transfer the lock to other users or to the apartment(Room Master user).Only the account that manages the lock has the right to transfer the lock.


After inputting the account, you will receive a verification code. Filling in the correct number, you will transfer successfully.

The account of the apartment transfer receive must be the administrator account.

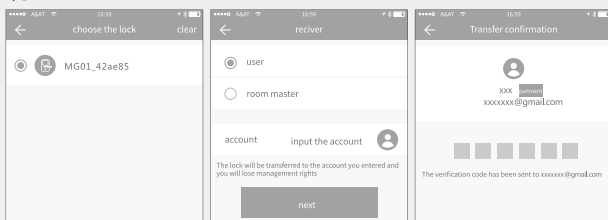


d Lock recycling station

If the lock is damaged and cannot be deleted, the lock can be deleted by moving it into the recycling station.

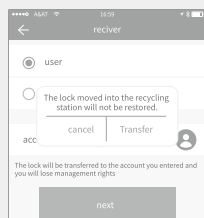

<22>

Low Power

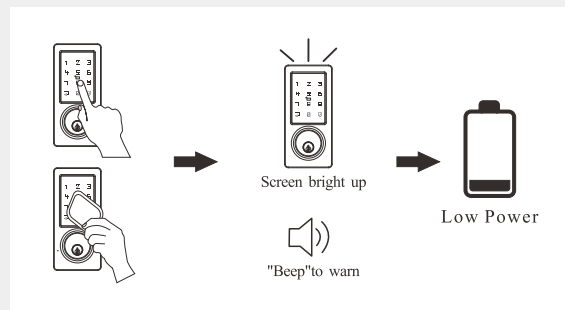

When the smart lock is opening, the screen will brighten up and “beep” to warn that the battery is low power.


Factory Default Settings

Settings	Factory Default
Master Code	123456
Auto Lock	Disabled
Silent Mode	Disabled
Wrong Code Entry Limit	5 times
Shutdown Time	5 mins


<23>

Restore Factory Settings

Restore on APP

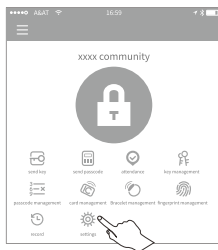

Select
“Settings”
in the APP

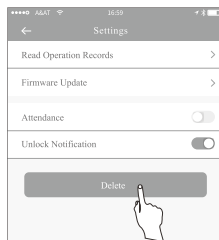


Select “Delete”
and insert user
login password

Restore on lock

1. Press and hold the Reset button.
2. Keep holding the Reset button for 6 seconds, until you hear the sound of beep.

Note: This operation IC wired and battery need to be installed. This button is behind the Keypad panel.

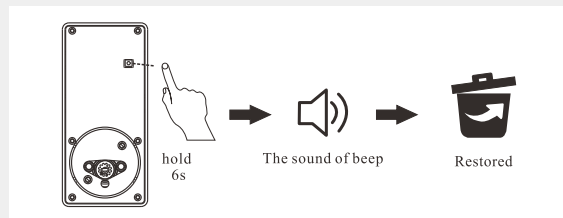

Troubleshooting

The turnpiece cannot rotate or operate the lock.

Remove and re-install the lock, making sure that the turnpiece is in right position.

The lock cannot be locked or unlocked by the keypad.

Make sure that the codes are not disabled. If needed, restore the lock's default settings.

The keypad doesn't respond when touched (no lights are visible and no beeping is heard) .

Make sure the cables are properly connected, and make sure the batteries are new and installed correctly.

I forgot my Master Codes.

Perform a reset in order to erase all passcodes. Once the reset is complete, all passcodes will be erased and the Master code will return to the default value (123456) .

The lock cannot connect APP via bluetooth

Please make sure the bluetooth is on. The APP is ready to search the lock. If needed, restore the lock's default setting.

Multiple attempts unlock the door also failed to open

Use the key to open the lock and change the battery. If needed, please contact customer service.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

GEONFINO

Dear customer,

Greetings!

Thank you very much for your purchasing! We are so honored to have you as our customer, and we have great confidence to provide you with premium products and friendly service.

About GEONFINO

As an innovative and high technology corporation, GEONFINO is dedicated to R&D, designing, producing and marketing of Smart lock products. Our top-guns in the Smart lock field have constantly developed a series of products with features like fashion, human care, energy efficiency, and environment protection. And we highly value concepts of "People Oriented, Practical and Innovative." a professional seller in the smart lock field will always be a nice company to your life!

Warranty

GEONFINO not only provides a 1-year warranty for all our products but also offers high-level after-sales service. Please kindly contact us immediately and we will supply a replacement or refund if you encounter any of the followings:

1. Receiving defective items;
2. Short packaging;
3. Parts are broken in transit;
4. Item stops working within warranty;
5. Wrong order.



Importance

Valuable customers, if you like our products and service, your positive feedback and reviews will be inspiring comments on our work. If you're dissatisfied with what you get, before writing negative feedback, please contact us, we will try our best to solve the issue to your satisfaction. Thanks for your vote of confidence again! Wish you a very happy life!

Best regards!

Customer Service E-mail: support@geonfino.com

Scan here to contact us
[24Hrs Online]



<https://geonfino.afterservice.vip>

