



Customer Care: service@innoteck.co.uk

Innoteck is a registered trademark of DST Holdings Ltd



Scan to visit our website
for more products



or visit www.innoteck.co.uk

DST Holdings Ltd, Unit 20B, Calderdale Business Park,
Club Lane, Halifax, West Yorkshire, HX2 8DB.



2 Slice Toaster



Instruction Manual

Save These Instructions- For Household use Only

Model No.: DS-5187/DS-5188/DS-5244/DS-5245

When using electrical appliances, basic safety precautions should always be followed.
Do not use the Innoteck Kitchen Pro Toaster until you have read this manual thoroughly.

• Safety information

This appliance conforms to accepted technical standards and the relevant safety requirements for electrical devices. Repairs to this appliance should only be carried out by a qualified expert. The manufacturer shall not be liable for damage caused by improper usage or failure to follow the instructions for use.

Connect and use the appliance only as specified on the rating plate.

Do not connect the appliance if either the mains cable or the appliance itself appear to have been damaged.

Do not:

- . Allow the mains cable to touch hot parts
- . Pull the cable across sharp edges
- . Use the cable to carry the appliance.

Always unplug the appliance after use or in the event of a fault.

If the mains cable is damaged, it should only be replaced by our Customer Service Department in order to avoid all risk of injury.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Keep children away from the appliance.

When the appliance has reached the end of its working life, it should be clearly destroyed and disposed of properly.

The slices of bread in the toaster can burn. Do not therefore use the toaster in the proximity of or underneath inflammable objects (e.g. curtains).

The temperature of accessible surfaces may be high when the appliance is operating.

The toaster should not be left unsupervised while it is in use.

Stand the toaster away from any other objects so that the air required for it to function properly can circulate freely.

If a slice of bread becomes stuck inside the toaster, pull out the mains plug, wait for the toaster to cool down and carefully remove the bread.

• Before using the toaster for the first time

Open the window and operate the toaster three times on the highest setting without any bread.

• Important information concerning the use of this toaster

Take care not to scratch or otherwise damage the metal housing with any hard object or to bang it against a sharp edge.

Do not place the toaster on a hot surface or use it in the proximity of a source of heat (e.g. hot plates on cooker). Do not place slices of bread or bread rolls directly onto the toaster housing or the slot itself-the toaster could be damaged!

The toaster cannot be used while it is tilted at an angle or lying on its side.

Do not poke around inside the toast slot with your fingers or with a metal object.

Do not cover the toast slot.

Terms & Conditions

Limited Warranty

Innoteck warranty, subject to conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of ONE(1)year. Innoteck, at its option and with an accompanying receipt, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the warranty period of one year from the date of purchase listed on the receipt. If product is no longer available we will replace it with a product of equal value. Transportation charges of parts, or products in whole, submitted for repair or replacement, under this warranty must be borne by the purchaser. This product is void if the product is used for other than single-family household use or subjected to any voltage and wave form other than as specified on the product rating label (eg, 220V – 50Hz)

This warranty is available to consumers only. You are a consumer if you own a Innoteck that was purchased at retail for personal, family or household use. Except as otherwise under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

Conditions: This warranty is valid for the original UK retail purchaser from the date of the initial purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Service centres or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty. Warranty registration is not necessary to obtain warranty on Innoteck products. Please save your proof of purchase.

About your Warranty: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, 3rd party warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorised service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

Normal Wear: This warranty does not cover normal wear of any parts or damage resulting from any of the following negligent use or misuse of this product: improper voltage or current; use contrary to the operation instructions; deviation from the instructions regarding storage and transportation; repair or alteration by anyone other than Innoteck or an authorised service centre. Further the warranty does not cover Acts of God, such as fire, flood, hurricanes or tornadoes. Innoteck shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for the particular purpose is limited in duration to the to the duration of the above warranty. This warranty gives you specific legal rights and you may also have other rights as stated in the UK Consumer rights laws that may vary slightly.

How to obtain Warranty Service: If your Innoteck product should prove to be defective within the warranty period, we will repair or replace the item. To obtain the warranty simply go to **www.innoteck.co.uk** and register online. The communication must be accompanied by a copy of the original purchase receipt in order for warranty to be valid.

Warranty

2 Slice Toaster		
All data fields are required in order for us to process your request:		
Model Number _____		
Full Name: _____		
Address: _____ _____ _____		
Phone: _____ Email (if applicable) _____		
Date of purchase: _____ We recommend you keep the receipt with this warranty card		
Retail Store of Purchase _____		
Description of Malfunction _____ _____ _____ _____ _____ _____		
Return your completed warranty card to:		
	2 Slice Toaster	
	Model No.: DS-5187 DS-5188 DS-5244 DS-5245	
1 YEAR LIMITED WARRANTY		

To register warranty please go to www.innoteck.co.uk
To activate your warranty, please register within 14 days of receiving your item.

INDEX

Safety information	2
Features & Operating Instructions	4
Cleaning	5
Warranty	6
Terms & Conditions	7

FEATURES OF TOASTER

1. On button
2. DEFROST button and instructions light
3. REHEAT button and instructions light
4. CANCEL button and instructions light
5. Knob for setting the degree of toasting
6. Crumb tray



Thank you that you purchase product of our company. This appliance is intended for household use only and is not suitable for commercial use.

Please read the instructions for use carefully and keep them in a safe place for future reference.

• How to use the toaster

Making toast

When you plug the toaster into the mains socket, the knob for the degree of toasting revolve to the centre position (step 4). 7 different degrees of toasting can be selected by adjusting the corresponding knob:

1=light, up to 7=dark.

Insert the slices of bread.

Press the ON switch down as far as it will go-the slices of bread are lowered into the toaster.

The ON button returns to its original position.

The bread is automatically centred inside the toast slot.

While the toaster is operating, it is possible to make the toast lighter or darker by revolving the selector knob.

The toaster switches off automatically when the appropriate time comes to an end. The slices of toast are raised out of the slot.

To toast frozen bread just taken out of the refrigerator, place the bread into the bread slots and select the desired browning setting. Press the control lever down and then press the DEFROST button. The DEFROST indicator light and CANCEL indicator light both come ON under this working condition.

When toasting under normal working conditions, only Cancel indicator light stays ON.

To reheat the bread that is already toasted, place the toasted bread into bread slots and select the desired

Browning setting, Press the control lever down and then press the REHEAT button. The REHEAT indicator light and CANCEL indicator light both come ON under this working conditions.

Press the CANCEL button:

- if the toast is too dark
- or a fault occurs.

What do you need to know about bread slices?

The type of bread, its moisture content, age, thickness and number of slices all have an effect on the degree of toasting.

If you are going to toast two slices of bread side by side, they should therefore be the same type of bread, have the same moisture content and be of the same age. (Whenever possible bread should be kept wrapped).

The overall thickness of the bread should not exceed 2.5 cm.

Very thin slices

- Will not be centred automatically
- Should be toasted on the lowest setting in order to avoid them becoming burnt on one side.

Always store sliced bread intended for toasting in a dry location.

Keep the bread in a sealed wrapper. darker types of bread generally need to be toasted at a higher setting than white bread.

How to clean the toaster

Pull out the mains plug and wait for the toaster to cool down.

Remove and empty the crumb tray.

Use a stiff brush to remove any burnt-on crumbs, for example.

Wipe the outside of the toaster with a damp cloth.

Do not use a sharp object or abrasive substance to clean the toaster.

Do not immerse the toaster in water or put it in a dishwasher.

Model No.: DS-5187/DS-5188/DS-5244/DS-5245

Rating: 220-240V ~ 50/60Hz

Power: 780-930 Watt

Guarantee

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold.

Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased.

The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

How to contact Customer Service

Please send email to service@innoteck.co.uk as show on last page of this user manual.



Environmental Protection

Waste electrical production should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.