


## Operating Instructions - Oven Zanussi ZOB35301

### Description of the oven

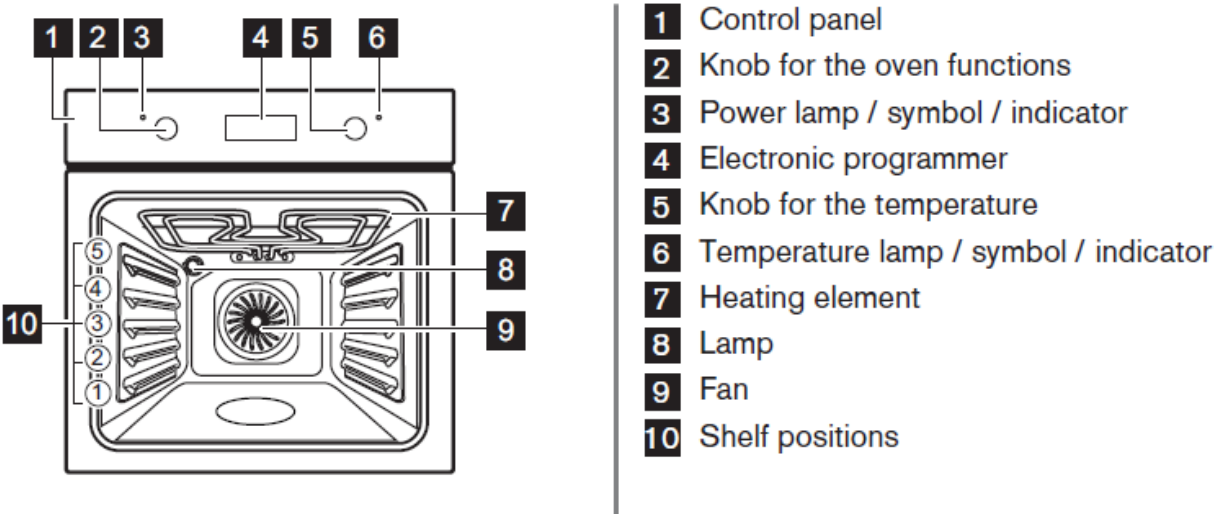


### Oven functions

| Oven function                                                                       |                  | Application                                                          |
|-------------------------------------------------------------------------------------|------------------|----------------------------------------------------------------------|
| 0                                                                                   | Off position     | The appliance is off.                                                |
|  | Light            | To activate the lamp without a cooking function.                     |
|  | Defrost          | To defrost frozen food.                                              |
|  | True Fan Cooking | To bake on up to 3 shelf positions at the same time and to dry food. |
|  | Grilling         | To grill flat food and to toast bread.                               |



Display

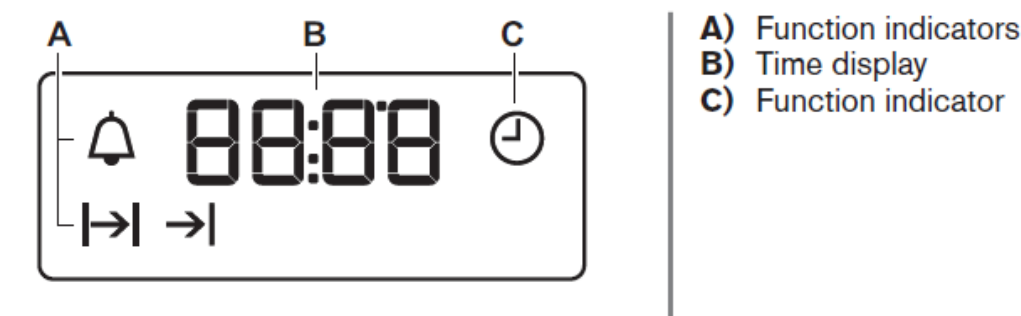

Buttons

| Button                                                                            | Function | Description              |
|-----------------------------------------------------------------------------------|----------|--------------------------|
| —                                                                                 | MINUS    | To set the time.         |
|  | CLOCK    | To set a clock function. |
| +                                                                                 | PLUS     | To set the time.         |

Clock functions table

| Clock function                                                                      |               | Application                                                                           |
|-------------------------------------------------------------------------------------|---------------|---------------------------------------------------------------------------------------|
|  | Time of day   | To set, change or check the time of day.                                              |
|  | Minute Minder | To set countdown time. This function has no effect on the operation of the appliance. |
|  | Duration      | To set the cooking time of the oven.                                                  |
|  | End           | To set the time of day when the oven should deactivate.                               |

Setting the clock functions

- For duration  and end , set an oven function and temperature of cooking. This is not necessary for the Minute Minder .
- Press  again and again until the indicator for the necessary clock function starts to flash.



2. Press + or – to set the time for the necessary clock function. The clock function operates. The display shows the indicator for the clock function you set.
3. When the time ends the indicator of the clock function flashes and an acoustic signal sounds. Press a button to stop the signal.
4. Turn the dial for the oven functions and the dial for the temperature to the off position. With the Duration and End functions, the appliance deactivates automatically.

### Cancelling the clock functions

1. Press the  again and again until the necessary function indicator flashes.
2. Press and hold  • The clock function goes out after some seconds.

