

QUICK START GUIDE


Custom Server Express®

Tips and tricks to help you get started with your new Express unit.


1 Remove unit from box. Wash, rinse, sanitize, and air dry pump parts properly before use.




2 Squeeze pinch valve open to ensure it isn't stuck shut, then insert into pump housing.

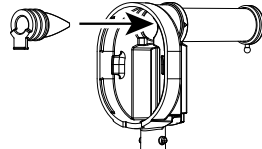

3 Press dome into housing fully and wrap loop around lower opening to secure.

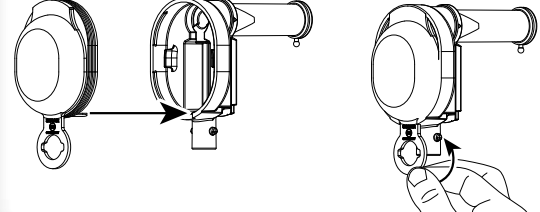


4 Lubricate with a small amount of clean water and install tube by rotating until both pegs on housing fit into holes on tube.

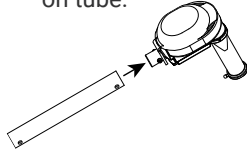


5 Lubricate with water and install connector by rotating until both pegs on connector fit into holes on tube.

CONNECTOR MUST POINT AWAY FROM END OF DISCHARGE TUBE.

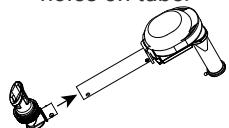


6 Insert discharge fitting into discharge tube. Place loop of fitting around peg on end of discharge tube.

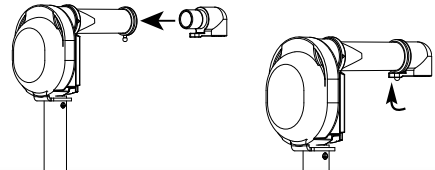


7 Insert connector into pouch fitting. Tighten threaded ring to secure.


Prime the pump by pressing the dome to draw food up to the discharge tube.

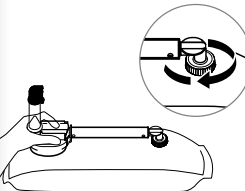

8 Slide pouch and pump into shroud. Align pump guides into slots.

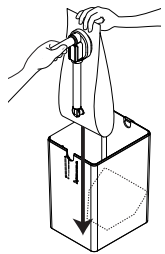

9 Snap lid on. Back tab of lid snaps into place. If you haven't primed yet, press lever several times until you see product in discharge tube.

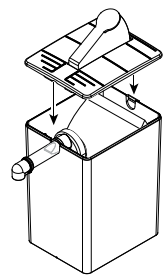


WANT TO LEARN MORE?

Visit server-products.com/manual-more for your manual, part breakdown, support videos and more.

spsales@server-products.com | 800.558.8722

SERVER
INTELLIGENT BY DESIGN™

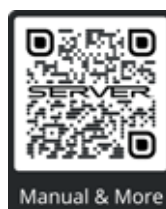

MODEL
XXXX
P/N
#####

NSF

SERIES
##X ##X

2 YEAR
WARRANTY

REFERENCE YOUR PART NUMBER
(P/N) LOCATED ON THE LID OR BASE.

