 


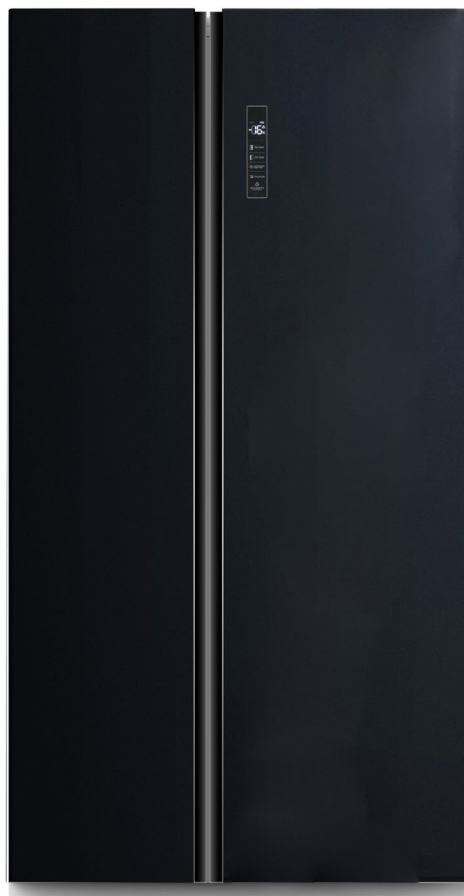

535L SIDE BY SIDE STAINLESS STEEL FRIDGE

KAMSBSF532B & KAMSBSF532C

Safety & Warnings	3
Overview	7
Before First Use	8
Functions	10
Operation	12
Cleaning & Care	14
Troubleshooting	17
Notes	19



SAFETY & WARNINGS

ENSURE YOU HAVE READ THIS USER GUIDE CAREFULLY BEFORE USE, AND RETAIN THE USER GUIDE FOR FUTURE REFERENCE.

Warning:



Warning: Risk of fire / flammable materials.

- This appliance is intended to be used in households and similar applications such as staff kitchen areas in shops, offices and other working environments; farmhouses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.
- If the supply cord is damaged, it must be replaced by Kogan.com or an authorised representative in order to avoid a hazard.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- The appliance must be unplugged when not in use and before carrying out user maintenance on the appliance.
- **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- **WARNING:** Please abandon the refrigerator according to local regulators for its use flammable blowing gas and refrigerant.
- **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Do not use extension cords or ungrounded (two prong) adapters.

DANGER Risk of child entrapment. Before you throw away your old refrigerator or freezer:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.

WARNING: The R600a refrigerant and cyclopentane foaming material used for the refrigerator are flammable. When the refrigerator is disposed of, it must be kept away from any fire source and be recovered by a specialist agency with corresponding qualifications to prevent damage to the environment or any other harm.

- The refrigerator utilises an alternating current supply (220-240V /50Hz). If large voltage fluctuations occur (outside the scope of 198-264V), it may cause failures such as the refrigerator failing to start, burned-out internal components, the compressor producing abnormal noises etc. If this occurs, you must install an automatic voltage regulator rated at above 1000W for use.
- Do not cut off or remove the third pin of the power plug under any circumstances.
- The power plug must be firmly secured in the wall socket to avoid the risk of fire.
- Do not pull the cable to unplug the refrigerator from the wall socket. Hold the plug firmly and pull out the plug from the socket directly.
- Do not allow the power cable to become pinned by the refrigerator or trampled by people. Do not use damaged power cables or plugs; if you note any damage to the cable or plug, please contact Kogan support.
- This appliance can be used by children aged from 8 years and above and persons with reduce physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children aged from 3 to 8 years can load and unload refrigerating appliances.
- **WARNING:** To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.

Warnings for placement

- Do not put flammable, explosive, volatile and highly corrosive items in the refrigerator to prevent damages to the product or fire accidents.
- Do not place flammable items near the refrigerator to avoid fires.
- The refrigerator is intended for household use, such as storage of foods; it shall not be used for other purposes, such as storage of blood, drugs or biological products, etc.

- Do not store bottled fluids (such as beer, soft drink, etc) or enclosed containers in the freezing chamber of the refrigerator; the bottles or enclosed containers may crack/shatter due to freezing and cause damages.
- If gas leaks from the appliance, immediately close the gas valve and open nearby doors and windows. Do not pull out or plug in the refrigerator or other appliances to wall sockets.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Do not use flammable solvent near refrigerator, to avoid fire.
- Do not place power boards, voltage regulated power supplies, microwave ovens or other appliances on top of the refrigerator.
- Do not allow children to enter or climb the appliance or its shelves.
- To avoid the risk of frostbite, do not touch the icy surface of the freezer with bare hands while it is in operation, particularly if your hands are wet.
- The gap between door and door and the gap between door and refrigerator body are very narrow. Be careful not to stretch hands into these areas to prevent fingers from injuring. Do not let the children near the refrigerator when open and close the doors.
- Do not spray or rinse the refrigerator with water and install the refrigerator in a dry place free of moisture so as not to affect the electrical insulation of the appliance.
- Never attempt to dismantle or modify the refrigerator and avoid damage to the cooling pipes.
- Remove the power plug from the wall socket in the event of a power failure or to clean the appliance. Wait for at least 5 minutes before reconnecting the power, as continuous restarting may damage the compressor.
- This product is for use as a household refrigerator according to the regulations of government standards. Household refrigerators are only for food storage and are not intended for the storage of blood, drugs and biological products.
- Adhere to the following instructions to avoid food contamination:
 1. Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
 2. Regularly clean accessible drainage systems and surfaces that can encounter food.
 3. Store raw meat and fish in suitable containers in the refrigerator so that it is not in contact with or at risk of dripping onto other food.
 4. The door bins in the freezer compartment are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.
 5. The door bins in the fridge compartment are not suitable for the freezing of fresh food.

6. If the refrigerating appliance is left empty for long periods; switch off, defrost, clean, dry and leave the door open to prevent mould developing within the appliance.

Meaning of safety warning symbols:



Prohibition symbol

This is a prohibition symbol. Any incomppliance with instructions marked with this symbol may result in damage to the product or endanger the personal safety of the user.



Warning symbol

This is a warning symbol. It is required to operate in strict observance of instructions marked with this symbol; or otherwise damage to the product or personal injury may be caused.



Caution symbol

This is a cautioning symbol. Instructions marked with this symbol require special caution. Insufficient caution may result in slight or moderate injury or damage to the product.

This user guide contains important safety information which shall be observed by the users.

OVERVIEW



A Freezer door rack

B Freezer compartment shelf

C Ice tray

D Freezer compartment drawer

E Refrigerator door rack

F Refrigerator compartment shelf

G Fruit and vegetable compartment

H Adjustable levelling foot

BEFORE FIRST USE

- Remove all packaging material before using the new refrigerator. This includes the foam base and all adhesive tape holding the refrigerator accessories inside and outside.
- Clean both the inside and outside of the refrigerator with wet cloth. A small amount of neutral detergent can be added to warm water to wash the cloth and continue wiping the appliance with clean water.
- Locate an independent power outlet with grounding contact for the refrigerator which does not share a multi-purpose socket with other electrical appliances.
- Do not connect a grounding wire. The grounding pole of the power plug will provide adequate and reliable grounding.

Transportation

- Do not invert, apply pressure to the sides of or excessively vibrate the unit. When moving, the tilt angle cannot exceed 45 degrees.
- Do not attempt to move the unit by the door.

Placement

- Ensure proper air circulation around the refrigerator. Do not place the unit near heat sources, direct sunlight, moisture or water. Avoid rust and weakening the insulation.
- Ensure that the refrigerator has least 30cm clearance above and at least 10cm on the sides and back. This ensures the refrigerator door can open or close conveniently and avoids heat build-up.
- Install the refrigerator on solid, level flooring.

Notes:

- Do not allow the refrigerator any or other heavy object to be placed on the power cable, as damaging the cable may present an electrical hazard.
- Before connecting the appliance to power, please check the voltage range of refrigerator and power supply carefully

Door height adjustment

 
Before adjusting the height of the door, rotate the downward adjusting nut clockwise (as shown below) with a wrench (not supplied) for two full rotations to loosen. Rotate the upward adjusting nut to adjust the height and then tighten the downward adjusting nut counter-clockwise. The total range of adjustment is 5mm.

1. If the refrigerator door is too low:


Open the door, use the accompanying wrench to rotate the upward adjusting nut counter-clockwise to move it upward until it is parallel and level.

2. If the refrigerator door is too high:

Open the door, use the accompanying wrench to rotate the upward adjusting nut clockwise to move it downward, until it is parallel and level.

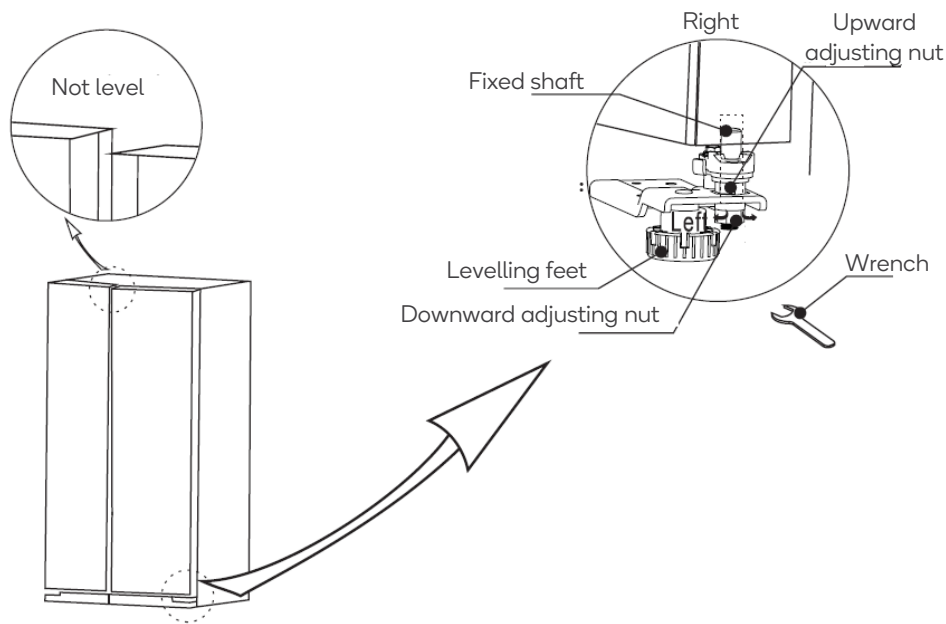

FUNCTIONS

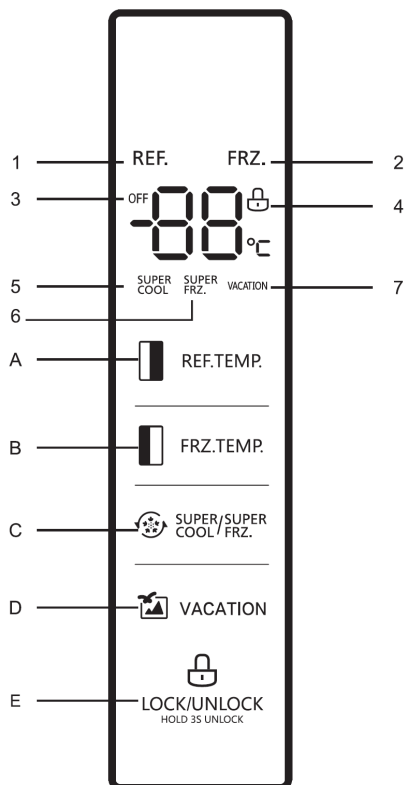 

Button Operation

- A** Refrigerator temperature adjustment
- B** Freezer temperature adjustment
- C** Super cool/Super FRZ.
- D** Vacation mode
- E** Lock/Unlock

Display

- 1** Refrigerator compartment
- 2** Freezer compartment
- 3** Close refrigerator compartment
- 4** Lock icon
- 5** Super cool mode
- 6** Super FRZ. Mode
- 7** Vacation mode

Lock/Unlock

Press and hold the Lock/Unlock key (**E**) for 3 seconds and the refrigerator will lock, showing the locked icon  (4). Repeat this process and the refrigerator will unlock, showing the open icon .

Vacation mode

Press the Vacation mode key (**D**) and the icon (7) will illuminate. Press the Lock/Unlock key (**E**) to confirm and the refrigerator will enter Vacation mode.

Super cool mode

Press the Super cool key (**C**) once to select Super cool and the icon will illuminate (5). Once locked, the refrigerator will run in Super cool mode.

Super FRZ. Mode

Press the Super cool/Super FRZ key (**C**) twice to select Super FRZ and the icon will illuminate (6). Once locked, the refrigerator will run in Super FRZ mode.

Refrigerator temperature settings

Press the REF.TEMP key (**A**) and the temperature indicator will give a prompt by flashing. Press the REF.TEMP key (**A**) again to adjust the setting temperature. The temperature changes 1°C each press, ranging between -2 and 8°C and a beep will be heard with each press.

Once an adjustment is made, the temperature indicator flashes for 5 seconds and the new setting temperature will take effect once the refrigerator is locked.

Freezer temperature settings

Press the FRZ.TEMP key (**B**) and the temperature indicator will give a prompt by flashing. Press the FRZ.TEMP key (**B**) again to adjust the setting temperature. The temperature changes 1°C each press, ranging between -16°C to -24°C and a beep will be heard with each press.

Once an adjustment is made, the temperature indicator flashes for 5 seconds and the new setting temperature will take effect once the freezer is locked.

 
OPERATION

Changing the Light

Any replacement or maintenance of the LED lamps must be made by kogon.com, an authorised service agent or similar qualified person. Do not repair or replace LED lamps yourself.

Starting

- Before initial start, keep the refrigerator still for two hours before connecting it to power supply.
- Before putting any fresh or frozen foods, the refrigerator shall have run for 2-3 hours or for above 4 hours in summer when the ambient temperature is high.
- Spare enough space for convenient opening of the doors and drawers.

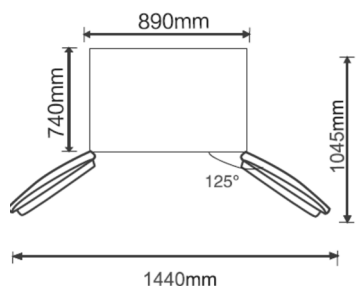

Energy saving tips

- The appliance should be in the coolest area of the room, away from heat producing appliances or heating ducts and out of the direct sunlight.
- Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality or spoil.
- Be sure to wrap foods properly and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
- Appliance storage bin should not be lined with aluminium foil, wax paper or paper towelling. Liners interfere with cold air circulation, making the appliance less efficient.
- Organise and label food to reduce door openings and extended searches. Remove as many items as needed at one time and close the door as soon as possible.

Note:

Cancel any active functions (e.g. vacation mode or quick-freezer mode) before changing the freezer's set temperature.

First Use

1. Affix the lower shelf inside the refrigerator as shown in "Cleaning & Care".

Note:

If the door is misaligned, refer to the adjustment instructions above (also located in the lower left corner of the refrigerator's right panel) to adjust.

2. Connect the refrigerator to the power supply. After being connected to power, the refrigerator will show the current chilled and frozen temperature. The refrigerator has a Power-down memory, the first time when it is power on and then every time will be set up at the last power-down operation.
3. The refrigerator will begin operation. The Temperature Control keys can be used to set the temperature.
4. Place food into the refrigerator.
After allowing the refrigerator to operate for some time to fully cool, it is ready for use.

Note:

When the temperature is set to change or put new food into the refrigerator, it will take some time for the inside temperature to equalise. The length of this period depends on the size of the temperature change, the temperature of surrounding environment, the frequency of the door being opened and the amount of food being placed inside.

CLEANING & CARE

Defrosting freezer

The freezer compartment will defrost automatically, with no need for manual intervention.

Overall cleaning

- Ensure dust behind the refrigerator and on the ground is cleaned regularly to improve the cooling effect and energy saving.
- Check the door gasket regularly to make sure there are no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.
- The interior of the refrigerator should be cleaned regularly to avoid odour.
- Turn off the power before cleaning interior, remove all foods, drinks, shelves, drawers, etc.
- Use a soft cloth or sponge to clean the inside of the refrigerator, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean. After cleaning, open the door and let it dry naturally before turning on the power.
- For areas that are difficult to clean in the refrigerator (such as narrow sandwiches, gaps or corners), it is recommended to wipe them regularly with a soft rag, soft brush, etc. and when necessary, combined with some auxiliary tools (such as thin sticks) to ensure no contaminants or bacterial accumulation in these areas.
- Do not use soap, detergent, scrub powder, spray cleaner, etc., as these may cause odours in the interior of the refrigerator or contaminated food.
- Clean the bottle frame, shelves and drawers with a soft cloth dampened with soapy water or diluted detergent. Dry with a soft cloth or dry naturally. Wipe the outer surface of the refrigerator with a soft cloth dampened with soapy water, detergent, etc. and
- Wipe the outer surface of the refrigerator with a soft cloth dampened with soap water, detergent, etc. and then wipe dry.
- Do not use hard brushes, clean steel balls, wire brushes, abrasives (such as toothpastes), organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items, which may damage the fridge surface and interior. Boiling water and organic solvents such as benzene may deform or damage plastic parts.
- Do not rinse directly with water or other liquids during cleaning to avoid short circuits or affect electrical insulation after immersion.

 


WARNING: Please unplug the refrigerator for defrost and cleaning.

Shelf adjustment

After clearing the shelf of items;


1. Pull the shelf outwards from the fridge
2. Tilt the shelf upward towards 90° until it is perpendicular to the original position.
3. Pull out the shelf by the direction.

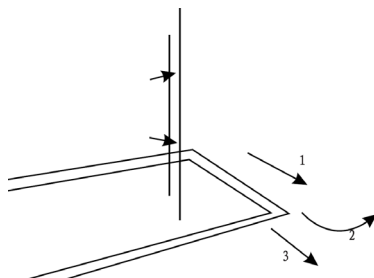

Rack adjustment and removal


1. Lift the rack upwards
2. Hold the rack by both sides and then pull it outwards.
3. After cleaning, install the rack by reversing the steps above.

 You can also adjust the position according to the height of stored food.

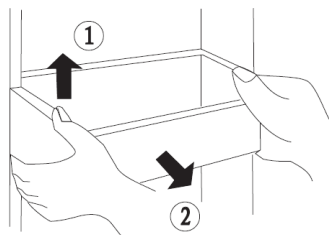

Cleaning the Glass Shelf

 - The innermost part of the refrigerator contacts the shelves backstop. To remove the shelves, raise them upward.
- Adjust or clean the shelves according to your requirement.

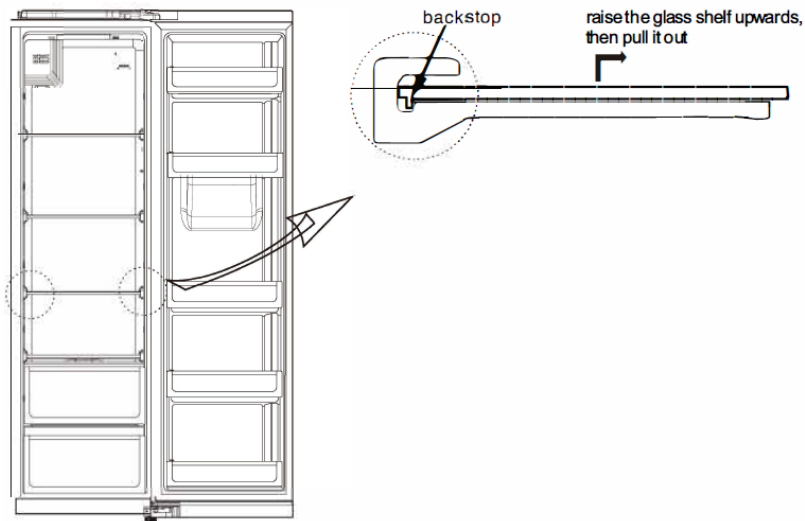

Out of Operation

Power failure: In case of power failure, even if it is in summer, foods inside the appliance can be kept for several hours. During a power failure never open the door or add or remove food from the appliance.

If the fridge is not going to be used for an extended period: The fridge should be unplugged and then cleaned. The doors should be left open to prevent odour.

Moving: Before the refrigerator is moved, take all objects inside out of the fridge. Fix the glass partitions, vegetable holder, freezing chamber drawers, etc. with tape and tighten the levelling feet. Close the doors and fix them with tape. During moving, the appliance shall not be laid upside down or horizontally or be vibrated. The inclination during movement must be no more than 45°.



The appliance should run continuously once it is started. Generally, the operation of the appliance should not be interrupted, otherwise the service life may be impaired.

Storage

- The appliance should be in the coolest area of the room, away from heat producing appliances or heating ducts and out of direct sunlight.
- Let hot foods cool to room temperature before placing them in the appliance.
- Overloading the appliance forces the compressor to run longer, increasing energy consumption.
- Foods that freeze too slowly may lose quality or spoil.
- Be sure to wrap foods properly and wipe containers dry before placing them in the appliance to cut down on frost build-up.
- Do not line the storage bins with aluminium foil, wax paper or paper towelling. Liners interfere with cold air circulation, making the appliance less efficient.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time and close the door as soon as possible.

TROUBLESHOOTING

Failed operation	• Ensure the unit is securely connected to the power socket • Check whether the voltage is too low • Check for a power failure or if partial circuits have tripped
Odour	• Ensure odorous foods are tightly wrapped before storage • Check for any rotten food that may be inside • Clean the inside of the refrigerator
Excessive compressor operation	This is normal in summer when the ambient temperature is high: • Avoid having too much food in the appliance at once • Allow food to cool before being put into the appliance • Avoid opening the doors too frequently
Light fails to illuminate	• Ensure the appliance is connected to power • Check the light for damage or a bulb failure • Have the light replaced by a professional
Doors cannot be properly closed	• The door is stuck on an item inside • Too much food has been placed in the refrigerator • The refrigerator is tilted or unlevel
Loud noise	• Ensure the floor is level and that the appliance is stable • Ensure accessories are placed in the correct locations
Door seal fails to be tight	• Remove foreign matters on the door seal • Heat the door seal and then cool it for restoration (use a hair dryer or a hot towel for heating)
Water pan overflows	• There is too much food in the chamber or the food stored contains too much water, resulting in heavy defrosting • The doors are not closed properly, resulting in frosting due to entry of air and increased water due to defrosting

Hothousing	• Heat dissipation of the built-in condenser occurs via the housing, which is normal • Provide ample ventilation to allow for optimal heat displacement
Surface condensation	• Condensation on the exterior surface and door seals of the refrigerator is normal when the ambient humidity is too high. Simply wipe the condensation with a clean towel.
Abnormal noise	• The compressor may produce buzzing sounds during operation, which are particularly loud upon start or stop • Refrigerant flowing inside of the appliance may also produce a creaking noise • Both are part of the normal operation of the product

Disposal

	This marking indicates that this appliance should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.
---	--



NOTES

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com