

Owner's Manual



Enjoy it.

OSCILLATING TOWER HEATER

This product is only suitable for well insulated spaces or occasional use.



IMPORTANT:

PLEASE READ ALL OF THE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

IMPORTANT SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons.
- Check the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

CAUTION: Some parts of this appliance can become very hot and can cause burns. Particular attention has to be given where children and vulnerable people are present.

- Children younger than 3 years old should be kept away from the appliance unless continuously supervised.
- Children aged from 3 years and less than 8 years should only switch on/off the appliance, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance is not a toy.
- Children should not carry out cleaning or user maintenance without supervision.
- This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting products.
- Keep furniture, curtains and other flammable material at least one metre away from the appliance.
- Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.
- Do not immerse the appliance or plug in water or any other liquid.
- Do not operate the appliance with wet hands.
- Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- This appliance must not be located immediately below a socket-outlet.
- Always unplug the appliance when not in use.
- Do not leave the appliance unattended whilst connected to the mains power supply or when in use.
- Do not remove from the mains power supply by pulling on the cord; switch off and remove by the plug.
- Do not use this appliance for extended periods of time.
- Do not use this appliance for anything other than its intended use.
- For indoor use only.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- Do not block any air intake of the appliance; place in an open, well ventilated space.
- Do not attempt to move the appliance while it is in use.
- Do not put objects into any openings.
- Do not use the appliance with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically, as there is a risk of fire if the appliance is covered or positioned incorrectly.



- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out this appliance must not be supplied through an external switching device such as a timer or connected to a circuit that is regularly switched on and off by the utility.
- This appliance should be used on a stable, heat-resistant surface.
- Do not place this appliance on a carpet with a deep pile.
- Always unplug the appliance after use and before any cleaning or maintenance.
- Use of an extension cord with the appliance is not recommended.
- Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage the appliance.



HOT SURFACE: Do not touch the hot section or heating components of the appliance.

 


WARNING: In order to avoid overheating, do not cover the appliance.



ASSEMBLY INSTRUCTIONS

- Remove the heater from its protective packaging and keep for future reference and storage.
- Pass the power cable through the central gate of the base halves and firmly clamp both halves of the base together. Coordinate the heater body onto the base and fix the unit to the under side of the base using the screws provided and a screwdriver.

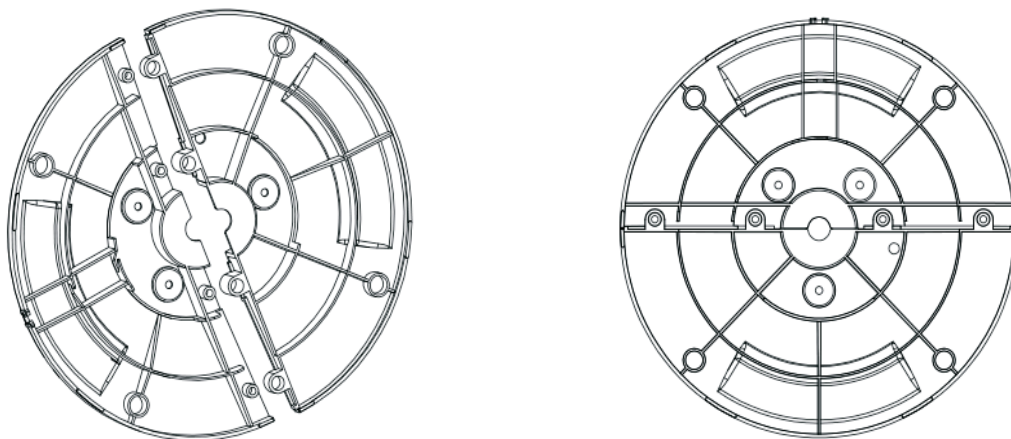

PLACEMENT

This heater is designed to be placed on a hard, level surface. When positioning, please keep the following points in mind:

- If you are placing the heater in an alcove, make sure that there is at least 150mm of space on all sides to ensure good air circulation
- The heater must not be located over a fixed electrical socket. The socket must always be accessible in order to disconnect the heater from the electrical supply for maintenance.
- Keep hearth rugs and other soft furnishings away from the front of the heater. They could obstruct the free flow of hot air from the fan and damage both soft furnishings and heater.

 
SAFETY TIP-OVER SWITCH

The appliance is fitted with a safety tip-over that switches off the appliance automatically if it tilts. This is to prevent the heater from causing damage or fire if accidentally knocked over.



CONTROLS

Each touch button will illuminate when selected.

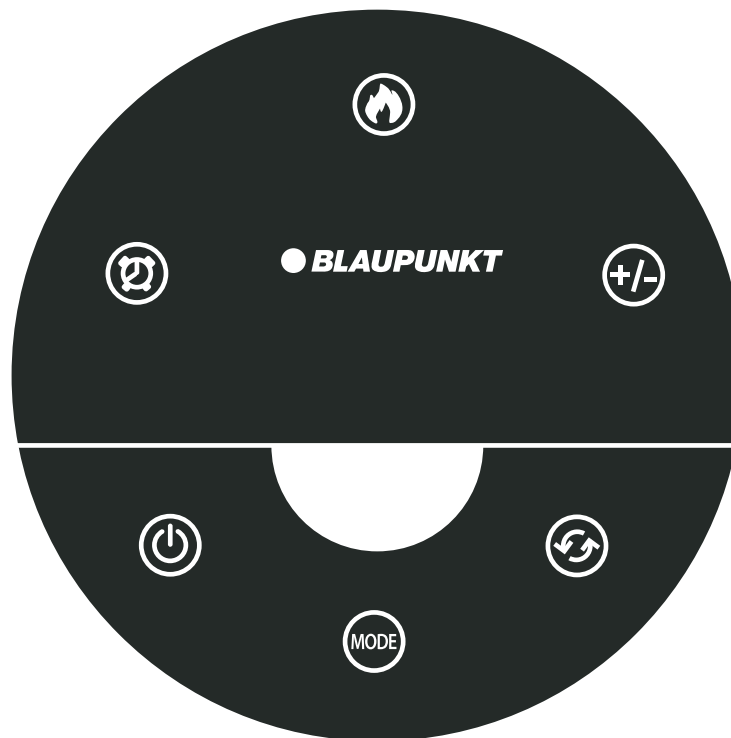

-  Power button ON/OFF
-  Set timer between 1 - 24 hours
-  Flame effect ON/OFF
-  Thermostat control button
-  Oscillation ON/OFF
-  3 settings for selection: Cool, Warm, Hot.
-  Master switch ON/OFF



OPERATING INSTRUCTIONS

- Before inserting the plug into an electrical outlet, make sure that the electrical supply in your area matches that on the rating label on the unit.
- Ensure the master switch on the back of the unit is set to off " O ", plug the power cable into a 220-240V~AC electrical outlet and turn the master switch on " I ".
- Turn power button ON . The unit will display the current room temperature and blow cold air.
- Press  button to desired temperature.
- When finished using, press power button OFF . The unit will blow out cool air for 30 seconds before turning off (Blue light illuminates).

THERMOSTAT

- Press to adjust to desired temperature(max 49 degrees), continue to press to reset from 10 – 49 degrees.
- When the air temperature drops 3 degrees below the set temperature, the heater will start heating with 1000W. Blue light illuminates.
- When the air temperature drops 6 degrees below the set temperature , the heater will start heating with 2000W. Red light illuminates.
- When the air temperature is higher than the set temperature, the heater will blow out cold air.

OSCILLATION

The oscillation function uses a forced-fan circulation to heat as it rotates from side to side, quickly & evenly warming an entire room while maintaining a consistent temperature. Press once for the Tower to oscillate. Press again to stop oscillation.

 
TIMER

- The timer function allows you to set the length of operation from 1 hour to 24 hours. Each press of the timer button increases the length of operation by 1 hour. Once the timer has been set the timer will count down the hours in 1 hour periods, showing on the display the remaining operating time until the heater turns itself off. Pressing the timer button once more after the display reflects 24 hours will reset the heater to continuous running.



REMOTE CONTROL FUNCTIONS

The remote control uses a lithium battery CR2025 3V

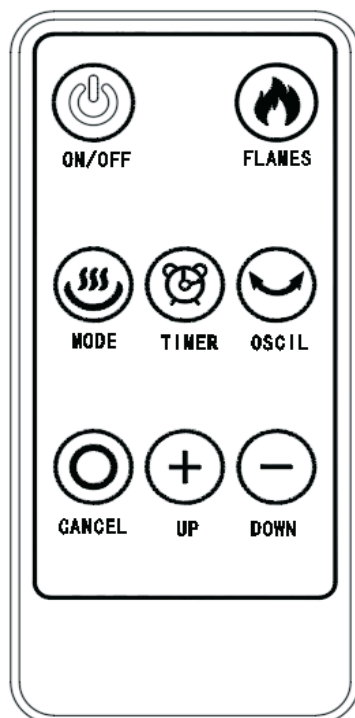

-  ON/OFF: Power button
-  FLAMES: Flames display function
-  MODE: 3 settings for selection: Cool, Warm, Hot.
-  TIMER: To set timer from 1-24 hours
-  OSCILLATION: Oscillation function for heater
-  CANCEL: Turn off the light of heater. Sleep mode
-  UP: To increase temperature
-  DOWN: To decrease temperature



THERMAL CUT-OUT DEVICE

This appliance is fitted with a thermal safety cut-out device built in to prevent it from overheating. Should the Electric Fire start to overheat, the thermal safety cut-out system will automatically operate and the Fire will switch off. If this happens: Turn off the electric fire using the on/off switch. Unplug the fire from the mains supply and allow it to cool for approximately 15 minutes. Clear any blockages on any vents, being careful not to damage the Fire. Plug back into the mains supply and switch on.

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this Fan Heater must not be supplied through an external switching device such as a timer or connected to a circuit that is regularly switched on and off by the device.

CLEANING AND CARE

- Before cleaning, always remove the plug from the electrical socket. Ensure that the unit is cool enough to work on.
- Use a slightly damp, lint-free cloth to clean this appliance. Do not use abrasive cloths or polishes.
- Do not use harsh chemicals or solvents to clean this product and avoid using abrasive cleaning agents.
- Do not immerse in water or any liquid when you clean it.

ELECTRICAL INFORMATION

(Fixed Mains Plug Only)

The mains lead supplied with this product is fitted with a BS1363/A 13 amp plug. If it is not suitable for your supply sockets it must be replaced with an appropriate plug.

If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions on the next page.

The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard.

If the fuse needs to be replaced it must be of the same rating and ASTA approved to BS1362. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the application can be used.

WIRING INSTRUCTIONS

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions shown. In both cases ensure that the outer sheath of the cable is held firmly in place by the cable clamp.

ELECTRICAL INFORMATION

(Power adapters only)

 
Never open the power adapter, you risk getting an electric shock. Only use the power adapter that is supplied with your product. You must always connect the power adapter to the product before connecting to the mains power supply. The power adapter must be used indoors only, and must not be subjected to damp conditions. The power adapter does not have any user serviceable parts.



2-CORE PLUG




WARNING: Do not connect either wire to the earth terminal.



This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

 The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

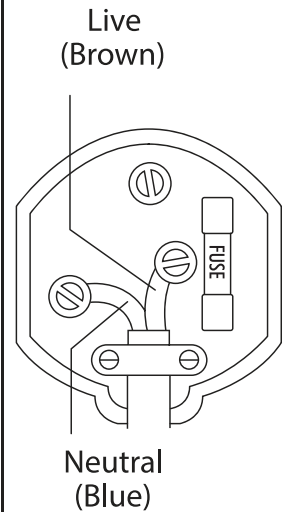

3-CORE PLUG



 
WARNING: This appliance must be earthed.



The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol, or coloured green or green and yellow.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

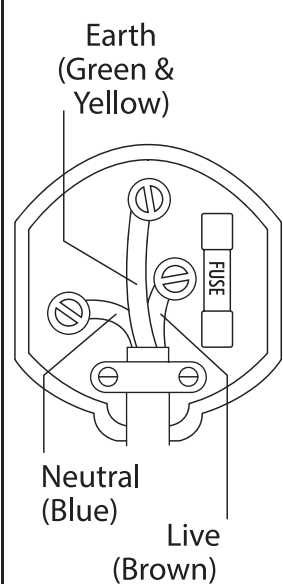

TECHNICAL SPECIFICATION

Model Number:	372593
Voltage:	AC220-240V 50-60Hz
Total heat power:	2000 W

This appliance complies with the below listed EU Directives

2014/30/ EU Electromagnetic Compatibility Directive

2014/35/ EU Low Voltage Directive

2011/65/ EU Restriction of Hazardous Substances

The complete declaration of conformity is available upon request for relevant enquiries

CUSTOMER SUPPORT

For all product support, please email:

blaupunkt@bmstores.co.uk

GUARANTEE

This product is guaranteed for twelve months from the date of original purchase. If any defect should occur due to faulty materials or workmanship, please return it to the store it was purchased from.

You will need to have your receipt of purchase to hand . The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in the User Manual.
- The product must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.



Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P_{nom}	2.0	KW	Manual heat charge control, with integrated thermostat	N/A
Minimum heat output (indicative)	P_{min}	1.0	KW	Manual heat charge control, with room and/or outdoor temperature feedback	N/A
Maximum continuous heat output	$P_{max,c}$	2.0	KW	Electronic heat charge control with room and/or outdoor temperature feedback	N/A
Auxiliary electricity consumption				Fan assisted heat output	N/A
At nominal heat output	e_{lmax}	0.000	KW	Type of heat output/room temperature control (select one)	
At minimum heat output	e_{lmin}	0.000	KW	Single stage heat output and no room temperature control	[no]
In standby mode	e_{lsb}	0.000	KW	Two or more manual stages, no room temperature control	[no]
				With mechanic thermostat room temperature control	[no]
				With electronic room temperature control	[no]
				Electronic room temperature control plus day timer	[yes]
				Electronic room temperature control plus week timer	[no]
				Other control options (multiple selections possible)	
				Room temperature control, with presence detection	[no]
				Room temperature control, with open window detection	[no]
				With distance control option	[no]
				With adaptive start control	[no]
				With working time limitation	[no]
				With black bulb sensor	[no]
Contact details					





Information on Waste Disposal for Consumers of Electrical & Electronic Equipment

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).

Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.

Imported by
B&M Retail Ltd
The Vault, Dakota Drive,
Estuary Commerce Park,
Speke, Liverpool, L24 8RJ, UK

Centz Stores 7 Limited
5 Old Dublin Road
Dublin
A94 K1H5
Ireland

Enjoy it.

Your statutory rights are not affected.

Made in China.

All brand names are registered trademarks of their respective owners.

