




- To change the orientation of the photo-electric control, loosen the socket screws.

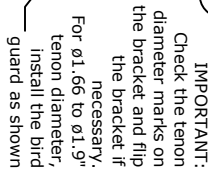


4. Evenly tighten the four bolts of the bracket.
- IMPORTANT:** Use a torque wrench and tighten the 4 bolts @ 135 lbs.in (11.25 lbs.ft)
5. Connect the branch circuit to the terminal block. Tighten the set-screws between 20 and 25 lbs.in
- Use the optional cable holder to attach the branch circuit wires.
- Close the access door.
-
- | ANGLE | TENSION |
|-------|---------|
| -5° | 3.75" |
| -2.5° | 4.125" |
| 0° | 4.5" |
| 2.5° | 4.875" |
| 5° | 5.25" |

- Disconnect the multiple connector.

6. Disconnect the housing ground wire

- To remove the lens:

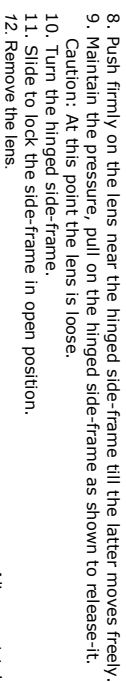

- To replace the LED board:
 - Disconnect the power.
 - Remove the lens.
 - 13. Remove the LED board screws.
 - Replace the LED board.
 - 14. Align the LED board with the alignment tabs.
 - Tighten the LED board screws @ 15 @ 20 lbs in

