

USER MANUAL

BL-CHASER

INTRODUCTION:

Congratulations on purchasing BL-CHASER. Prior to use, we suggest that you carefully read all of the instructions.

FEATURES

Audio trigger	Hanging bracket included
4 selectable chase programs	External fuse
LED channel display	Automatic audio override
4 convenient power sockets on rear	Manual speed control

CAUTIONS

1. Never use this unit in a wet and /or dusty environment or in the open air.
2. Do not block unit's air vents, as this can cause the unit to overheat.
3. It is not allowed to expose the appliance to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
4. This device falls into protection-class I. Therefore it is not allowed to connect the plug to another socket-outlet other than a protection- class I socket – outlet.
5. The grounding must be safe enough, with the resistance not more than 0.5Ω
6. If you want 2 channels on at the same time, the total load on any two channels should not exceed 5A.
7. The sum of the output wattage should not exceed 1000w
8. During installation of the device, a socket with a switch would be preferable. The switch must be turned off when not in use.
9. The use of apparatus should be in moderate climates.

OPERATION

1. Place the unit on a stable surface or hang from bracket.
2. Select the equipment to connect to the chaser carefully. To ensure safe operation, follow these two simple rules:
 - (1) The total load should not exceed 5 amps.
 - (2) For two channel chases, the total load on any two channels cannot exceed 5A (e.g. If you want two channels on at the same time, the total on any two channels should not exceed 5A).
3. Make sure the unit's power switch is in the "0" position. Plug the unit into a properly grounded power supply.
4. Use the dip switches on the front of the unit to select the desired chase sequence:

DIP 1	DIP 2	CHASE SEQUENCE
OFF (0)	OFF (0)	ONE CHANNEL FORWARD AND REVERSE
ON (1)	OFF (0)	ONE CHANNEL RANDOM CHASE
OFF (0)	ON (1)	TWO CHANNEL MIXED CHASE
ON (1)	ON (1)	MASTER CHASE (with all of the above chases)

5. Turn the audio knob to zero and adjust the speed control knob to desired speed.
6. If you want audio control, turn the audio control knob clockwise until the unit begins to chase to the beat of the music.

SPECIFICATIONS

Rated power.....	1000W MAX.
Rated current.....	5A MAX.
Fuse	250V 6.3 A
Voltage.....	AC230V,50Hz
Weight.....	1.4kg
Dimensions.....	L240 x W60 x H100 mm

