



100" PORTABLE PROJECTOR SCREEN WITH STAND

KAPRS100WA

SAFETY & WARNINGS

Ensure to read all warnings and instructions in this user guide prior to first use.

- Do not set up the projector screen on an unstable surface.
- Do not set up in the projector screen outdoors during strong winds.
- Do not modify the projector screen yourself.
- Do not hang on or hang other objects on the projector screen.

COMPONENTS



A Projector screen



B Long tube (x6)



C Base tube (x2)



D Screen tube (x4)



E Stand base (x2)



F Vertical connectors (x6)



G 3-way connector (x2)



H Bend connector (x2)



I Rope (x2)



J Peg (x6)



K Carry bag

ASSEMBLY


Step 1:

- Arrange the two stand bases **(E)** apart from each other.
- Insert each base tube **(C)** on top of each stand base. Place a 3-way connector **(G)** on top of each stand base.




Step 2:

- Unfold the projector screen **(A)**.
- Connect three long tubes **(B)** using two vertical connectors **(F)** to form a long pole assembly. Insert this long pole assembly through the bottom edge of the projector screen.
- Secure the bottom edge by inserting both ends of the pole assembly into the 3-way connectors placed in step 1.

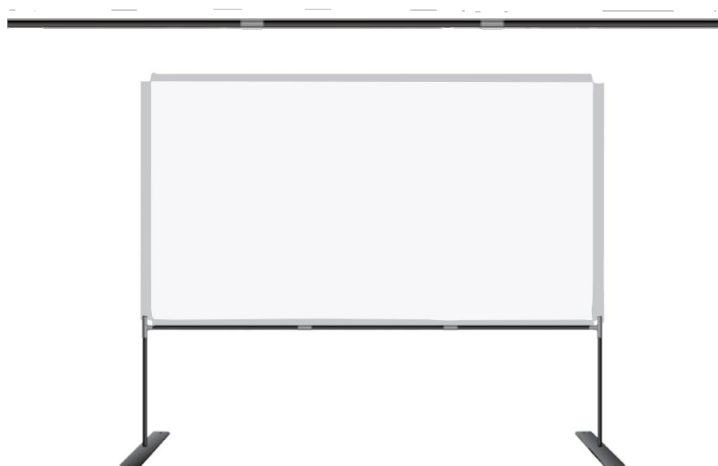


Step 3:

- Connect two screen tubes (**D**) with one vertical connector to form a short pole assembly. Repeat this process again so you have two screen pole assemblies.
- Slot the screen pole assemblies through either side of the projector screen and connect them with the 3-way connectors placed in step 1.

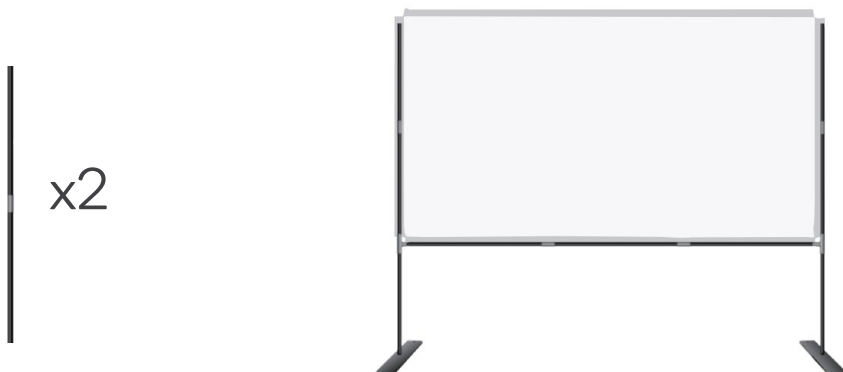

Step 4:

- Form another long pole assembly as instructed in step 2.
- Slot the long pole assembly through the top edge of the projector screen.
- Place one bend connector (**H**) on each end of the long pole assembly and connect the bend connectors with the top ends of the screen pole assemblies slotted in step 3.

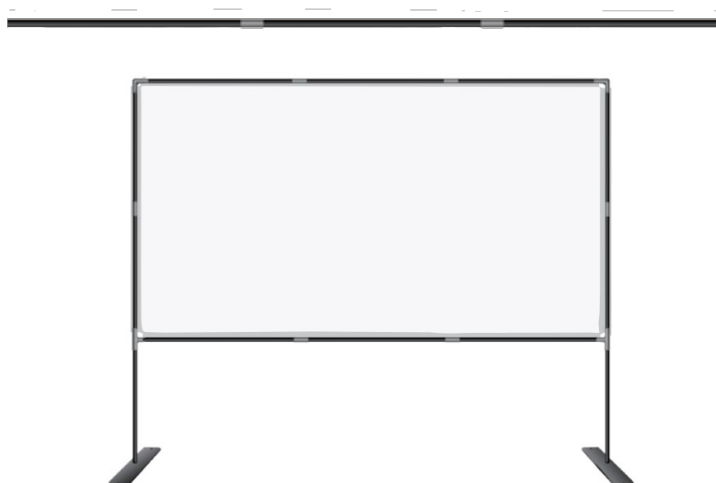

CLEANING & CARE

To clean the projector screen, hand wash it with soap or detergent. Leave it to dry. Once dried, the projector screen can be reused.

FAQ

1. Can this screen be viewed from both sides?

Yes, this projector screen supports both front and rear projection.

2. Can the projector screen be used without the stand, for example, hanging it on a wall?

No, this projector screen cannot be used without the stand. As it is not perforated, it also cannot be hung on a wall.

3. How can I prevent the projector screen from blowing or falling in the wind outdoors?

This projector screen comes with eight pegs and two ropes that can be used to secure the stand bases and projector screen to the ground.

SPECIFICATIONS

Screen size	254cm (100 inches)
Frame length and width	235 x 189cm (92.5 x 74.4 inches)
Screen length and width	223.5 x 118.3 cm (88 x 46.6 inches)



NOTES

[illegible]

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com