 
 
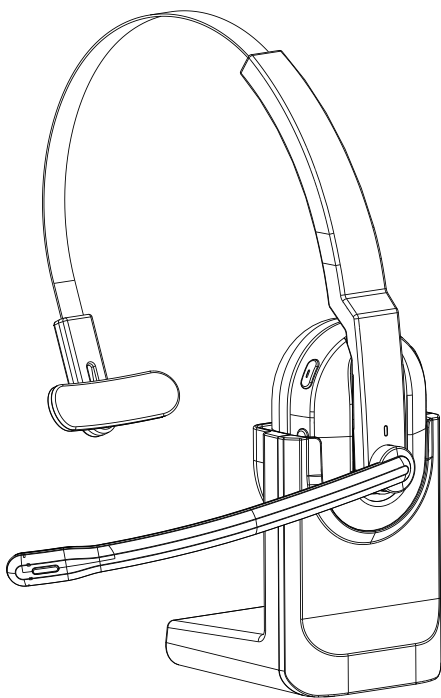 


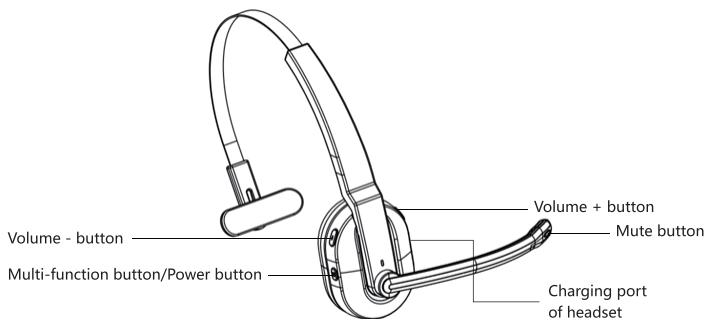

Mono Wireless Headset M7

User' s Manual

1. Product Overview

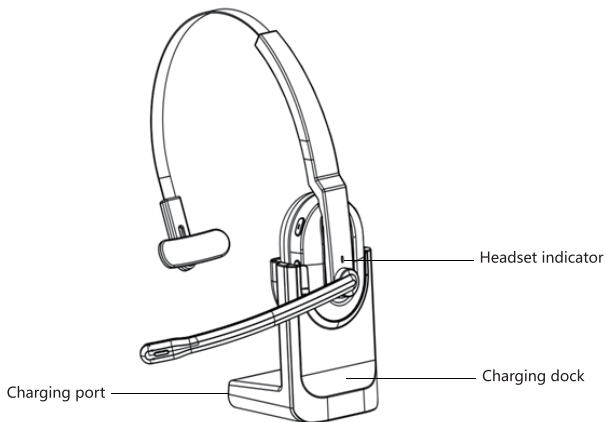

Packing list:

1 x M7 Wireless Mono Headset

1 x Type-C Charging Cable

1 x Charging Dock

1 x User Guide

1 x USB Bluetooth Adapter (*Plug it into the PC to connect it with the headset, realize the calling function and compatibility of third-party voice software on the PC)

2. Bluetooth Pairing and Connection

Firstly, with the headset off, press and hold the multi-function button of the M7 headset for 3 seconds to enter the pairing mode, and the indicator will flash in red and blue alternately.

 
For mobile phone:

Enable the Bluetooth function on the mobile phone, and click "search other devices". When "M7" appears, click it to connect the headset. After the connection is successful, the LED indicator of headset will turn to blue and flash slowly,

For PC:

With the USB Bluetooth adapter, connect the headset to the PC. (Note: Plug it into the PC to connect it with the headset, realize the calling function and compatibility of third-party voice software on the PC)


① Insert the Bluetooth Adapter into the USB port on your PC, which will be automatically turned on.

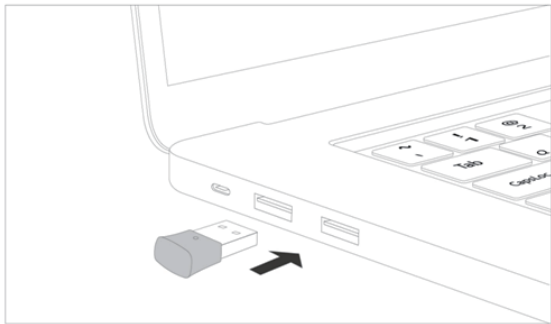


② After it is turned on, the indicator on the Bluetooth dongle will flash quickly in blue to indicate that it is now in pairing mode. (Turn the headset into the pairing mode and keep it as close as possible to the Bluetooth dongle (within 8 inches), so the headset will be connected with the dongle automatically.

 *Note: It will take about 20 seconds to connect the headset for the first time. If the headset and the Bluetooth dongle cannot be connected, please unplug the Bluetooth dongle and then plug it into the PC again. And restart the headset to enable the pairing mode and try to reconnect them.



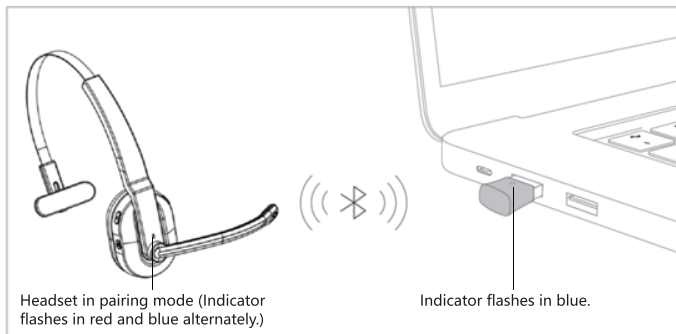

 ③ After the headset is successfully connected, the LED indicator of headset will turn to blue and flash slowly, the blue indicator of the Bluetooth dongle will always being on as well.

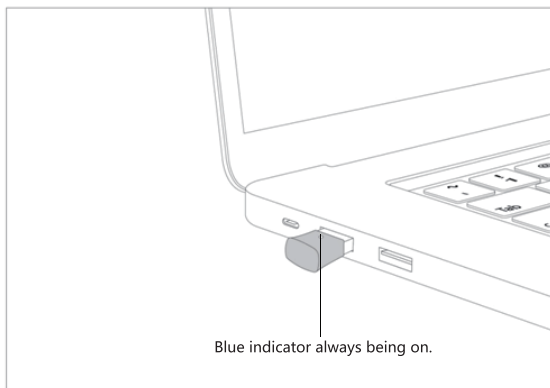

*Note: When the Bluetooth dongle is not in use, please turn off the headset before unplugging the dongle from the PC.

3. Basic Feature

Key	Function	Operation method
Multi-Function button	Power-on	Press and hold the multi-function button for 3 seconds to power on, and it will be in the pairing mode by default; you will hear the prompt voice of "Powered on".
	Power-off	When the headset is on, press and hold the multi-function button for 5 seconds and then it will be powered off; you will hear the prompt voice of "Powered off".
	Start pairing	After the headset is powered on, the indicator will flash in red and blue alternately to indicate that it is in the pairing mode, and there will be prompt voice of "Pairing"
	Play/Pause	When playing music, click the multi-function button to play/pause the music.
	Redial last number	When connected to the mobile phone, double-click the multi-function button to redial the last number and make a phone call on the mobile phone.
	Voice assistant	When it is connected, press and hold the multi-function button for 2 seconds and then release it; the voice assistant will be enabled after the "beep" sound is heard.
	Audio switch	During a call, press and hold the multi-function button for 2 seconds to switch the microphone audio between the phone and the headset. When the audio is switched successfully, there will be a "beep" sound.
	Answer a call	When there is an incoming call, click the "Multi-function button" to answer the call.
	Hang up	During a call, click the multi-function button to hang up the current call.
	Reject a call	When there is an incoming call, press and hold the multi-function button for 2 seconds and then the call is rejected after the "ding-dong" sound is heard.
Volume + button	Increase the volume	Click the "Volume +" button to turn the volume up. (There will be a beep when the maximum volume is reached).
	Next Track	Press and hold the "Volume +" button for 1 second when playing music to skip to the next track.
Volume - button	Decrease the volume	When playing music/answering a call, click the "Volume -" button to turn the volume down.
	Previous Track	Press and hold the "Volume -" button for 1 second when playing music to back to the previous track.
Mute button	Mute the microphone	During a call, click the "Mute button" on the microphone to mute your voice, and click it again to unmute the microphone.

4. One-to-two mode

M7 headset is able to be connected to two Bluetooth enabled devices(computer, tablet, mobile phone, etc) at the same time.

① Connect the headset to device A(the first device): Press and hold the multi-function button of M7 for 3 seconds to turn it on and enter the pairing mode. The indicator will flash alternately in red & blue. Enable the Bluetooth function on the device A and search for the headset. Click "M7" to connect once it appears on the Bluetooth pairing list. After the headset is successfully connected, disable the Bluetooth function of the device A. M7 headset will be automatically in the pairing mode again.

② Enable the Bluetooth function of the device B(the second device), connect the M7 headset to the device B in the same way as the device A. After they are paired successfully, enable the Bluetooth function on the device A again, and tap on M7 to connect it. If connection is successful, one-to-two pairing function of the headset is activated.

* Only music from one device can be played in one-to-two pairing mode. To play music from another device, music from the previous device should be paused or turned off. The same is true for calls.

5. Charging

The red indicator flashes when the battery power of M7 is low, please charge it immediately. The indicator will turn red when the headset is being charged, and blue when it is fully charged after about 2 hours of charging.

Please connect the Type-C charging cable to the charging dock or directly to the M7 headset to charge it.

*Note: Please use 5V1A wall charger to charge the headset (When M7 is not in use, please charge it at least once every 2 months)

6.TTS Voice Prompt

Power on
Pairing
Paired
Your headset is connected
Your headset is disconnected
Power off
mute on
mute off

7. Product specifications

Bluetooth version	V5.0
Bluetooth chip	QCC3020
Communication distance	10 meters
Bluetooth protocol	HSP,HFP,AVRCP,A2DP
Decoding method	SBC,AAC
Built-in battery	400mAh/3.7V
Charging time	About 2 hours
Net weight of headset	72g
Headset dimensions	39.61*149.95*163.82mm
Net weight of charging dock	123.5g
Size of charging dock	60*79*71.48mm

8. Precautions and Q & A

A. How to reset the headset? (clear the pairing record)

In the pairing mode(The indicator of headset flashes in red & blue alternately) , press and hold the multi-function button and volume “-” button for 5 seconds simultaneously to clear the pairing record(reset the headset). When the purple indicator light flashes once, that means the pairing record has been cleared and M7 will be not reconnected to the previously connected device any longer.

***When various connection exceptions occur, please try to clear the pairing record.**

B. How to reconnect? What to do if I can't reconnect?

After M7 headset and your device are connected successfully , it will be automatically reconnected to your device once it is powered on.(in the Bluetooth available range)

If it can't be reconnected, please try to pair and connect them again.

C. What is the pairing password?

If a prompt for password input pops up when some devices are connected to M7, you can try to enter 0000 (four zeros), 8888 (four eights), 1111 (four ones), or 1234.

D. Which devices can M7 be charged with?

Please charge it with 5V1A charger.

E. How to realize the three-way calling function?

①When another call comes in during a call, click the Multi-function button to answer the new call and hang up the current call;

②When another call comes in during a call, double-click the Multi-function button to answer the new call and hold on the current call;

③When another call comes in during a call, press and hold the Multi-function button for 2 seconds to hold on the current call and reject the new call;

④During a three-way calling, double-click the Multi-function button to switch between the current call and the held call.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Safety instructions

- Do not place the product and its accessories at extreme temperatures, otherwise it may cause hazards such as product failure, fire or explosion.
- Protect the product from strong impacts or jolts, so as not to damage the product and its accessories, thus avoiding product failures.
- Do not disassemble or modify the product and its accessories by yourself. Contact us for after-sales service when the product fails.



Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.

- Risk of explosion if the battery is replaced by an incorrect type, disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.