

EARISE



D51


USER INSTRUCTION



OPERATION PANEL.....	01
GENERAL FUNCTIONS	02
BLUETOOTH.....	02
FM RADIO	03
USB / TF CARD	03
TWS	04
CHARGING GUIDE	04
SPECIFICATIONS	05
WHAT'S IN THE BOX	05



OPERATION PANEL

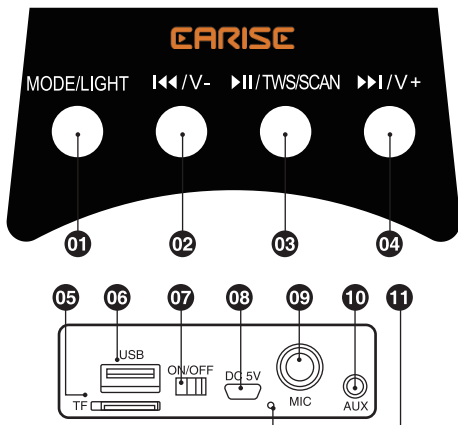

- 01** Mode / Light
- 02** Previous Track / Volume Down
- 03** Play / Pause / Scan / TWS
- 04** Next Track / Volume Up
- 05** TF/SD Card Slot
- 06** USB Flash Drive Slot
- 07** Power On / Off
- 08** DC 5V Charging Port
- 09** Mic In Port
- 10** AUX In Port
- 11** Charging Indicator

GENERAL FUNCTIONS

Key	Function
⏮/V-	1. Short press the button to the previous track. 2. Press and hold the button to volume down.
⏭/V+	1. Short press the button to the next track. 2. Press and hold the button to volume up.
MODE/LIGHT	1. Short press the button to switch the play mode: Bluetooth, FM, AUX In, USB/TF. 2. Press and hold the button to switch the light mode. 3. Double press the button to turn on/off the light.
▶ /TWS/SCAN	1. Short press the button to play or pause. 2. Press and hold the button to enter TWS mode. 3. In Bluetooth mode, press and hold the button to disconnect Bluetooth. 4. In FM mode, press and hold the button to search FM stations from 87.5MHz to 108.0MHz automatically.

BLUETOOTH

1. Power on the speaker. The default mode is Bluetooth.
2. Turn on the Bluetooth of your device, search for "EARISE.D51", and click to pair.

3. A voice prompt "Bluetooth connected" to be heard indicates a successful connection.
4. In Bluetooth mode, press and hold the "▶|| / TWS" button to disconnect Bluetooth.

FM RADIO

1. Press the "MODE/LIGHT" button to switch to FM radio mode.
2. Press and hold the "▶|| / TWS" button to search FM stations from 87.5MHz to 108.0MHz automatically.
3. Press the "◀◀/V- " or "▶▶/V+" button to select a station.

Note: please search for radio stations automatically the first time you use it.

USB / TF CARD

1. Please ensure that there is at least one song in the USB flash drive, or the speaker can't recognize it.
2. Insert a USB flash drive and the speaker will automatically start playing the existing music from the first song.
3. The song file format must be MP3.
4. The USB flash drive must have a capacity of 8G to 32G.
5. The USB flash drive must be USB 2.0 and the file system must be FAT32.
6. If the USB flash drive is formatted and the file system is not FAT32, it will not work properly.



TWS

1. Please purchase 2pcs D51 Bluetooth speakers if you want to use TWS function.
2. Power on the first speaker, and connect the speaker via Bluetooth. You should see "EARISE.D51" in the list over Bluetooth devices.
3. Power on the second speaker, and then press and hold the "▶|| / TWS" button. You will hear a tone and the devices are connected in TWS mode successfully. Then you can now enjoy True Wireless Stereo (TWS) for a stereo audio experience.
4. To disconnect the speakers from TWS, please press the "▶|| / TWS" button on the first speaker. You will hear a tone, the devices are disconnected from TWS mode.

CHARGING GUIDE

1. When in low battery, the volume will drop down 70% automatically, please use the original USB cable for charging, the red lights up when charging, and turn off once fully charged.
2. **Note:** The charging time can't be less than 12 hours for the first use, please keep the battery on power once long time no work, otherwise it will be easily damaged.
3. Please strictly control the charging time, do not continue to charge for a long time, which will lead to battery power loss and can not save power.



SPECIFICATIONS

Power Output: 5W (RMS)

Drive Unit: 4"3Ωx1

DC Input: USB 5V

Power Supply: AC 100-240V

FM Frequency: 87.5-108MHz

R.Frequency: 90Hz-20KHz

S/N: $\geq 60\text{dB}$

Battery: 3.7V 1800mAh

Dimension: L150xW110xH180mm

WHAT'S IN THE BOX

1 x EARISE D51 Bluetooth Speaker

1 x USB Charging Cable

1 x User Manual



