

Smart

VIDEO DOORBELL

Quick Start Guideline

Please read it carefully before using the product, and keep this handy

Packing List

After opening the package, please make sure the doorbell (hereinafter referred to as the "Equipment") is in good condition. Make sure parts below is included.



Appearance Introduction



IR LED

The ambient light is not enough, this can increase picture brightness.

Light sensor

Used to collect environmental light status, when ambient light drops down to 2 Lux, the IR LED will turn on automatically.

MIC

Audio Capture

Button

 
 
Doorbell button

Lens

Video image capture

Indicator Light

Blinking blue light: Configuration status;
Red light ON: Failed to connect to WiFi;
Blue light ON: Connect to phone successfully;
Red and blue flash: Connect to WiFi successfully

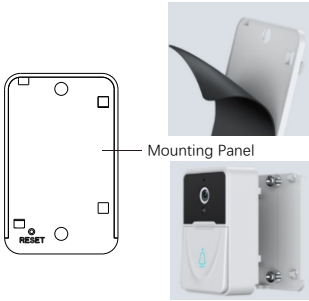

Button

To reset the device, long press this button for 5 seconds

Battery

Build in li-ion battery

USB Interface

Micro USB port charging

Mounting Port

Use this port to mount the camera to bracket

Reset

To restart the device

Setup the Device

Thank you for choosing our products! Please follow below instruction to setup and use your doorbell device.

1. Downloading and installing the APP

Open App Store (for iOS) or Google Play Store (for Android) on your device, search app or scan QR code as following to download the right App for your device.



2. Setting up the APP

Before you begin;

- > Make sure the APP is installed to your device
- > Make sure that your device is connected to a 2.4GHz Wi-Fi networks, 5GHz network is NOT compatible.

User Register

New user register it according to guide steps, already registered user just login it

Welcome

Unregistered users will directly create an account for you

Logging in account

Please enter your mobile phone no.---

Verification code

Please enter the verification code---

Send

Log in

Overseas network

I have read and agreed to the Terms of Service (Privacy Policy)

3. Add the device

 
 
Before add, turn on the bluetooth on the mobile setting.

Open the app and tap "Add device"

Select device: X3, and it will show the WiFi network setting.

The name of the WiFi network will automatically be filled in.


enter the WiFi password and tap "Next step" and confirm.

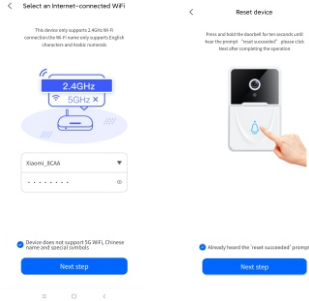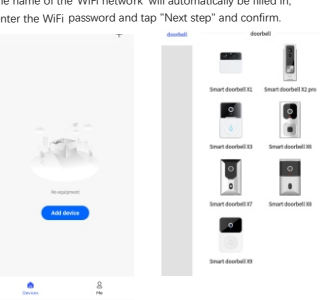

Follow the app instruction, press and hold the ring button for 5-10 seconds, with a voice notification "Reset successfully", the device will reset to default setting automatically. Please confirm you heard it and choose next step, the app will searching the device and add it.




 Pairing with Chime (Optional)

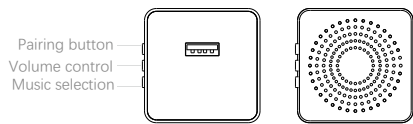

Press and hold Volume button for 5 seconds until the LED indicator lights up, Wi-Fi enters into pairing status. Then press the button on the Wi-Fi video doorbell within 5 seconds, pairing is completed once LED indicator on the Chime is flashing. When above procedure is finished, pairing is quit automatically.


 
门铃使用说明书

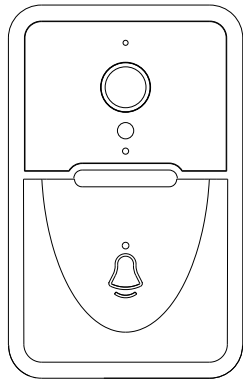

外观介绍

门铃

  
麦克风
镜头
光敏
按键



叮咚

充电口

 螺丝口




叮咚

配对键

音量键

 选铃键



使用说明

- 1、扫描二维码下载芯动智家APP



- 2、点击"添加设备"或者"+",选择"智能门铃X3"

按APP指示操作设备

注意事项

请打开蓝牙、Wi-Fi、和通过APP所有权限才能正常使用

 
 
设备不支持5G Wi-Fi、不支持带有中文名字的Wi-Fi

请在 Wi-Fi信号良好的环境下使用

请先测试门铃将要安装的位置可以正常使用再安装

安装完成后请撕下镜头保护膜再使用产品

门铃与叮咚配对



- 1、叮咚接通电源
- 2、长按叮咚配对键2秒左右，蓝灯长亮
- 3、按一下门铃键，叮咚响起，配对成功

注意事项

配对过程中门铃与叮咚尽量靠近

确保门铃电量充足

配对成功后蓝灯自动熄灭，如果配对失败，请再次尝试

十秒内如果不按门铃，叮咚指示灯自动熄灭

