



V11 PRO CORDLESS 29.6V STICK VACUUM CLEANER

KAVACSTV11A

SAFETY & WARNINGS

To reduce potential fire risks, electric shock or injury, always observe the basic safety prevention measures during use, including but not limited to the following:

Power supply:

- This product is powered by a 29.6V DC lithium battery. Do not use any other model or capacity of the battery. Only use the original battery supplied by Kogan.com.
- If the battery has any malfunction or abnormality, cease use immediately and contact help.Kogan.com for support.
- Always hold by the power plug when connecting and disconnecting to avoid damaging the cord.


During use:

- Do not use this machine outdoors or in humid areas or grasp it with wet hands.
- If the machine becomes physically damaged, placed outdoors or falls into water, cease use immediately and contact help.Kogan.com for support.
- To avoid blockages, don't place large objects into the suction nozzle of the vacuum cleaner. Keep the suction nozzle away from lint, hair and other objects that may cause a blockage and frequently clean the appliance.
- To avoid injury, keep your hair, clothes, fingers and other body parts away from the suction nozzle and movable parts.
- Avoid sucking in any burning or smoking garbage, such as cigarette ends, matches, soot and other objects.
- Do not use the vacuum cleaner to clean flammable substances or liquids, such as gasoline or places where there may be gasoline, kerosene, paint, alcohol, detergent, etc.
- Do not use the vacuum cleaner before installing the filter.
- Turn off the machine before connecting or replacing any accessories.
- Keep the vacuum cleaner indoors and use it in dry rooms only.
- Do not use it for other purposes unless otherwise specified in this user guide.
- Do not use the vacuum cleaner as a toy. Children nearby must be supervised.
- Be careful when cleaning stairs.
- Only use accessories included with this product and recommended by Kogan.com.
- To ensure the correct operation of the vacuum, the HEPA filter and dust cup will need to be emptied and cleaned regularly.

ACCESSORIES



Wall Bracket

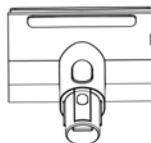


Motorised Mattress Brush



2-in-1 Bristle Brush




Long Crevice Nozzle

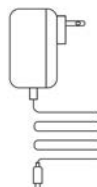

Charger

OVERVIEW

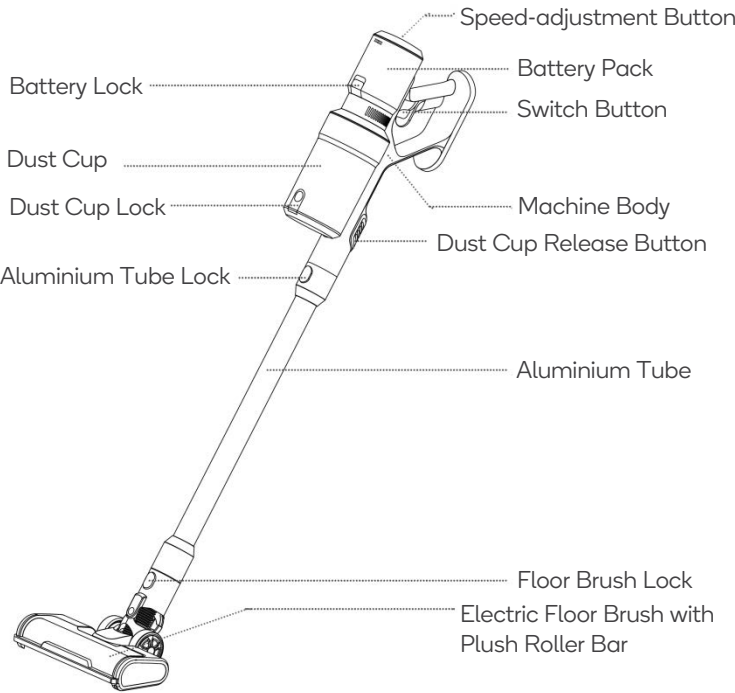


ASSEMBLY

Electric Brush Installation



Align the electric main brush to the aluminium tube connector and push it gently. It will connect with an audible click.

(To disassemble, press the lock button and detach).

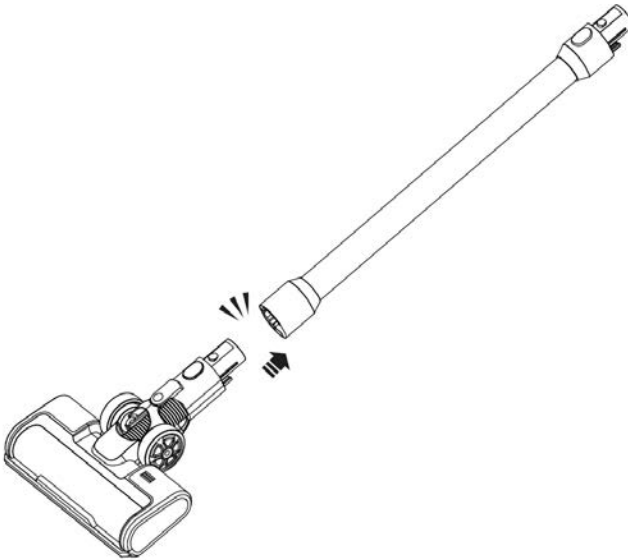


Machine Body Installation

- Align the machine body with the aluminium tube connector and push it gently. It will connect with an audible click.
- Alternatively, the electric brush and other brush heads can be connected directly to the machine body for when a more compact unit is required (cleaning a car etc.)

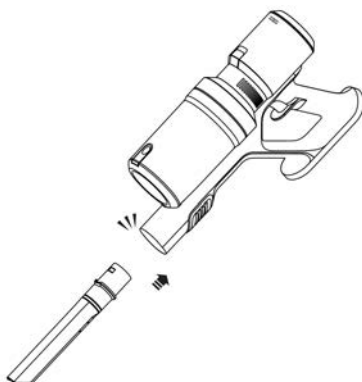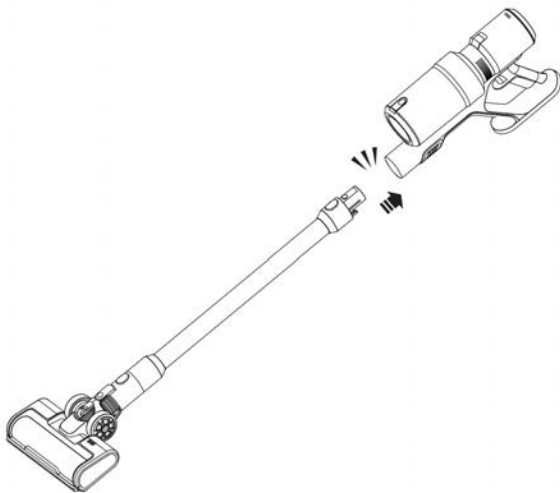

Dust Cup Installation and Removal

Push the dust cup release button under the machine body forward and the dust cup assembly will pop up. Rotate the dust cup assembly anticlockwise to remove.

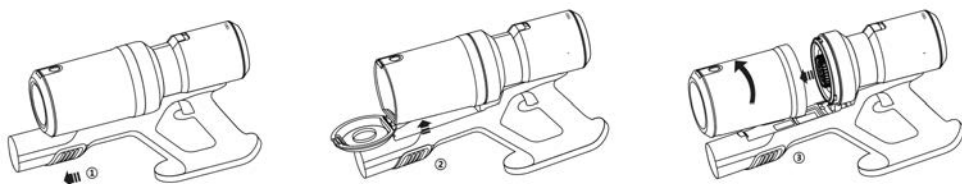


Roller Brush Replacement

Push the release button underneath the brush head and lift the roller brush out.

To install a replacement roller brush, insert the right side first and then gently press the roller brush down and into position.


Note: Ensure the roller brush is firmly in place before operating the vacuum.

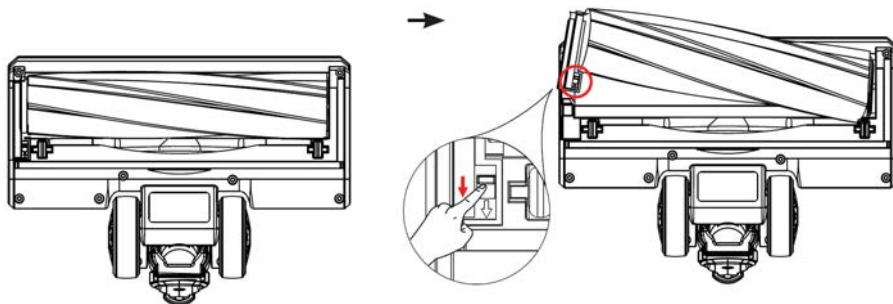

OPERATION

Turning on vacuum


After installing all the required parts, turn on the switch button at the handle to start the vacuum.

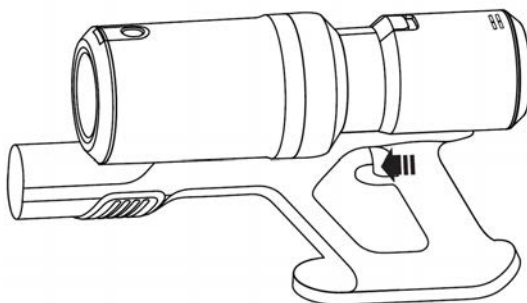

Suction adjustment

Suction power can be set to three levels by pressing the suction adjustment button on the top of the machine body.


There are three LED indicator lights on the button: the BLUE indicator light for low, the PURPLE indicator light for medium and the RED indicator for high.

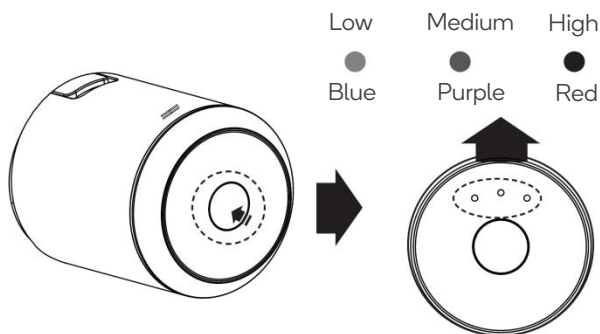


Charging and indicator light

Connect the power adapter to the charging port on the battery pack and plug it into a power outlet to begin charging the battery.




The three indicator lights will flash when the battery is charging and become solid when it is fully charged.

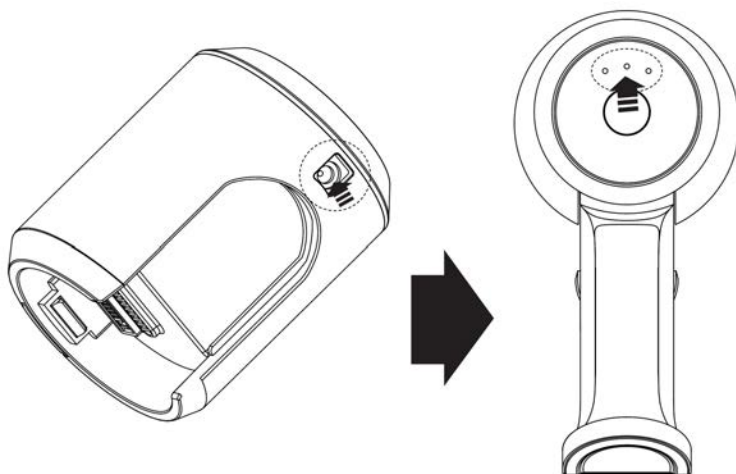

Electric Floor Brush

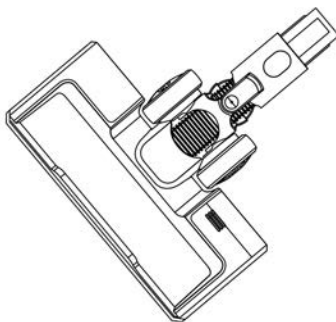


This is suitable for cleaning hard surfaces such as floor and ceramic tiles and the undercoat carpet.

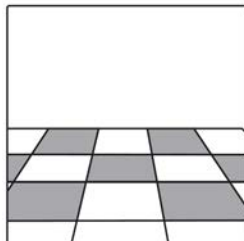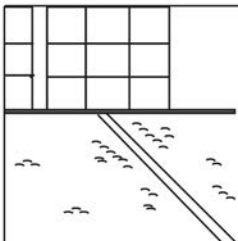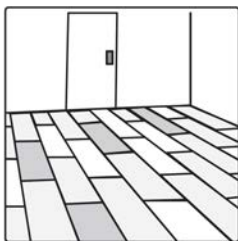


- Quickly remove dust thanks to the built-in independent motor and large plush roller brush rotating at high speed.
- Flexibly and thoroughly clean thanks to the horizontal rotation (270°) and vertical rotation (90°) of floor brush.
- Clean dark areas such as under a sofa using the front LED light.

Aluminium tube


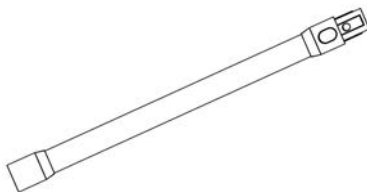


Easy to install, used for cleaning high places such as ceilings, roofs, air conditioners and curtains. Compatible with the included brush heads.


Mattress brush

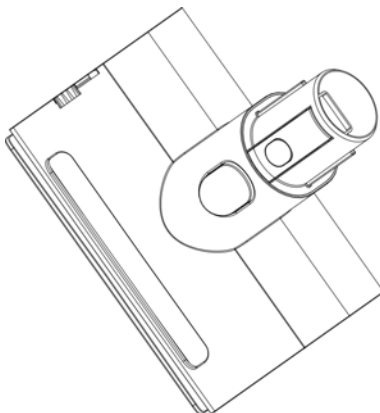

- Suitable for cleaning fabrics such as mattresses and sofas.
- The roller can rotate at a high speed and collect particles such as pollen and hair on bedding, improving sleeping health.

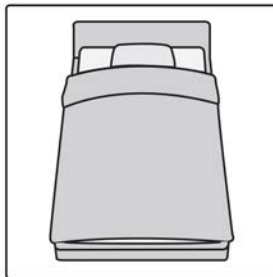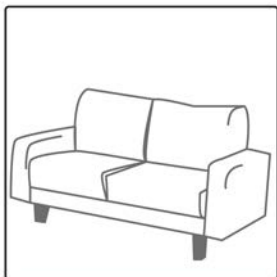


Long crevice nozzle


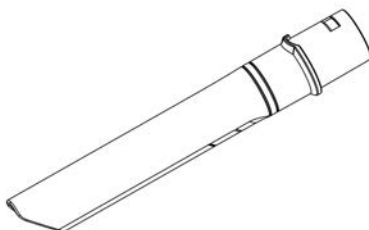


This is suitable for cleaning various crevices and narrow areas in the household and car.

2-in-1 bristle brush

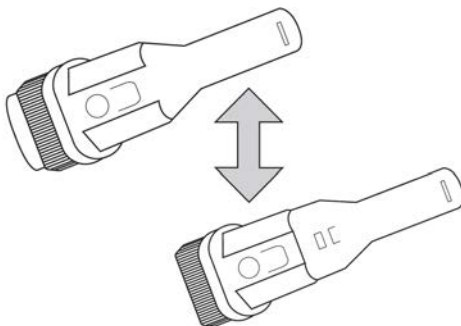

- The brush is suitable for cleaning places such as curtains, car interior and air conditioners or any areas where hair can collect.
- The fine hairbrush can deeply clean small areas such as computer keyboards.
- The retractable brush can suck and clean simultaneously to remove dust efficiently.

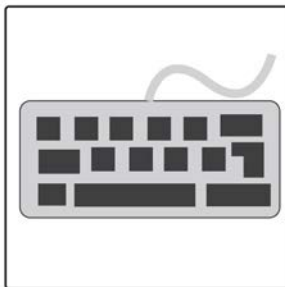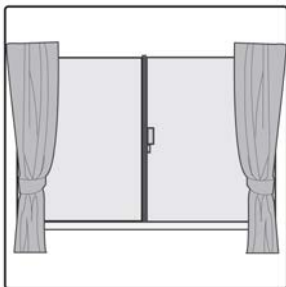

CLEANING & CARE

During operation

Please do not let the unit get close to heaters or any other sources of heat (ovens, radiators etc.).

Before use


To prevent damage, remove large and sharp objects from the area to be cleaned. Do not vacuum any inflammable objects or liquids, such as gasoline, cigarettes or alcohol.

Daily storage

Store the machine in a cool and dry place and avoid direct sunlight or humidity.

Emptying and cleaning dust cup

- Push the dust cup release button under the machine body forward and the dust cup assembly will pop up.
- Press the dust cup lock to open the cup cover any empty the contents.

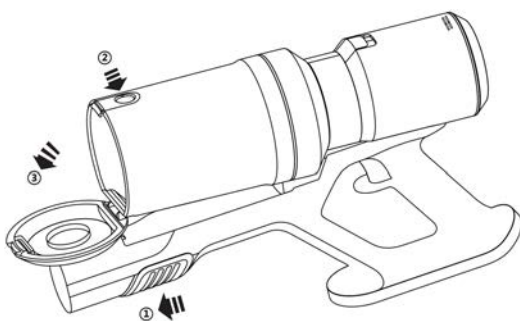


Note:

To maintain proper suction and operation, ensure the dust cup is emptied after each use and cleaned regularly.

Replacing/cleaning HEPA filter

- Separate the dust cup from the machine body (refer to previous page).
- Remove the HEPA filter element from the top of the dust cup and clean it with a soft brush.
- The HEPA filter and dust cup can also be cleaned using warm water. Before next use, ensure the dust cup and HEPA filter are completely dry.
- If the HEPA filter is damaged or worn it must be replaced with a new filter.

Note: Do not use the vacuum filters without a HEPA filter installed in the correct position.

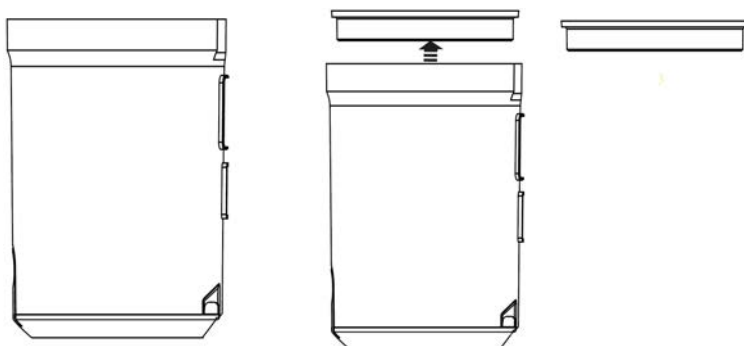

Notes:

- To maintain proper suction and operation, ensure the HEPA filter is cleaned frequently.
- HEPA filters should be replaced every 6 months.

Cleaning machine body

- Never immerse the machine body in water or any liquid.
- Only use a soft, slightly damp cloth to clean the machine body. Do not allow any liquid substances to enter the machine body.
- Do not use any corrosive chemicals or abrasives cleaners.

TROUBLESHOOTING

Issue	Possible cause	Solution
Vacuum wont power on	Battery depleted	Check battery and replace if required
Weak suction power	- Dust cup or HEPA filter filled with dust - Battery power low	- Clean dust cup or HEPA filter - Connect power adapter
Dust leakage		
No suction after connecting floor brush	Dust cup or HEPA filter filled with dust	Clean dust cup or HEPA filter

SPECIFICATIONS

Rated power	400W
Battery configuration	Li-ion 2000mAh 29.6V
Charging time	2~3 hours
Noise level	75dB
Outer dimension	1172 x 256 x 217mm
Weight (Net/Gross Weight)	2.9kg/4.6kg
Capacity of Dust Cup	500ml



NOTES

[illegible]

[illegible]

[illegible]

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com