



V11 PRO CORDLESS 29.6V STICK VACUUM CLEANER

KAVACSTV11A

SAFETY & WARNINGS

To reduce potential fire risks, electric shock or injury, always observe the basic safety prevention measures during use, including but not limited to the following:


Power supply

- This product is powered by a 29.6V DC lithium battery. Do not use any other model or capacity of the battery. Only use the original battery supplied by Kogan.
- If the battery has any malfunction or abnormality, stop using the product immediately and contact Kogan.com for replacement.
- Always hold by the power plug when connecting and disconnecting to avoid damaging the cord.

During use

- Do not use this machine outdoors or in humid areas or grasp it with wet hands.
- If the machine becomes physically damaged, placed outdoors or falls into water, cease usage immediately and contact Kogan.com.
- To avoid blockages, don't place large objects into the suction nozzle of the vacuum cleaner. Keep the suction nozzle away from lint, hair and other objects that may cause a blockage and frequently clean the appliance.
- To avoid injury, keep your hair, clothes, fingers and other body parts away from the suction nozzle and movable parts.
- Avoid sucking in any burning or smoking garbage, such as cigarette ends, matches, soot and other objects.
- Do not use the vacuum cleaner to clean flammable substances or liquids, such as gasoline or places where there may be gasoline, kerosene, paint, alcohol, detergent, etc.
- Do not use the vacuum cleaner before installing the filter.
- Turn off the machine before connecting or replacing any accessories.
- Keep the vacuum cleaner indoors and use it in dry rooms only.
- Do not use it for other purposes unless otherwise specified in the manual.
- Do not use the vacuum cleaner as a toy. Children nearby must be supervised.
- Be careful when cleaning the stairs.
- Use the machine correctly according to the manual. Only use accessories recommended by Kogan.

OVERVIEW

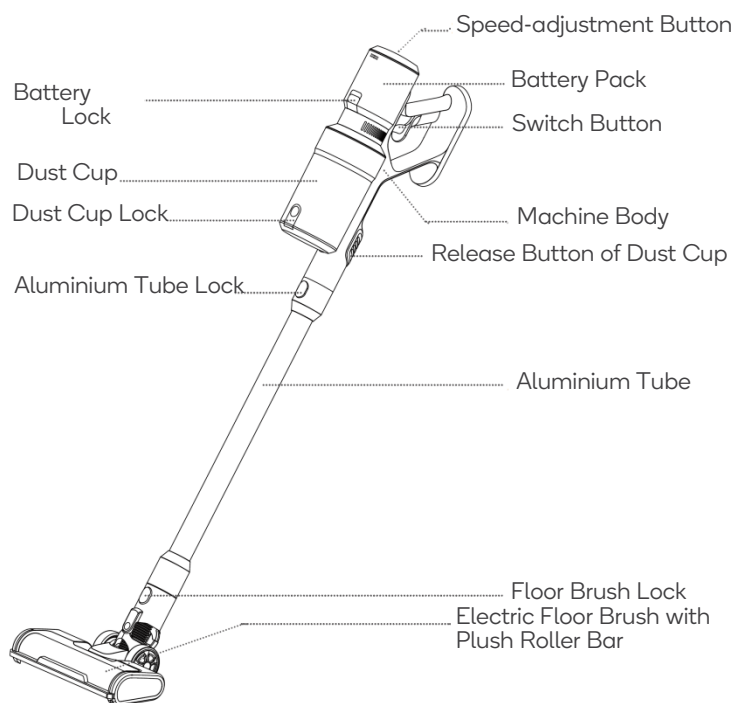


INSTALLATION

Electric Brush Installation


- Align the electric main brush to the extension wand connector and push it gently. It will connect with an audible click.

(To disassemble, press the lock button and detach).

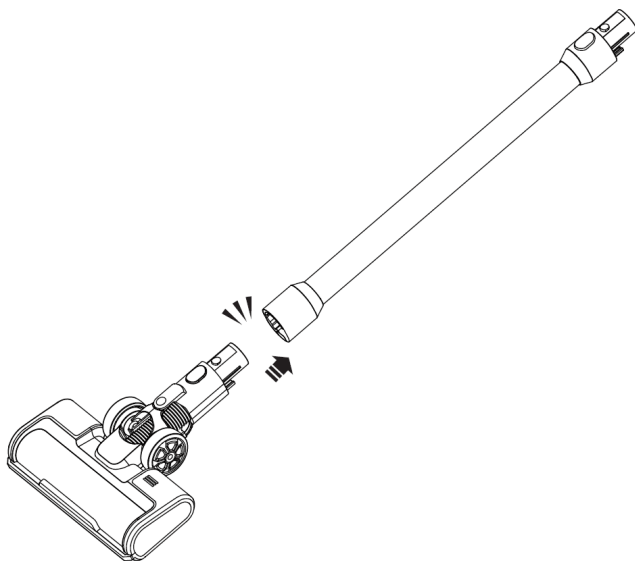


Extension Wand Installation

- Connect as above and the floor brush or other accessories with the other end as illustrated.
- Alternatively, connect the floor brush to clean hard surfaces such as floor and ceramic tiles or undercoat carpet.
- Alternatively, connect the crevice nozzle or 2-in-1 bristle brush to clean difficult-to-reach areas such as ceilings, curtains and air conditioning inlets. To disassemble, press the lock button and detach.

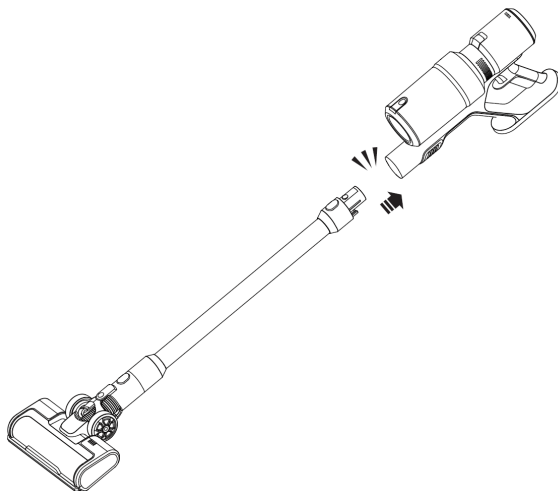


Installation

- Align the crevice nozzle to the machine body connector and push it gently; it will click into place. To disassemble, press the lock button and detach.

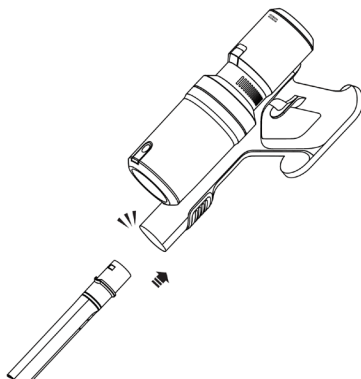


Dust Cup Installation and Removal

- Push the button under the machine body forward and the dust cup assembly will pop up. Then rotate the dust cup assembly anticlockwise to remove.

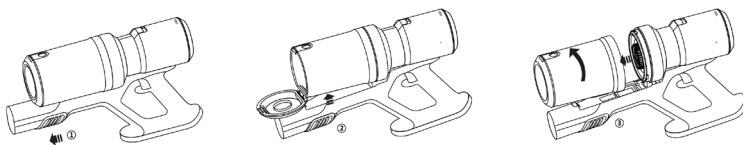


Roller Brush Replacement

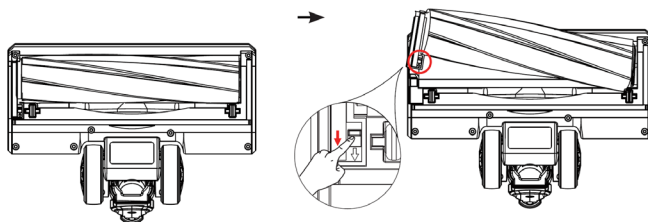


1. Turning on cleaner

- After installing all parts, turn on the switch button at the handle to start operation.

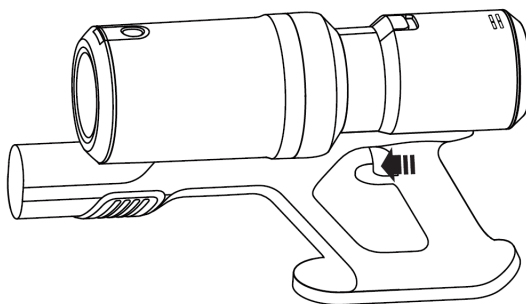

2. Suction adjustment


- Suction power can be set to three levels by pressing the suction adjustment button on the top of the machine body. There are three LED indicator lights on the button: the blue indicator light for low, the pink-purple indicator light for medium and the red indicator for high.

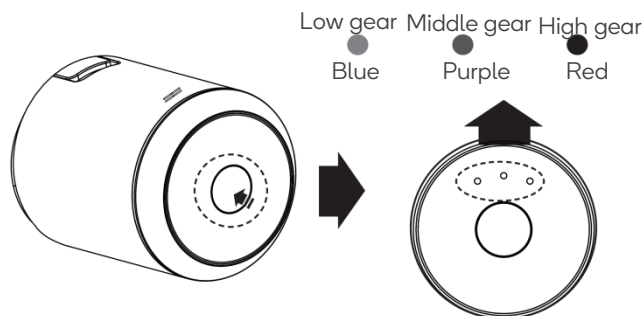

3. Charging and indicator light


- Connect the power adapter with the battery pack and turn on at the outlet to start charging.

The three indicator lights will flash when the machine is charging and become solid when it is fully charged.

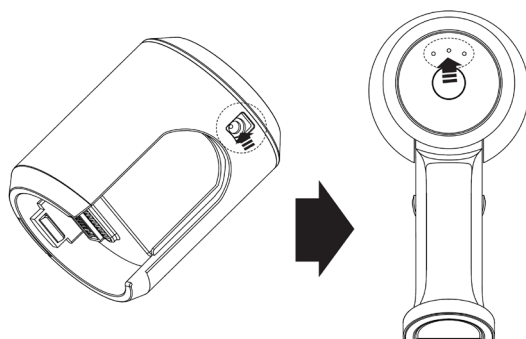




OPERATION

Cleaning Method 1:

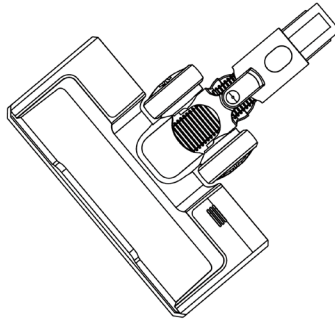


This is suitable for cleaning hard surfaces such as floor and ceramic tiles and the undercoat carpet.

Example:

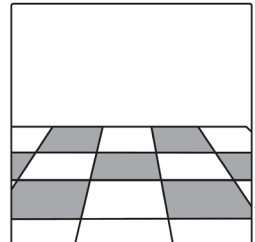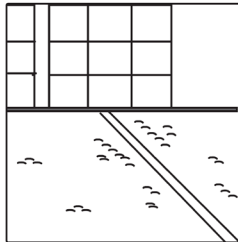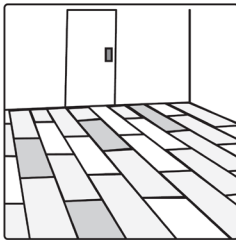


- Quickly remove dust thanks to the built-in independent motor and large plush roller brush rotating at high speed.
- Flexibly and thoroughly clean thanks to the horizontal rotation (270°) and vertical rotation (90°) of floor brush.
- Clean dark and dead angles such as sofa bottoms due to the front LED light.

Cleaning Method 2:

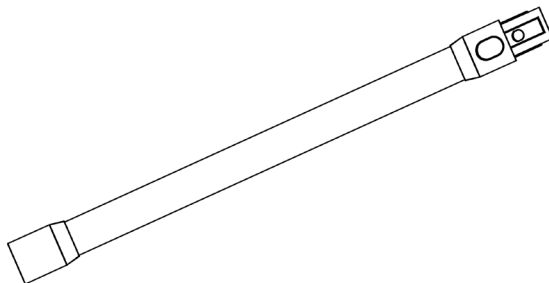



- Convenient to install, easy for vertical cleaning and easy on the back thanks to the one-key snap joint.
- Good for cleaning high places such as ceilings, roofs, air conditioners and curtains due to compatibility with different brush heads.

Cleaning Method 3:

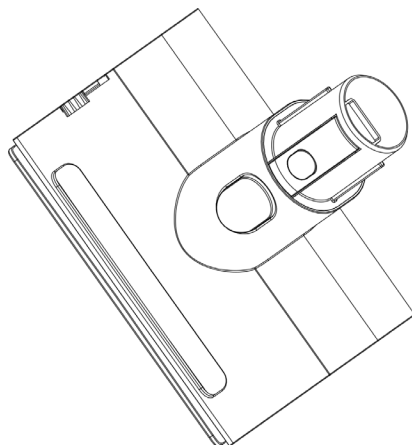


- Suitable for cleaning fabrics such as mattresses and sofas.

Example:

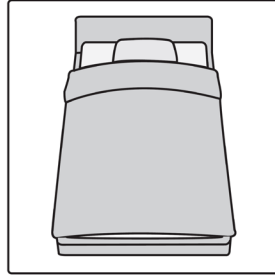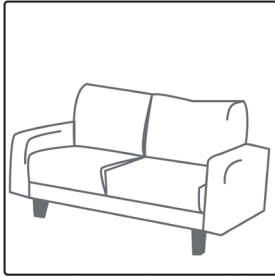



- Driven by its built-in independent motor, the roller can rotate at a high speed and collect particles such as pollen and hair on bedding, improving sleeping health.

Cleaning Method 4:

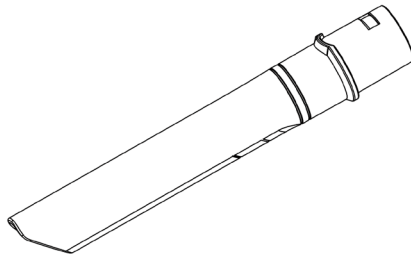


This is suitable for cleaning various crevices and narrow areas in the household and car.



Example:

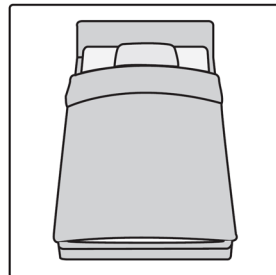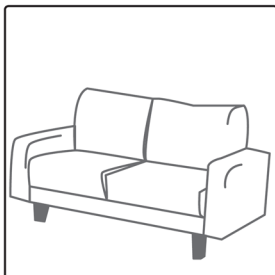

Cleaning Method 5:

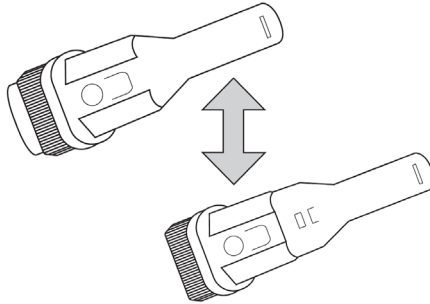

- The brush is suitable for cleaning the places such as curtain, car interior and air conditioner where hair can collect.

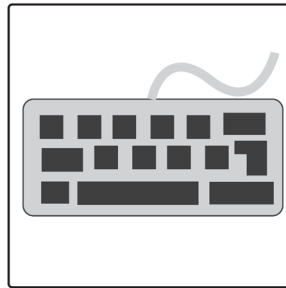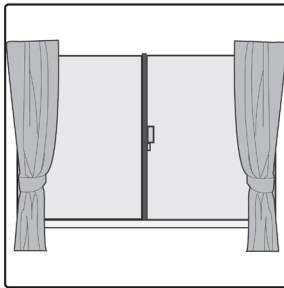

- The one-key extensible brush can suck and clean simultaneously and remove dust efficiently.
- A slim and soft hairbrush can deeply clean the fabrics such as curtains and sofas.
- The fine hairbrush can deeply clean small areas such as computer keyboards.

CLEANING & CARE

During use:

- Please do not let the unit get too close to hot objects such as heaters and cigarette butts.

Before use:


- To prevent damage, remove large and sharp objects from the vicinity. Do not vacuum any inflammable objects or liquids, such as gasoline, cigarette or alcohol.

Daily Storage

- For long-time storage, store the machine in a cool and dry place and avoid direct sunlight or humidity.


Emptying and cleaning dust cup:

- Push the button under the machine body forward and the dust cup assembly will pop open (Refer to the previous installation instructions), allowing dust to be emptied into a dustbin or a garbage bag.
- As illustrated below, press the bottom lock of the dust cup to open the cup cover and dump the dust.

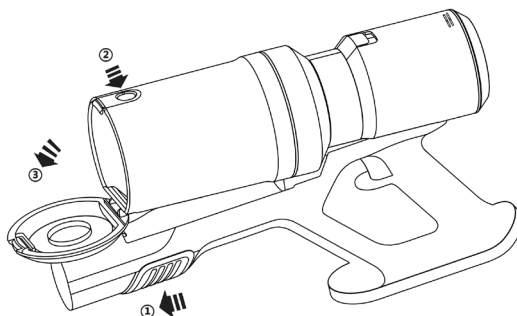

Replacing/cleaning HEPA filter

- Separate the dust cup from the machine body as per previous installation instructions.
- Remove the top filter element of dust cup and clean it with a soft hairbrush or put the cup in warm water for washing. Before next use, ensure the dust cup and filter element are completely dry.

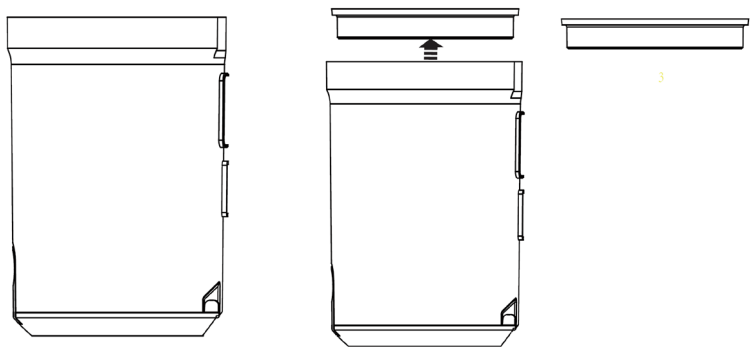

Notice: Before using, please ensure all filters are installed in the correct position.




TROUBLESHOOTING

	Issue	Possible cause	Solution
1	Not turning on	Battery depleted	Check battery and replace if required
2	Weak suction power	• Dust cup filled with dust • The battery power low	• Clean dust cup • Connect power adapter
3	Dust leakage		
4	No suction after connecting floor brush	Dust cup filled with dust	Remove dust and clean dust cup.

SPECIFICATIONS

Rated power	400W
Battery configuration	Li-ion 2000mAh 29.6V
Charging time	2~3 hours
Noise level	75dB
Outer dimension	1172 x 256 x 217mm
Weight (Net/Gross Weight)	2.9kg/4.6kg
Capacity of Dust Cup	500ml

IN THE BOX

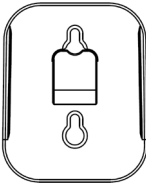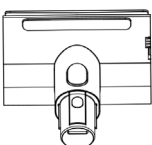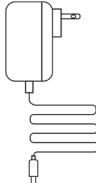				
Wall Bracket	Motorised Mattress Brush	2-in-1 Bristle Brush	Long Crevice Nozzle	Charger

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan