

volkano™

Servo Series

AUTOMATIC WIRELESS CAR CHARGER KIT



INSTRUCTION MANUAL

Please read these instructions carefully and retain for future reference.



VK-8200-BK



HIGHLIGHTS

- Wirelessly Charge Any Phone*
- Sensor Detects Phone Presence
- Automatically Clamps on Phone
- Automatic Voltage Selection
- Automatically Opens and Closes
- High Power 10-Watt Fast Charge
- Includes Vent Mount plus Suction Mount

* Wireless charging is compatible with any brand of mobile phone which has the wireless charge function.

PACKAGE CONTENTS

- Volkano Servo Series Wireless Car Charger
- Windscreen / Dashboard Suction Mount
- Air Vent Mount
- Type-C Charger Cable
- Instruction manual

SPECIFICATIONS

- Connection Type: USB Type-C
- Output Power: 10 W / 7.5 W / 5 W
- Input Voltage: DC 5 V / 2 A, 9 V / 2 A
- Wireless Charge Power: 10 W / 7.5 W / 5 W
- Charge Distance: <6 mm
- LED Indicator: Yes



IDENTIFYING PARTS



1. Ball Joint Fastener
2. Ball Joint
3. Air Vent Clamp Release Button
4. Air Vent Clamp
5. Holder / Suction Locking Lever
6. Holder / Suction Release Button
7. USB Type-C Charge Cable





ASSEMBLY

- The Wireless Charge Pad can be easily attached to either the Suction Mount Holder or the Air Vent Clamp to suit your requirements.
- Remove the Ball Joint Fastener from the Wireless Charge Pad.
- Place the Ball joint Fastener over the Ball Joint on either the Suction Mount Holder or the Air Vent Clamp.
- Attach the Ball Joint into the Wireless Charge Pad and tighten the Fastener to lock the Charger in your desired position.



SETUP

Air Vent Mount:

- Push and hold the Air Vent Clamp Release Button while inserting the clamps into your air conditioner or fan vents, over a fin of the vent.
- Release the Air Vent Clamp Release Button to close the clamp onto the fin of the air vent.

Suction Mount:

- Remove the protective film from the Suction Cup face.
- Attach the Suction Cup firmly against the windshield or similar surface.
- Press the Suction Locking Lever to lock the Suction Mount in place.
- Loosen the Angle Adjustment Knobs to adjust the angle of the mount and tighten the knobs to lock the mount in your desired position.

Powering the Wireless Charger:

- Plug the USB Type-A end of the supplied USB Charging Cable into the Charging Port on your Car Charger (not supplied) or USB power source.
- Plug the USB Type-C end of the cable into the USB Type-C Charging Port on the Wireless Charge Pad.
- The LED Status Indicator glows red in standby mode.

Note: Depending on the make and model of your vehicle, the 12 V / 24 V auxiliary port may only be powered when the vehicle ignition is on.

CHARGING YOUR DEVICE

When powered, the Clamps on the Charger open automatically and close when the infrared sensors detect the mobile phone placed on the surface of the Charge Pad.

- Place your phone on the Wireless Charge Area.
- The clamps close automatically locking your phone in place.
- Charging begins automatically when your phone is detected.
- The LED Status Indicator glows blue when charging is in progress or completed.



- Press the Phone Clamp Release Button while holding your phone in place to release the open the clamps and release your phone.

The Wireless Charge Pad can detect foreign objects which can prevent charging. The LED Status Indicator will glow blue and red and if a foreign object is detected.

SAFETY PRECAUTIONS

- Ensure responsible use of this Wireless Car Charger.
- Unplug the Wireless Car Charger when not in use.
- Do not attempt to use this Wireless Car Charger when performing tasks that require your full attention.
- Do not expose this Wireless Car Charger or any of its components to water, fire, high temperatures or damp areas.
- Do not disassemble this Wireless Car Charger.
- Keep out of reach of children.
- Operate between 0°C – 40°C.
- Do not cover the Wireless Car Charger when in use.
- Do not store in temperatures over 65°C

CLEANING & CARE INSTRUCTIONS - GENERAL

- **Before cleaning:** Ensure that your Volcano Servo Series Wireless Car Charger is not connected before cleaning or maintaining it.
- **Cleaning:** Wipe down the surface of your Volcano Servo Series Wireless Car Charger using a soft, slightly damp cloth.
- Do not use any harsh or abrasive cleaning chemicals or materials on your Volcano Servo Series Wireless Car Charger as doing so may damage or scratch the surface finish.




ENVIRONMENTALLY FRIENDLY DISPOSAL

ENVIRONMENTALLY FRIENDLY DISPOSAL IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

- Never dispose of used electronics with ordinary solid wastes, since they contain toxic substances.
- Always dispose of used electronics in accordance with the prevailing community regulations that apply to the disposal of electronics. If there are no local regulations concerning electronics disposal, please dispose of the device in a waste bin for electronic devices.

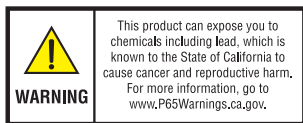

WARRANTY

This Volkano Servo Series Wireless Car Charger comes with a standard 12-month limited warranty against manufacturing defects and faults. Should your Volkano Servo Series Wireless Car Charger be unboxed with any faulty parts, poor finishing or visible damage, or fail to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (till slip or invoice) to the store of purchase for an exchange, or repair, depending on the store's returns policy.

This warranty commences from the date of purchase.

Kindly retain your proof of purchase as well as the packaging for your warranty period.

Note: The Warranty does not apply to Product that:

1. Has failed due to excessive wear and tear beyond what is considered to be reasonable.
2. Has been misused or neglected.
3. Has been damaged accidentally or by Force Majeure including fire and flooding.
4. Has been used or operated contrary to operating or maintenance instructions outlined in this manual.

The Store of Purchase / Seller cannot accept any returned products that have not been returned in accordance to this warranty or which does not follow their own Returns Policy. Please refer to the Store of Purchase / Sellers Returns Policy for details.

