

INSTRUCTIONS

MINI ELECTRIC CHAINSAW POWERBITE

PACKAGE CONTENTS


- Mini chainsaw
- 2 × battery pack
- Battery charger
- Wrench
- Screwdriver

TECHNICAL SPECIFICATIONS

- Power: 550 W
- Battery voltage: 24 V
- Battery capacity: 2000 mAh
- Battery type: Li-ion
- Material: ABS, metal
- Weight (without battery): 0.7 kg
- Charger adapter input: 100–240 V
- Charging time: 1.5–3 hours
- Chain speed: 5 m/s




COMPONENTS

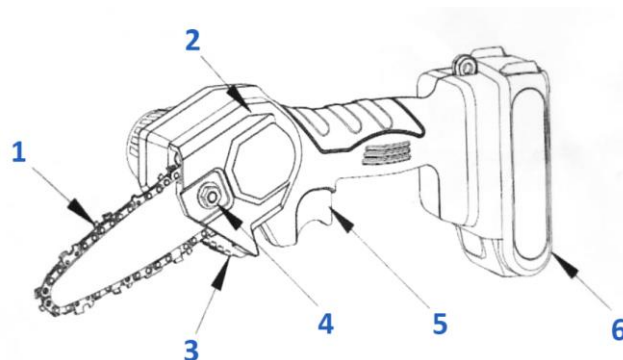


1. Chain guide blade
2. Side cover
3. Safety bumper
4. Cover nut
5. ON/OFF switch
6. Battery pack

CHAIN INSTALLATION


1. Loosen the nut counterclockwise and remove the side cover.

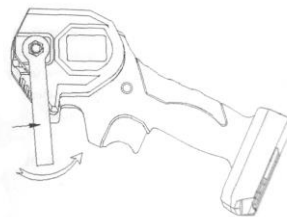


2. Install the chain guide blade: first load the chain onto the chain guide. Ensure that chain's inner teeth fall into the guide slot.

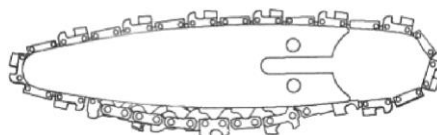


3. Pay attention to the direction of the cutting teeth.

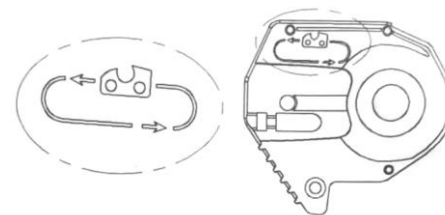

4. When installing the guide blade, ensure the groove on it is positioned on the main bolt.

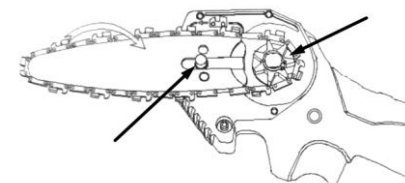

5. Pull the chain over the sprocket and align the pin hole.

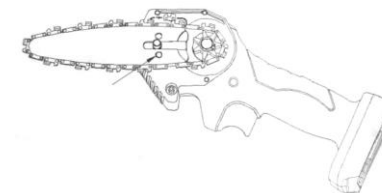


6. Install the side cover and tighten the bolt nut.

CHAIN MAINTENANCE

CALIBRATE THE TIGHTNESS OF THE CHAIN

Calibrating the tightness of the chain on the guide blade can offer you the best using experience. If the chain is too tight on the guide blade, then there will be more friction so it will wear the guide blade and consume the battery faster. If the chain is too loose on the guide blade, then sometimes the chain can fall off during use.

To calibrate the tightness of the chain, simply loosen the cover nut with a wrench and use a screwdriver to adjust the screw behind the guide blade (no need to take off the guide blade cover). Clockwise for tighter chain and anti-clockwise for looser chain.

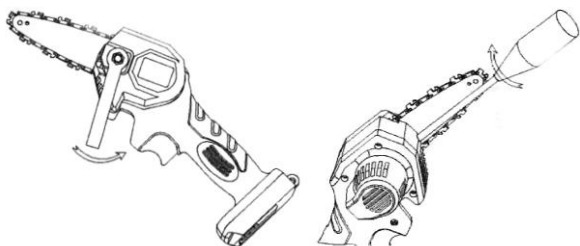

The proper tightness should be when you are able to pull the chain off the guide blade edge baseline by 3–4 mm. Tighten the cover nut with the wrench.

REMOVE ACCUMULATED WOOD DUST

The chain and guide blade does not require oil maintenance normally as long as you keep the two parts clean. It is advised to do a thorough cleaning after a few uses. Use the wrench to open the guide blade cover and remove the accumulated wood dust etc.

REPLACE CHAIN

When the teeth on the chain become dull, it's time to replace it with a new chain.

See the chapter about chain installation.

CHARGING THE BATTERY PACK

1. Plug the charger into the wall socket.
2. Plug the power connector of the charger into the charge socket on top of the battery pack.

- Once the battery is completely charged, a green light on the mains adapter lights up.
 - The device cannot be operated during charging.
 - The charger and the battery heat up during charging. This is due to operating conditions and not a defect.
3. Once the battery pack has finished charging, disconnect the charger from the battery charge socket and the plug from the wall socket.

Charge state	Indicator light state
Charger plugged into mains	Green on, red off
Charging	Green off, red on
After charging	Green on, red off
Battery abnormal	Green and red flicks
Battery temperature below 10 °C or over 40 °C	Green off, red flick


INSTALLING A BATTERY PACK

CAUTION:

- Always switch off the tool before installing or removing the battery pack.
- Hold the device and the battery pack firmly when installing or removing the battery pack.

To install the battery pack, align the tongue on the battery pack with the groove in the housing and slip it into place. Insert it all the way until it locks in place with a little click.

To remove the battery pack, slide it from the tool while pressing the red button on the front of the battery pack.

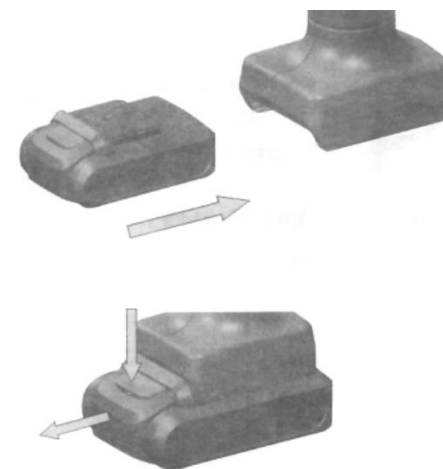

CHAINSAW MAINTENANCE

- There are no user-serviceable parts in your power tool.
- Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth.
- Always store your power tool in a dry place.
- Keep the motor ventilation slots clean. Keep all working controls free of dust.
- Occasionally you may see sparks through the ventilation slots. This is normal and will not damage your power tool.

WARNINGS

GENERAL SAFETY

- Keep your work area tidy and well lit.
- When the chainsaw is running, keep your hands at least 15 cm away from the blade.
- Do not operate a power tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

- Keep children and bystanders away while operating a power tool.
- Do not expose power tools to rain or wet conditions.
- Use personal protective equipment. Always wear eye protection.
- Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts.
- Keep the power tool out of the reach of children when not in use.
- Only charge the batteries using chargers recommended by the manufacturer.
- Do not use a damaged or modified battery.
- Do not expose batteries to fire or excessive temperatures.
- Never service damaged battery packs.

SAFETY NOTES FOR POWER TOOL

- Keep the device and its accessories away from hot surfaces.
- Persons with physical or mental impairments must not use the device and its accessories unsupervised.
- Children must not play with, clean or service the device and its accessories.
- Let the tool cool down after use before storing it.
- Always wait until all moving parts come to a standstill after working with the tool.

USING AND HANDLING THE CHARGER

- Always allow sufficient ventilation when charging the battery; gases may develop.
- Keep the charger away from any type of moisture.

- Never use the charger in environments where there are explosive or flammable materials.
- Do not place objects on top of the charger and do not cover the charger.
- Keep the charger away from heat sources.
- Regularly check the charger for damage.
- The charger must not be disassembled. Repairs must only be undertaken by an approved technical customer service department.
- Always unplug the charger from the power supply after use.

WARRANTY

The warranty is valid for 24 months. You can claim it from DFVU d.o.o., Liparjeva 6a, 1234 Mengeš, Slovenia, for a replacement product or a refund. Send us your order number and purchase date in the email, which is available by clicking on our logo in the bottom right corner. The product has a lifetime of 24 months from the date of collection.



WEEE disposal and recycling symbol. The WEEE symbol is attached to the product in compliance with the EU directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). It is intended to deter the improper disposal of this product and to promote reuse and recycling.