



FANATEC®

ClubSport

Universal Hub V2 for Xbox



EN Quick Guide
FR Guide De Démarrage Rapide
DE Kurzanleitung
ES Guía Rápida
IT Guida Rapida
PT Guia Rápido

Rev. 08

Video Manual

Driver Download

Driver & Firmware Instruction Manual

VIDEO MANUAL

Fanatec.com/QR/CS-UHX-V2

Fanatec.com/driver

Fanatec.com/df-manual-V1

Windows PC

PC Mode

Update Firmware

Installing...

H

EN Modes - Page 8; DE Modi - Seite 8; FR Modes - Page 8
ES Modos - Página 8; IT Modalità - Pagina 8; PT Modos - Página 8

EN Translations - Page 12; DE Übersetzungen - Seite 12; FR Traductions - Page 12;
ES Traducciones - Página 12; IT Traduzioni - Pagina 12; PT Traduções - Página 12

A PACKAGE CONTENT

a 1x ClubSport Universal Hub V2 for Xbox

b 1x ClubSport Magnetic Paddle Module

c 4x ClubSport Button Clusters

d 1x FunkySwitch™

e 1x Hub Cover Plate

f 1x Racing Style Button Caps

1x 4 mm
1x 3 mm
1x 2.5 mm
1x 2 mm
1x 8 mm

B1	5x - M5 x 11 mm	
B2	6x - M5 x 16 mm	
B3	6x - M5 x 16 mm	
B4	4x - M5 x 12 mm	
N1	5x - M5 x 7.8 mm x 4.7 mm	
W1	4x - 13.5 mm x 2.5 mm	
W2	4x - M5 x 8.0 mm x 0.8 mm	

* EN Not included; DE Nicht enthalten; FR Non inclus; ES No incluido; IT Non incluso; PT Não incluso

B QUICK RELEASE ATTACHMENT

1

2

3

1 Nm

4 mm

C CLUBSPORT BUTTON CLUSTER ADJUSTMENT

1

2

3

4

5

2.5 mm

8 mm

3 mm

2 mm

D CONNECTIONS

ClubSport Magnetic Paddle Module

FunkySwitch™

DataPort-C

UP

PC

Console

USB

E RIM ATTACHMENT

B2


B3

X 16 mm Max.


3 mm

Fanatec.com/du/CS-UHX-UH-V2


F CENTRE CALIBRATION

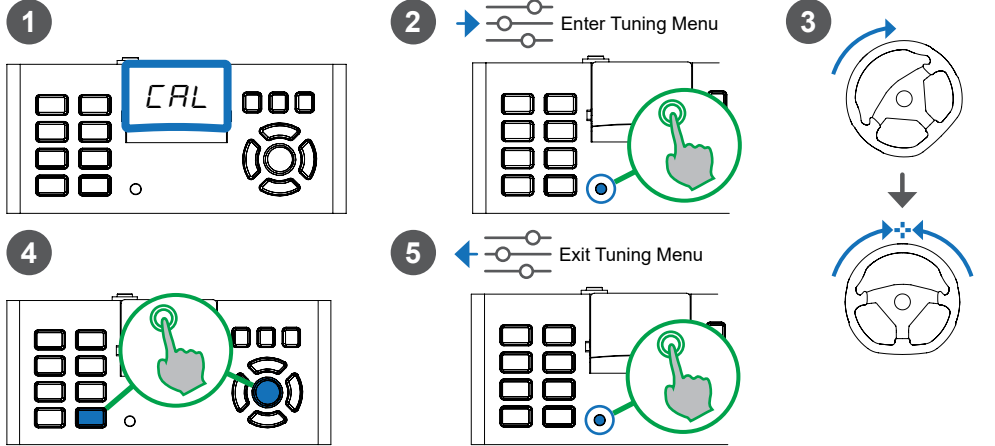


G SHIFTER CALIBRATION

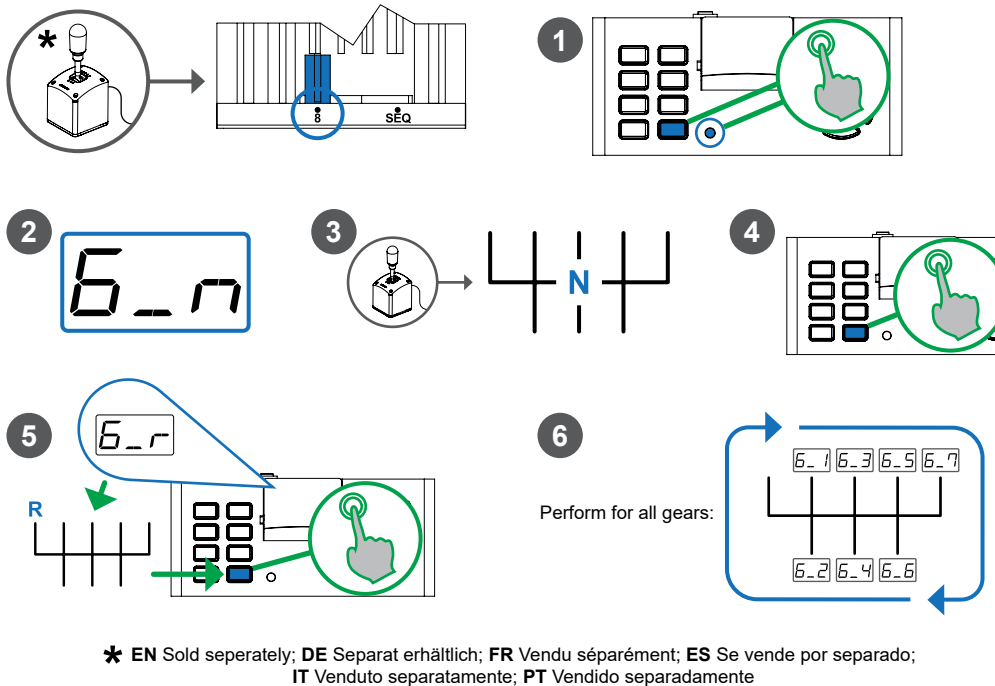



H MODES

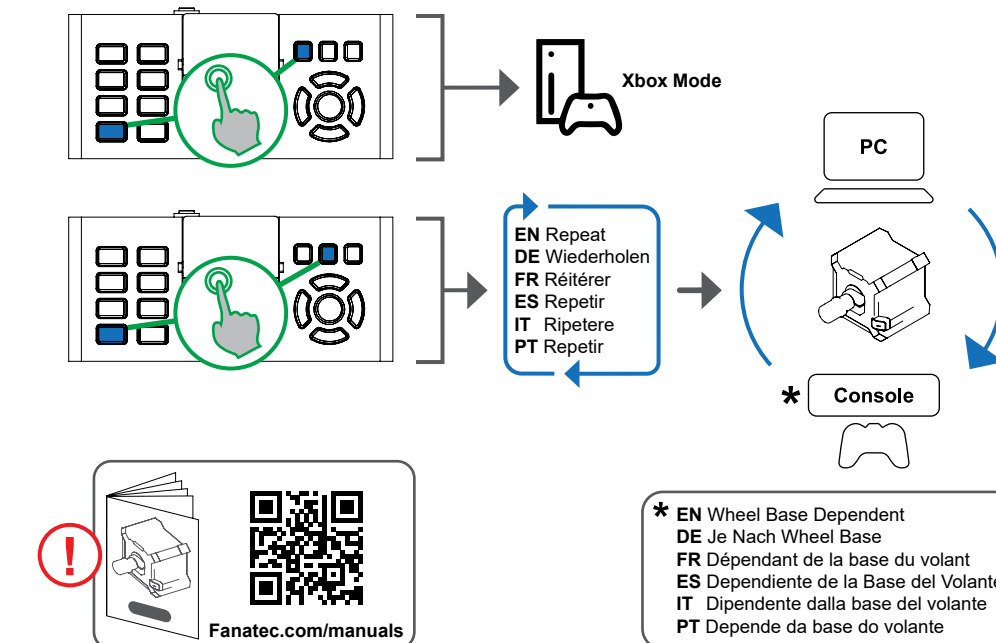


I TUNING OPTIONS

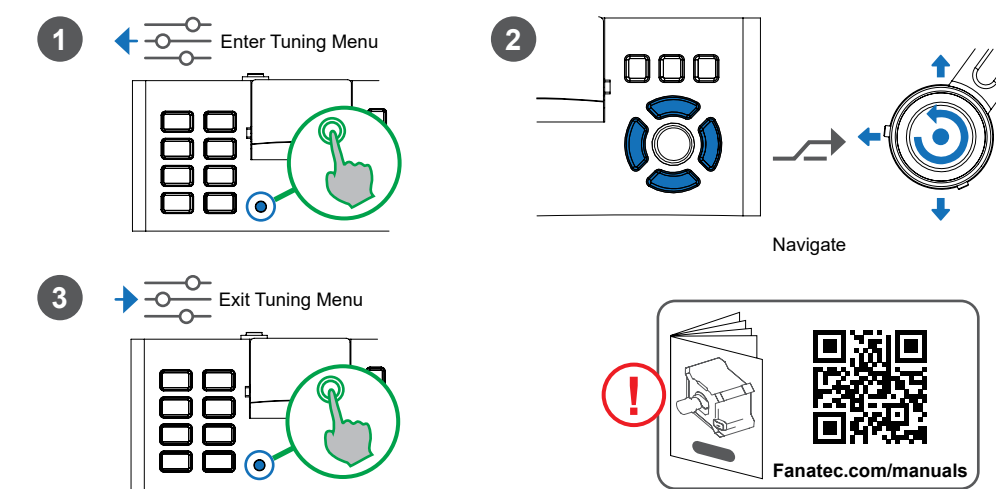

J CLUBSPORT MAGNETIC PADDLE MODULE ADJUSTMENT

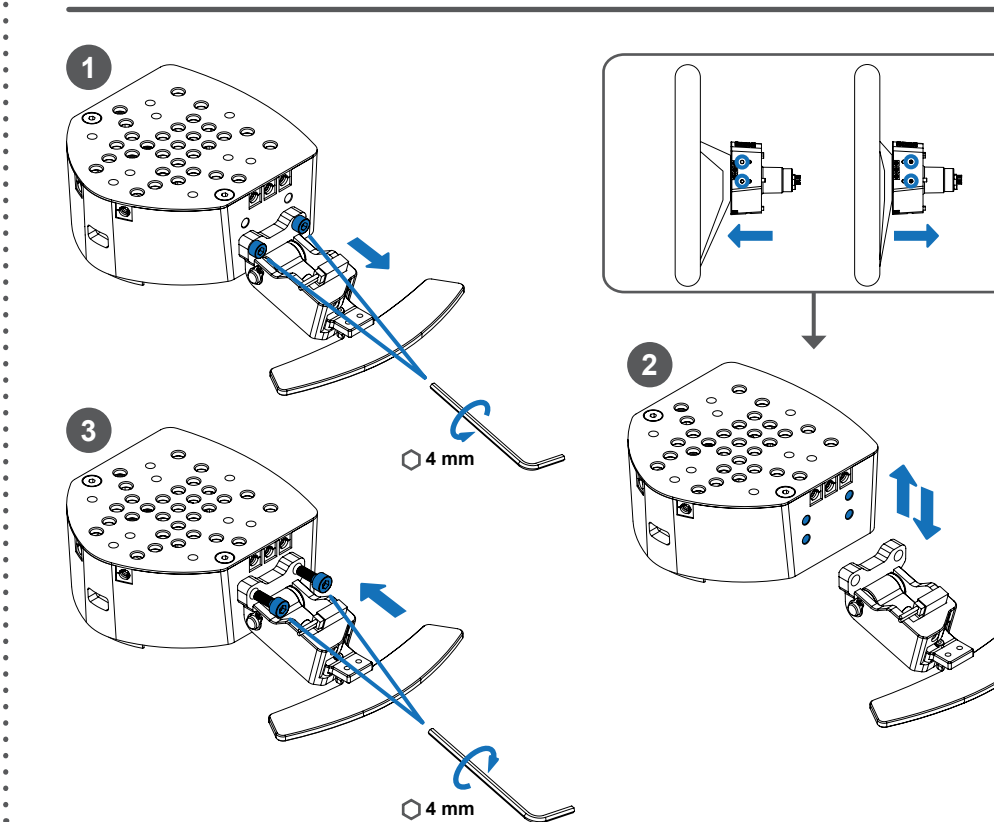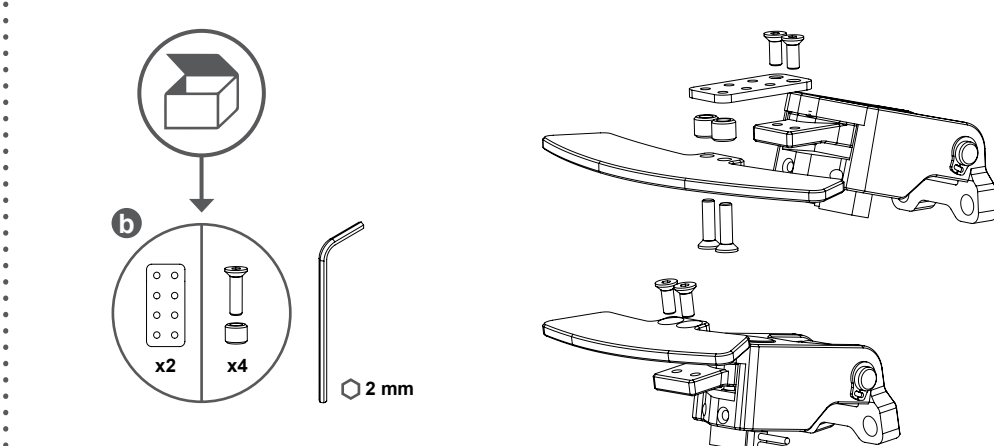


K DISPLAY ADJUSTMENT

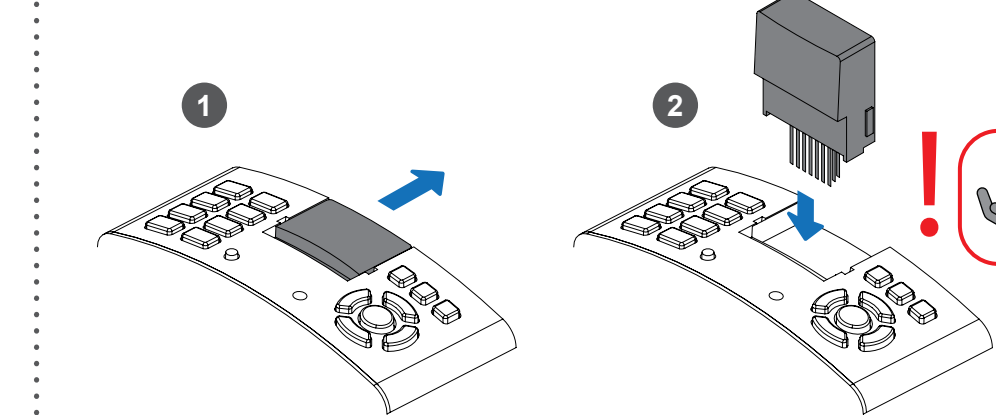


L BUTTON MAPPING

#	PC	Xbox	PlayStation®
1	2	A	X
2	3	B	O
3	4	Y	△
4	1	X	□
5	10	≡	≡
6	9	↖	↖
7	11	RSB → RB	R3
8	12	LSB → LB	L3
9	7	RT	R2
10	8	LT	L2
11	5	RB	R1
12	6	LB	L1
13	↕, ↗, ↘	↕, ↗, ↘	↕, ↗, ↘

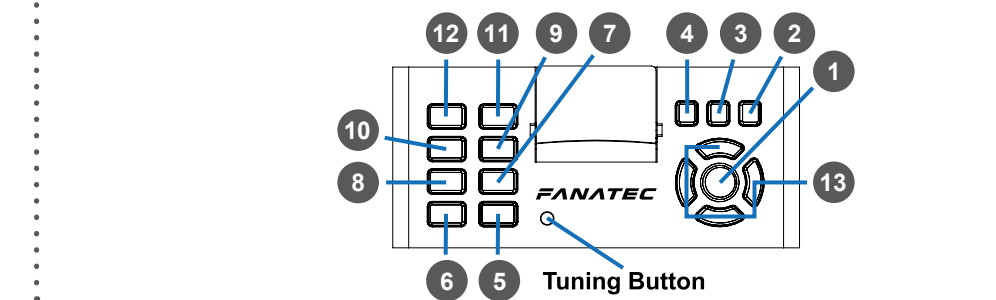

M SUPPORT

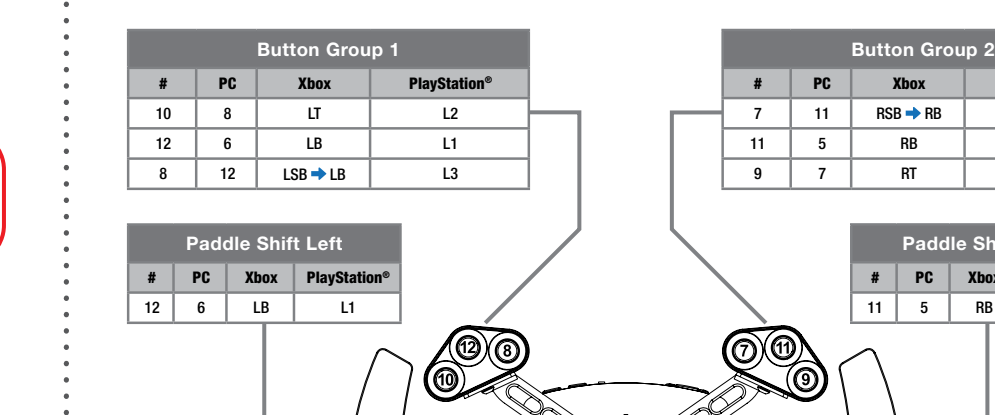


N FUNKYSWITCH™

#	PC	Xbox	PlayStation®
6	9	↖	↖
4	1	X	□
3	4	Y	△


#	PC	Xbox	PlayStation®
2	3	B	O
1	2	A	X
5	10	≡	≡

#	PC	Xbox	PlayStation®
14	↕, ↗, ↘ → 25 ↕ - 23 / ↕ - 24	↕, ↗, ↘ → GUIDE ↕ - / ↕ -	↕, ↗, ↘ → PS ↕ - GSB 1 / ↕ - GSB 2

O ENDOR

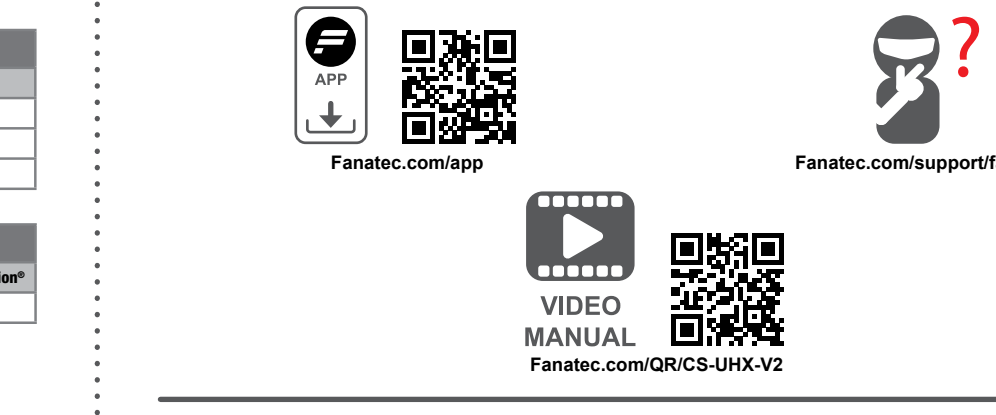


P DE

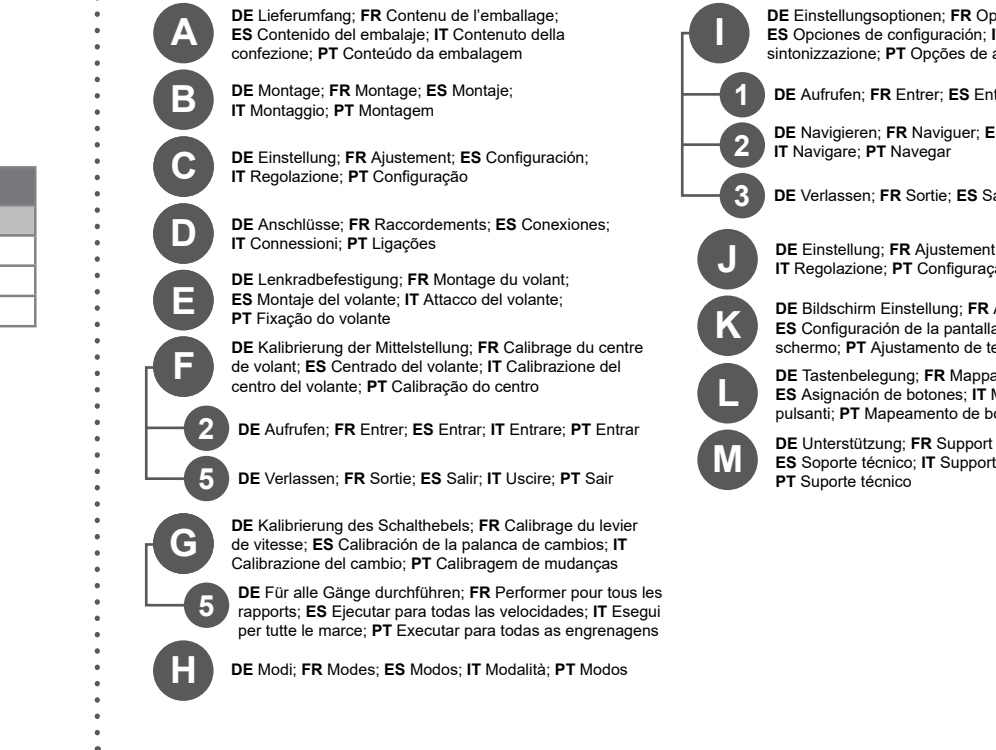


Q EN



R ES

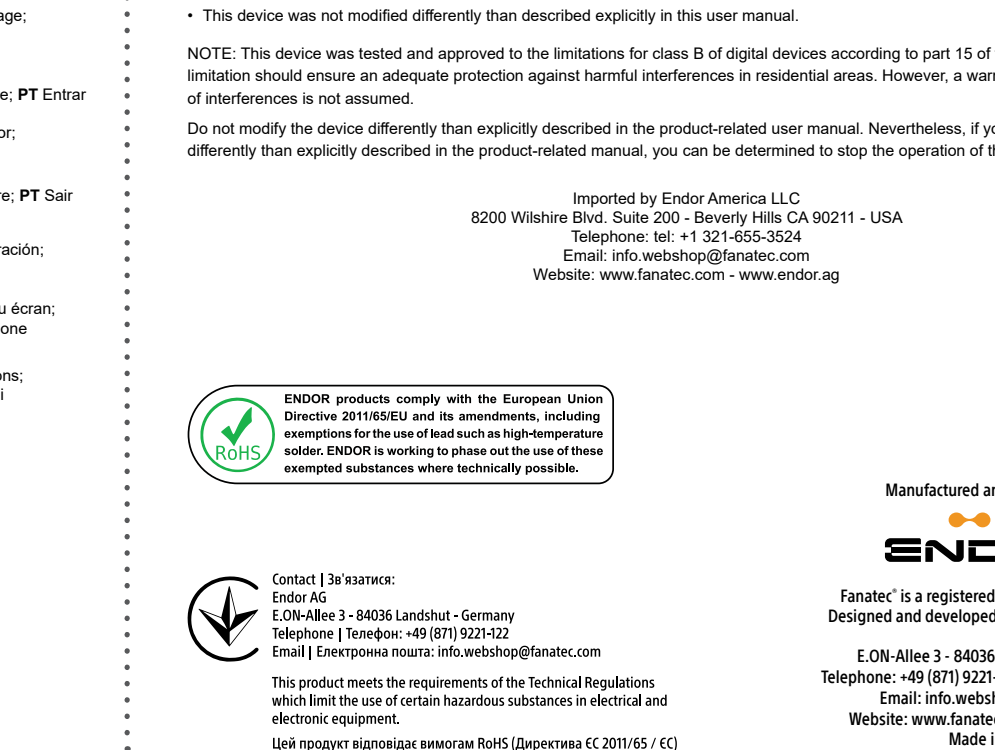

S IT

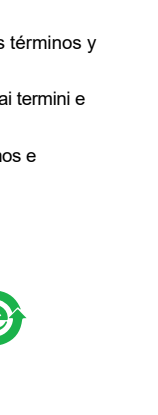

T PT

