 


XGIMI HALO

USER GUIDE

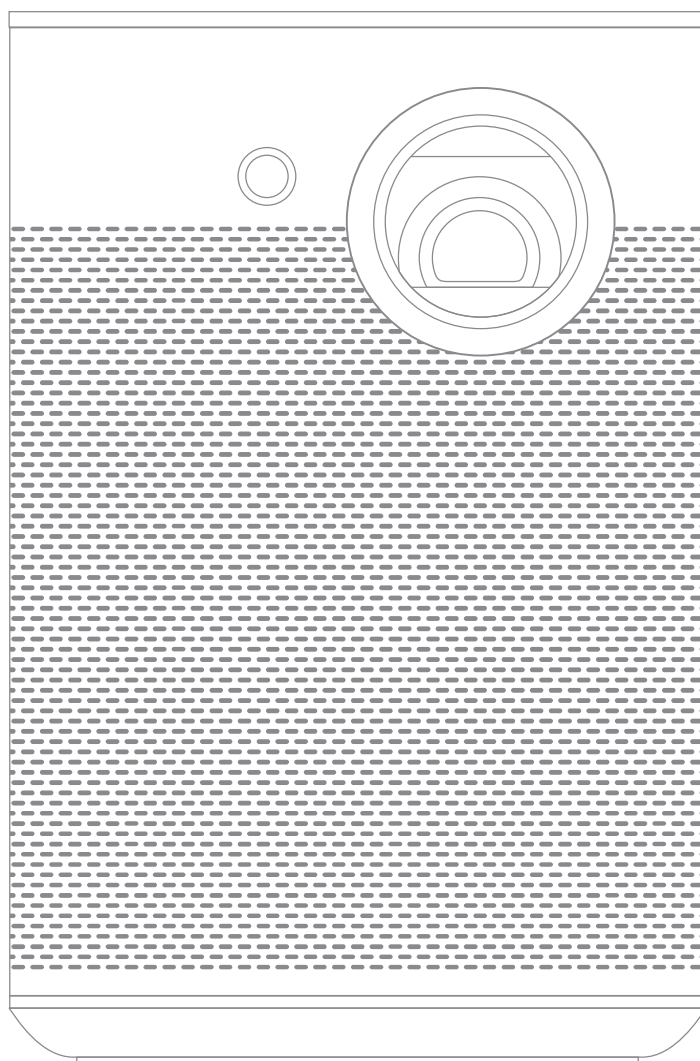

XGIMI





English	1
Français	11
Deutsch	21
Español	31
Italiano	41
Русский	51
한국어	61
日本語	71
繁體中文	81
Polska	91





Please read the Product Instructions carefully before using the product.

Thank you for buying and using the products of Chengdu XGIMI Technology Co., Ltd. (hereinafter referred to as "XGIMI Technology" or "XGIMI"). You should read the Product Instructions carefully before using this product for both your safety and interests. XGIMI Technology will assume no responsibility for any personal injury, damage to property or other loss caused because due to failure to operate this product according to the Product Instructions or precautions.

About the Product Instructions (hereinafter referred to as "the Instructions")

Copyright of the Instructions belongs to XGIMI Technology;

Trademarks and names mentioned in the Instructions belong to their respective right owners;

In the case of inconformity between the content of the Instructions and the actual product, the actual product shall prevail.

Google, Android TV and Chromecast built-in are trademarks of Google LLC.

The Google Assistant is not available in certain languages and countries.

Any objections to any content or clause found within theses Instructions, a written objection to XGIMI Technology should be written within 7 days after the purchase; otherwise, it will be assumed that you agree, understand, and accept all the contents of the Instructions.

 
 
 
Manufactured under license from Dolby Laboratories.

Dolby, Dolby Audio, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.


* Model: WK03A

* XGIMI Technology reserves the right to interpret and amend the Instructions.



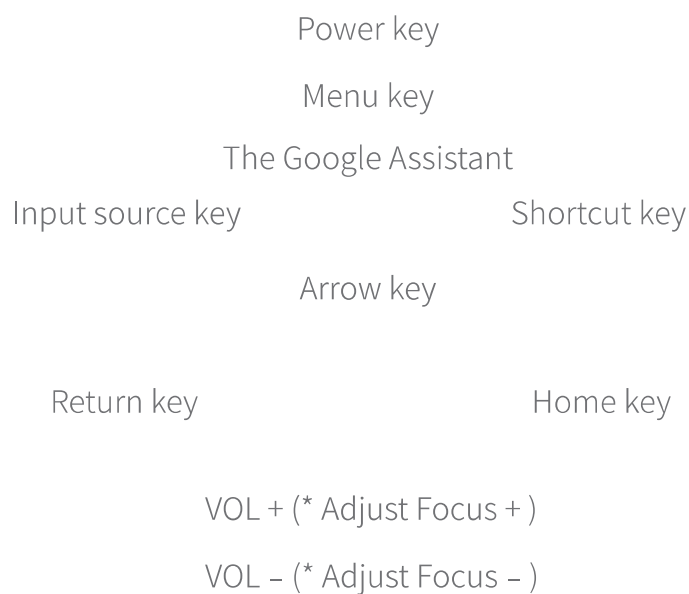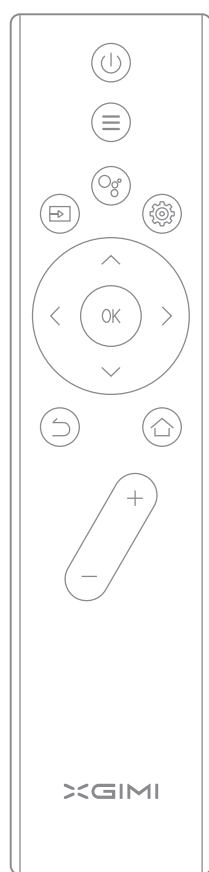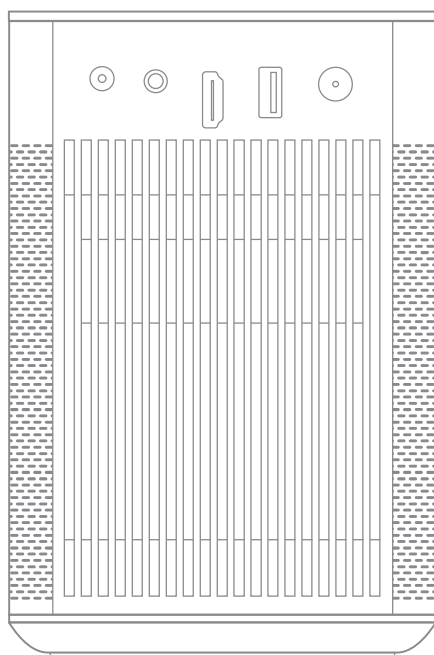


Function switch

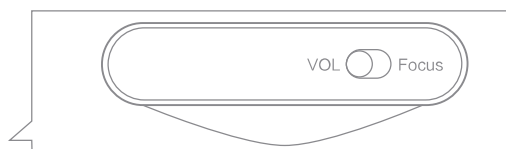 

* Volume is adjusted through add-subtract key when function switch is moved to the left (VOL);
* Focus is adjusted through add-subtract key when function switch is moved to the right (Focus).




 1 Device on / off

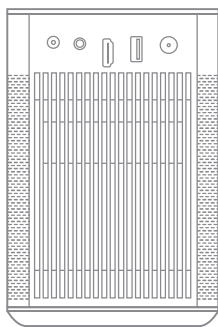

- When the device is off, press and hold the key "⊙" for 2 seconds to turn on the device
- When the device is on, press and hold the key "⊙" for 5 seconds to turn off the device

 2 Remote control pairing

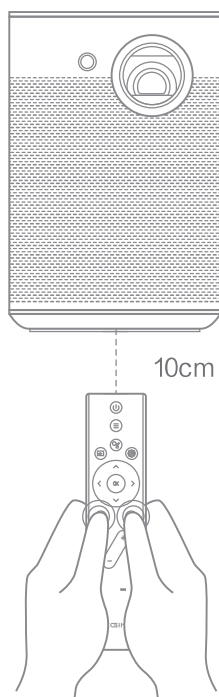

- Place the remote control within 10cm of the device, press "↵" and "⬆" simultaneously, an indicator light will begin flashing as the remote control enters pairing mode. Buttons can be released as soon as flashing begins, and the connection is successful when a "Ding" is heard.)
- If pairing fails, after 30s repeat the above steps.

3 Function description of remote control

- Focus adjustment function

Automatic focus is activated when function switch at bottom of the remote control is moved to the right (Focus) . Focus can then be adjusted using the



"VOL +/—" key; focus adjustment function will stop when function switch is moved to the left (VOL), "VOL +/—" key will return to controlling the device volume.

- Shortcut key function

To access the shortcut key function, briefly press the "⚙️" key.

4 Automatic focus adjustment/ focus adjustment through remote control

- When the automatic focus adjustment function is on, the frame will be adjusted automatically when turning on the device or moving device to another location.
- Automatic focus can be activated via the switch at the bottom of the remote control. Moving the switch to the right (Focus) the "VOL +/—" keys can be used to also adjust the frame.

5 The Google Assistant

- The Google Assistant can be activated by pressing the dedicated button "👤" on the remote control.
- You can quickly access entertainment, control smart devices, get answers on screen, and more using your voice.



6 Bluetooth Speaker Function

- Search "XGIMI Halo" through mobile Bluetooth setting, connect to the device and play songs.



7 Setting

- Set your device and image at any interface through "⚙️" key of the remote control
- Specific functions of the various settings are as follows:

3D setting	3D setting to video or signal source
Image mode	Adjustment to image parameter under video or signal source
Frame ratio	Adjustment to frame ratio of signal source
Voice output	Setting to voice output channel of the device
HDMI version	Setting to HDMI version
All settings	Settings to other related items

* 3D setting and image mode can only be set under video play or signal source channel.

* Frame ratio and HDMI version option can only be set under HDMI channel.

8 Chromecast built-in

- Cast your favorite entertainment apps—movies & TV shows, music, games, sports and more—from your Android or iOS device, Mac or Windows computer, or Chromebook to the device. Find Chromecast-enabled apps at g.co/castapps.
- Quickly cast video and audio contents to the TV through "📺" of mobile application supported.
- Screencasting will not be interrupted due to calling or message sending, and mobile phone battery consumption is minimal.

