



VISPERA



VISPERA

USER MANUAL **Ai24T1** Television

LED TV

**Read the User Manual carefully before using the TV
and keep it for further reference.**



CONTENTS

Important Safety Instructions	2
Safety Information	3
Preparation	4
What is Included	4
Front View	5
Rear View	6
Installing the Stand	7
Removing the Stand for Wall-Mounting	7
Wall-Mounting Screws	7
Remote Control	8
Connecting External Devices	9
Basic Operations	10
First Time Installation	10
Sign in your Google Account	11
Input Source	12
Navigating The On-Screen Menu	12
Device Preference	14
Remote&Accessories	19
Add And Use Of Multi Media Player	19
Troubleshooting	20
Maintaining	22
Plug Replacement-UK	22
Specification	23
Disposal Information	23



IMPORTANT SAFETY INSTRUCTIONS

- **Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- **Keep these instructions** – The safety and operating instructions should be retained for future reference.
- **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- **Follow all instructions** – All operating and use instructions should be followed.
- **Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Please keep the unit in a well-ventilated environment.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing. Objects filled with liquids, such as vases should not be placed on apparatus.
- **WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- **WARNING:** The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- **WARNING:** To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



HDMI®

HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc in the United States and other countries.

SAFETY INFORMATION



This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health.

Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly.

WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instruction.

To ensure reliable and safe operation of this equipment, please carefully read all the instructions in this user guide, especially the safety information below.

Electrical Safety

 
- The TV set should only be connected to a main power supply with voltage that matches the label at the rear of the product.
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on any connecting wire, which may damage the wire.
- Hold the main plug, not the wires, when removing from a socket.
- During a thunderstorm, or when not using the television for extended period of time, turn off the power switch on the back of the television.
- Do not allow water or moisture to enter the TV or power adapter. Do NOT use in wet, moist areas, such as bathrooms, steamy kitchens or near swimming pools.
- Pull the plug out immediately, and seek professional help if the main plug or cable is damaged, liquid is spilled onto the set, if the TV set accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the TV set does not work normally.
- Do not remove the safety covers. There are no user-serviceable parts inside. Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Qualified personnel must only service this apparatus.
- To avoid a battery leakage, remove batteries from the remote control, when the remote is not use for long period, or when the batteries are exhausted.
- Do not break open or throw exhausted batteries into a fire.
- For best results, use type AAA (example-alkaline, carbon-zinc, etc.) batteries.
- Install only new batteries of the same type in your product.
- Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
- Do not mix old and new batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Do not attempt to recharge disposable batteries.
- Do not short circuit battery terminals.
- Keep away from children.

Physical Safety

- Do not block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around.
- Do not tap or shake the TV screen, or you may damage the internal circuits. Take good care of the remote control.
- To clean the TV use a soft dry cloth. Do not use solvents or petroleum based fluids.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade, or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs.
- Unplug the apparatus during lightning storms or when unused for long periods.
- Refer all servicing to a qualified service personnel. Servicing is required if the apparatus does not operate normally or if the apparatus, including the power supply cord or plug, has been damaged in any way.
- Servicing is also required if liquid has been spilled, or objects have fallen into the apparatus; when the apparatus has been exposed to rain or moisture; or if the apparatus has been dropped.

PREPARATION


What is Included

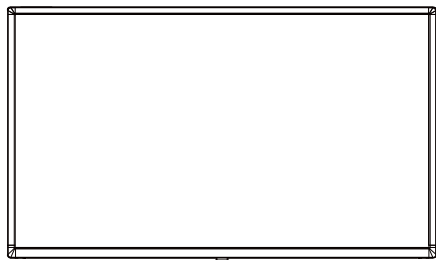

TV Set



 
Remote Control with Batteries



Base Stand



 Screws x4

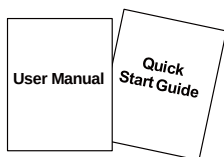


User Manual &
Quick Start Guide




MINI YPBPR

 Front View

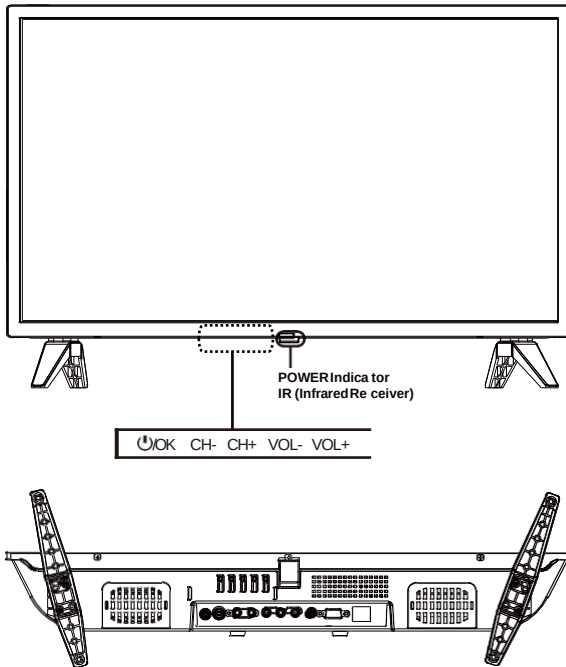


- **VOL +/- button**
Press to adjust the volume.
- **CH +/- button**
Press to select the channel.
- **OK button**
Switch the TV between On/Standby mode. OK is the enter key in smart mode. OK activates the TV menu when in TV mode.
- **POWER Indicator**
Illuminate blue when the TV is turned on. Illuminate red when the TV is in standby mode.
- **IR (Infrared Receiver)**
Receive IR signals from the remote control.

 Rear View

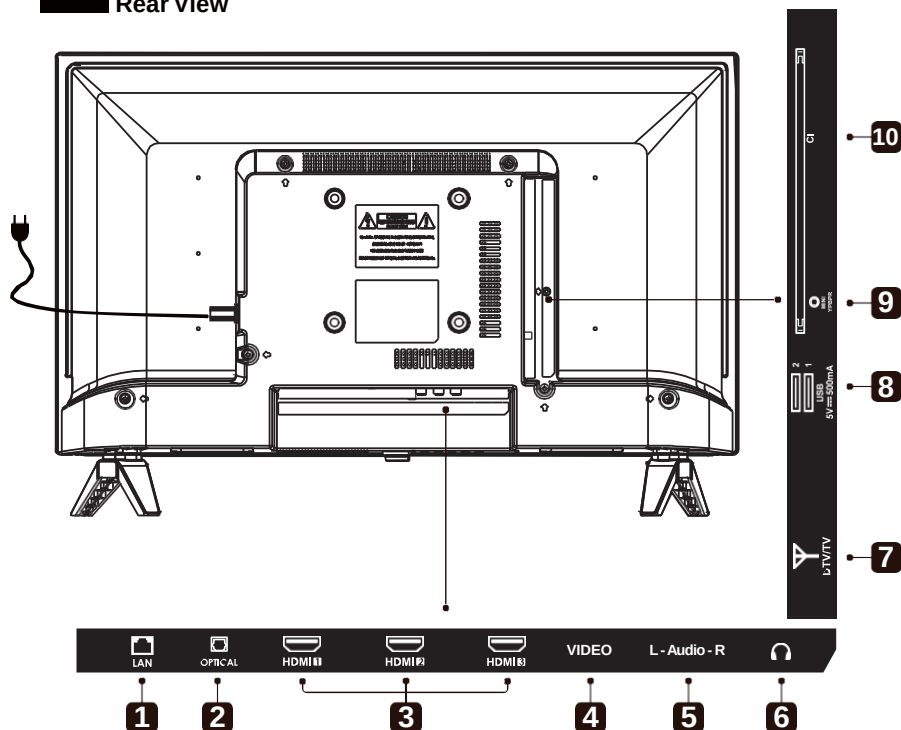


1. **LAN**
Network connection port.
2. **OPTICAL**
Connect a digital sound system to this jack.
3. **HDMI Input**
Connect to a High-Definition(HD) signal output device
4. **VIDEO Input**
Connects to the Composite VIDEO output sockets on external video devices.
5. **AUDIO Input**
Connects to the Composite AUDIO (L/R) output sockets on external video devices.
6. **Headphone Socket**
Connect to the Headphones.
7. **DTV/TV Input**
Connect to the antenna (75Ω VHF/UHF) socket with the RF coaxial cable.
8. **USB Input**
Connect to a USB storage device to play photo files. (USB mode)
9. **MINI YPBPR**
Connect to AV devices with component (Y/Pb/Pr) video and audio output sockets. COMPONENT&VIDEO share with AUDIO IN(L/R)subscribe to.
10. **CI Slot**
Used to insert a CI card. A CI card allows you to view all the channels that you subscribe to.

 Installing the Stand

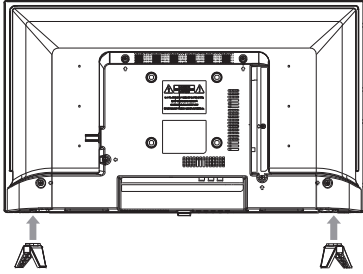

1. Lay the TV face-down on a flat, cushioned surface to avoid damaging or scratching.
2. Fix the stand assembly to the TV using the 4 pcs provided screws.

 Removing the Stand for Wall-Mouting

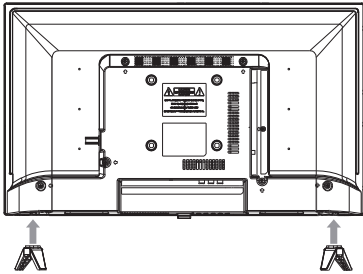

1. Lay the TV face-down on a flat, cushioned surface to avoid damaging or scratching.
2. Untighten the 4 pcs screws holding the stand assembly and remove them.
3. Attach the wall-mount bracket to the TV using the mounting holes on the back of the TV. Mount this TV according to the instructions included in the wall-mount bracket.

Wall-Mounting Screws

•Mount the VESA bracket using 4*M4*7 isometric threaded screws (not included).

WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instruction.

 
WARNING:

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture(for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Attention should be drawn to the environmental aspects of battery disposal.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls


If your existing television set is being retained and relocated, the same considerations as above should be applied.

Remote Control

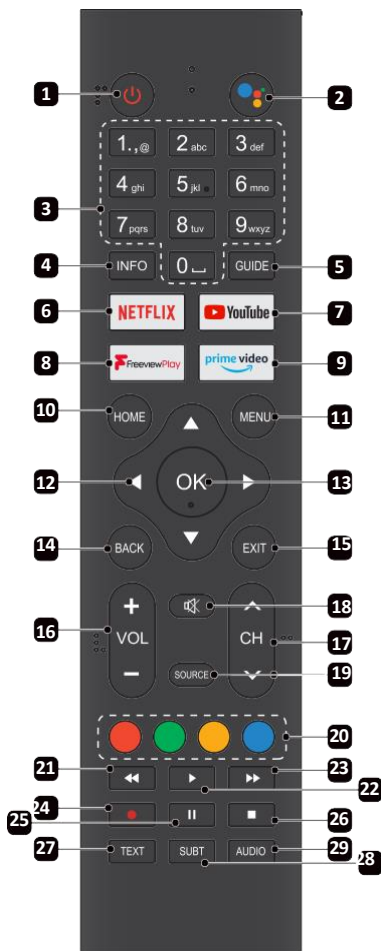

1. **Power**: Switch the TV between and standby mode.
2. **Google Assistant**: Press to open the google assistant or start a voice search.
3. **0~9 number**: Press to enter a TV channel number.
4. **INFO**: Press to display the channel information.
5. **Guide**: Enter electronic program guide. (Used for models with DTV function only)
6. **NETFLIX**: Press to open the NETFLIX.
7. **YouTube**: Press to open the YouTube.
8. **Freeview Play**: Press to open the Freeview Play.
9. **Prime video**: Press to open the prime video.
10. **HOME**: Press to open the Home Page.
11. **MENU**: Press to open the on-screen menu.
12. **Navigation**: Press to navigate the on-screen menu.
13. **OK**: Enter the selected option or perform the selected operation.
14. **BACK**: Return to the previous menu.
15. **EXIT**: It depends on the actual function.
16. **VOL+/VOL-**: Press VOL+ or VOL- to adjust volume level.
17. **CH+/CH-**: Press CH+ or CH- to change TV channels.
18. **MUTE**: Press to switch the sound on or off.
19. **SOURCE**: Press to open the input source list.
20. **COLOR BUTTONS**: Press to access directly to the corresponding function in APP service.
21. **Reverse**: Press to reverse playback in multimedia & Timeshift mode.
22. **Play**: Press to play in multimedia mode & Timeshift mode.
23. **Forward**: Press to play in forward multimedia & Timeshift mode.
24. **PVR**: Press to record Live TV, a storage device must be connected.
25. **Pause**: Press to play in Pause multimedia & Timeshift mode.
26. **Stop**: Press to stop multimedia playback, REC & Timeshift mode.
27. **Text**: Press to enter the Teletext mode.
28. **SUBT**: Open subtitle.
29. **AUDIO**: Press to select the DTV audio.

 CONNECTING EXTERNAL DEVICES

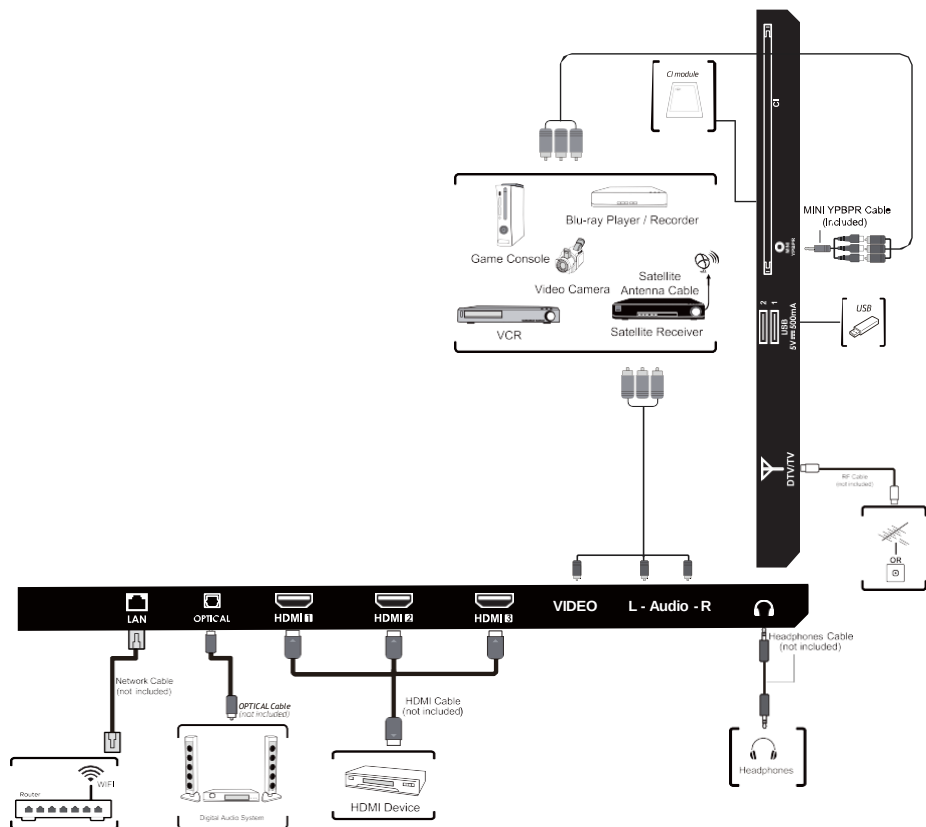


BASIC OPERATIONS

First Time Installation


1. Make sure your TV is plugged in and that the aerial lead is connected to the TV aerial socket. Insert batteries into the remote control.
2. Turn on the TV by pressing the  key on the remote control or by pressing the standby button on the TV. (Use the right arrow key on the remote control to proceed with next steps.)
3. Select the language.
4. Select the country.
5. Setup the Network connection.
6. Follow the instruction to pair the TV's bluetooth remote control. Press the "Home" and "Left arrow" key on the remote control simultaneously for 5 seconds. When paired the remote name "TV_BLE_Remote" will be displayed in the upper right corner of the screen. Now press the "OK" key to complete the pairing of the remote control.

-  **Apps:** Icon to be redirected for all the listed applications
- ③ **On-screen Menu:** In order to navigate or configure with convenience
- ④ **Notifications:** Display the Notifications
-  **Inputs:** Icon to select an input source.
-  **Network & Internet:** Icon for network settings. (Wifi)
-  **Settings:** Icon for the configuration of various settings.

 For more detailed explanation regarding the settings, please check the next page







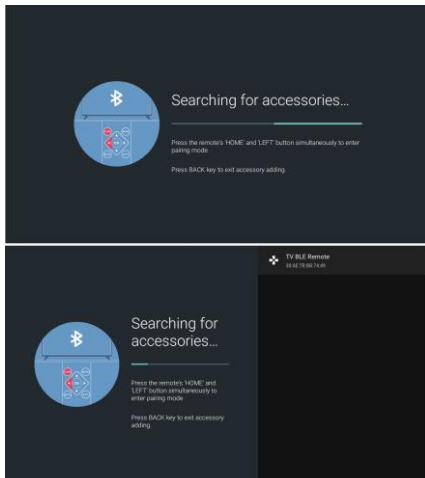


 7. During initial setup, press EXIT to exit the initial setup, and enter the HOME screen.

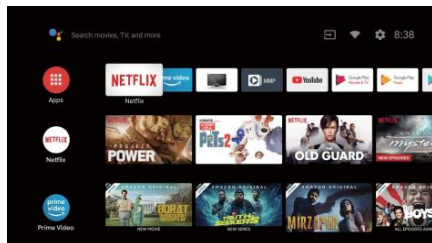

- ① Open the google assistant or start a voice search.
- ② The applications installed are displayed, the icons for the favorite applications are shown inside here. (favorite applications can be added, changed or deleted)

       
Sign in your Google Account.

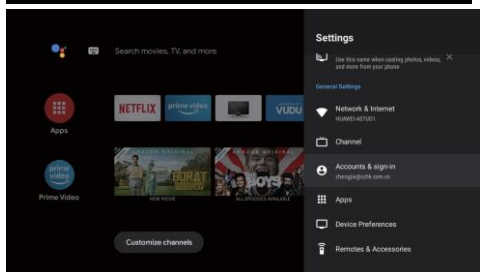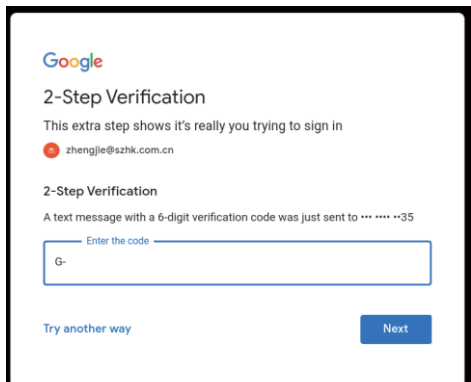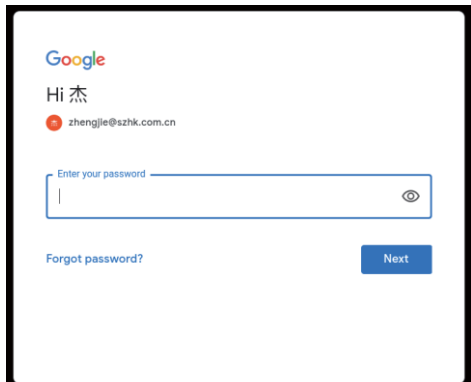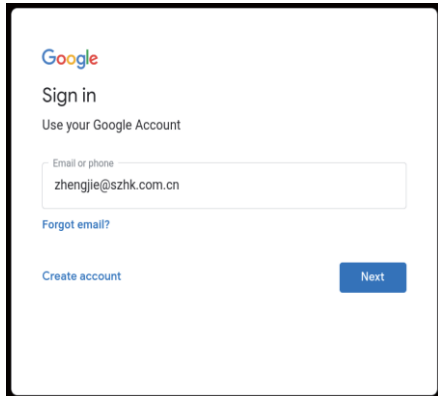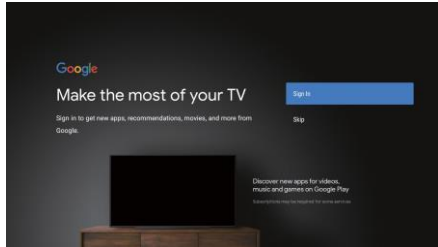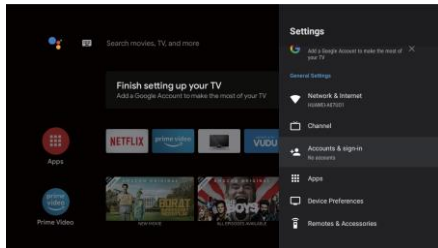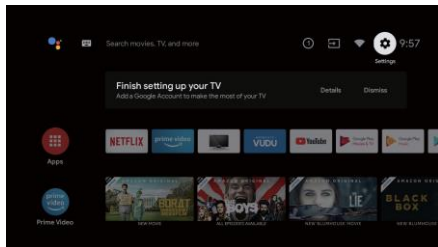


BASIC OPERATION

INPUT SOURCE

 1.The HOME interface displays the "Input" icon in the upper right corner. Press ▲/▼ or ◀/▶ buttons in order to select the "Inputs" icon. Please press OK in order to open all the optional input sources. Then press ▲/▼ buttons to select a desired source. Eventually press the OK button in order to confirm the input source.

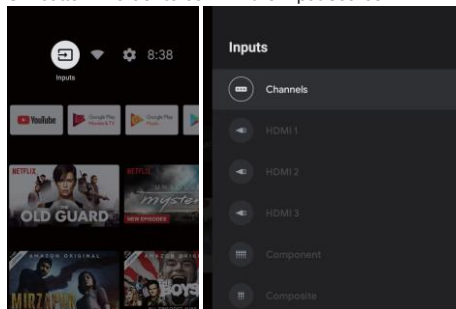

 2.Press on the "SOURCE" button on the remote control while on the LIVE TV source or press 2 times on the "SOURCE" button to be redirected directly for all the listed input sources.


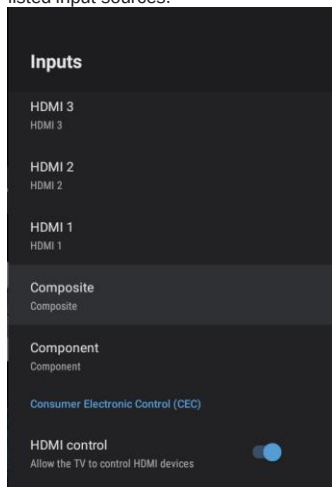


NAVIGATING THE ON-SCREEN MENU

This TV includes 2 separate version of an on-screen menu


-Firstly, please open the Live TV source. Please read the chapter "Input source" if it is not clear. Then press the "HOME" button for the on-screen menu. Eventually press the ◀/▶ button and select a desired configuration.

  -Secondly, browse the Home interface with buttons. Select the menu icon and press OK. Eventually press ▲/▼ buttons and confirm the desired configuration option.

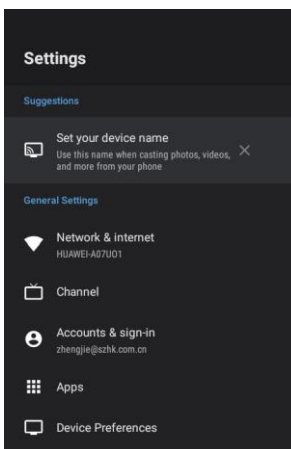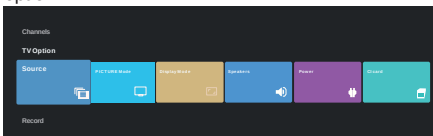


Network

 - 1.Press the "Network&Internet" icon.
- 2.Browse the desired configuration /Network.
- 3.Press the OK button to save and return to the previous menu.

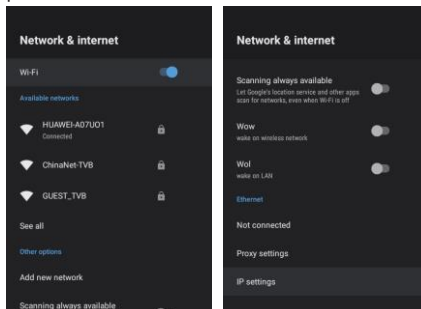

CHANNEL

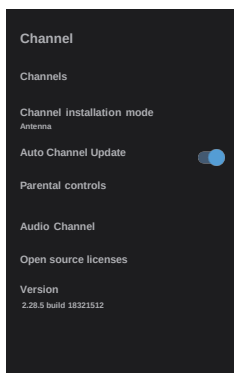 

Channels – Display the scan sub-menu based on different Channel installation modes.

Channel installation mode –Select on-screen display channel sources. You can select the signal type.

- **Antenna** –Set the signal type to antenna. When set to Antenna, the TV can receive analog and digital (DVB/T2) broadcasting signals.
- **Cable** – Set the signal type to cable. When set to Cable, the TV can receive analog and QAM broadcasting signals.

 
Auto Channel Update

Parental controls –Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.


Audio Channel –Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Open source licenses –Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.


Antenna

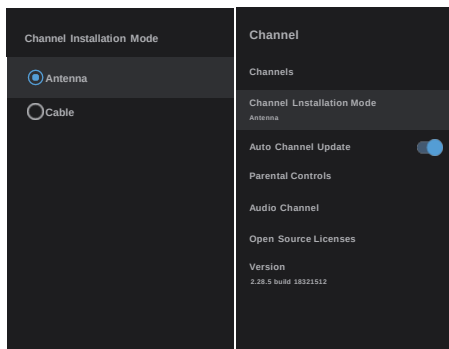

 1.Menu->Settings->Channel->Channel Installation Mode enter,choose Antenna

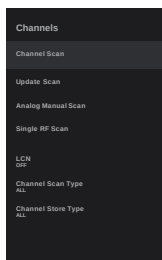


 2.Enter Menu->Settings->Channel->Channels.

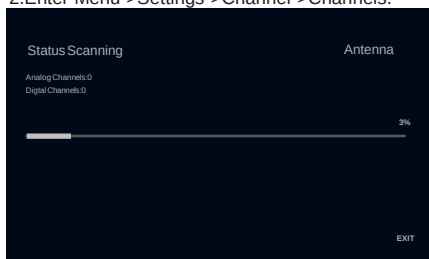


3. Channel Scan opens the ATV+DTV automatic search platform interface of Antenna.

 Update Scan:Re-automatically search for frequency points outside.

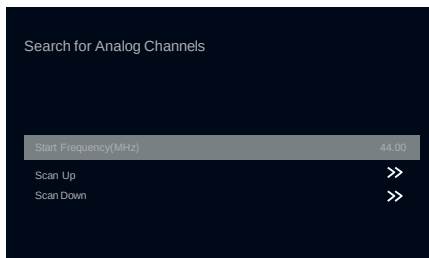


 Analog Manual Scan:Manual ATV search station. After input the frequency point, you can select up or down search station.

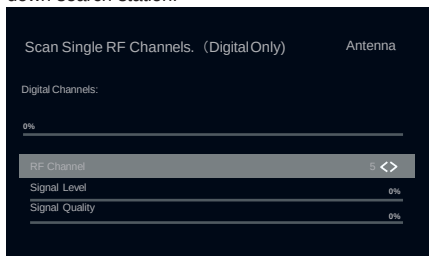


Single RF Scan:DTV manual search,left and right after selecting RF Channel,directly OK search.

 
Cable

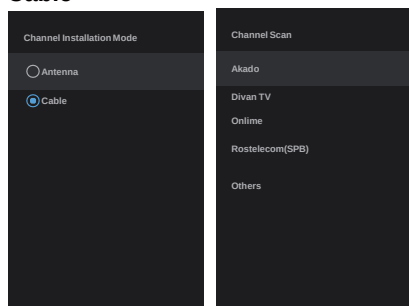

 - 1.Menu->Settings->Channel->Channel Installation Mode,select Cable
2. Enter Menu->Settings->Channel->Channels.

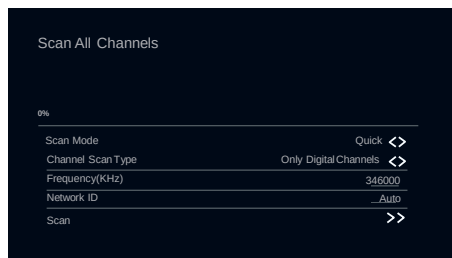

 3.Enter Channel Scan, where Akado, Divan TV,Online and Rostelecom (SPB) are the local operators,and the default Scan Mode is Advance;Others have Advance, Quick and Full Scan modes.

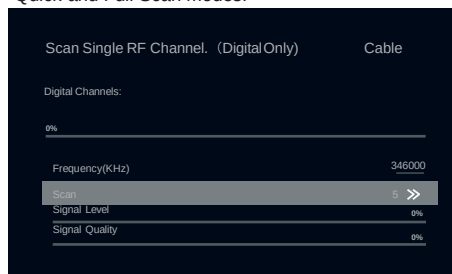


Single RF Scan : Manual search station.

NOTE

- UK area is have not the ATV function.

 
DEVICE PREFERENCES ABOUT

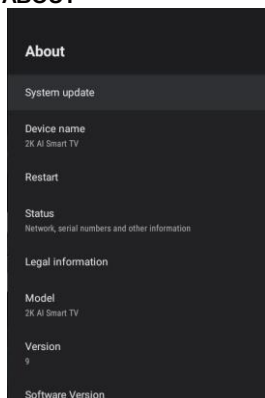

In this menu, you can read the information and settings of TV.

- 1.Press ▲/▼ button to select what you want set.
- 2.Press OK button to adjust.
- 3.After finishing your adjustment,press **BACK** button to return to the previous menu.

 DATE&TIME

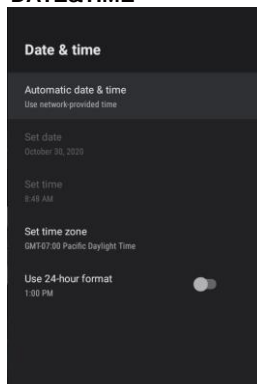

Automatic date & time– Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional:Use network-provided time ,Off)

NOTE

- Manually adjusting date & time settings will automatically change the **Automatic date & time** to **OFF**.


Set date– Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Set time – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Set time zone – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Use 24-hour format – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

 TIMER

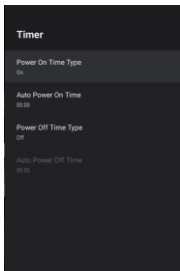


Power On Timer Type – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF/ONCE.

Power On Timer – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Power Off Timer – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF/ONCE.


Power Off Timer – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

 LANGUAGE

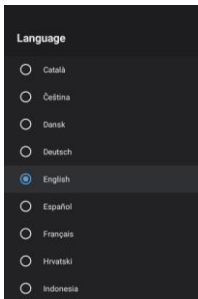

Language – Press ▲/▼ button to select the option then press **OK** button to select language.

 KEYBOARD

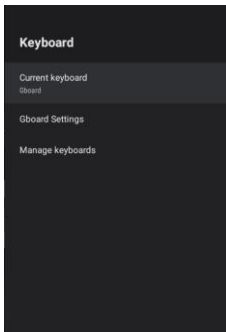


Current keyboard – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Gboard Settings – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

Manage keyboards – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

 INPUTS

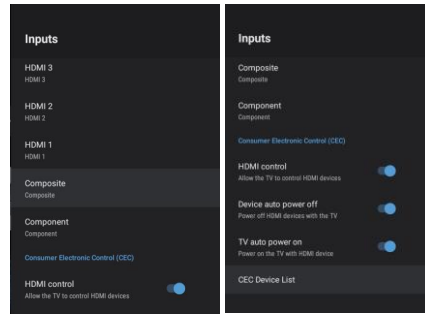

Inputs – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

 
HDMI control – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

Device auto power off – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

TV auto power on – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

HDMI EDID Version – Displays EDID version. **CEC Device List** – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

POWER

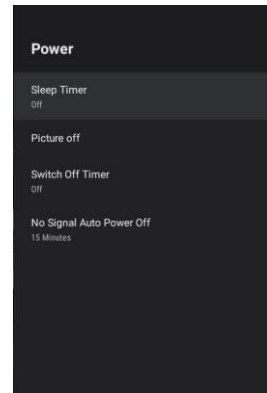


Sleep Timer – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: OFF, 10 minutes, 20 minutes, 30 minutes, 40 minutes, 50 minutes, 60 minutes, 90 minutes, 120 minutes)

Picture OFF – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

Switch off timer – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Optional: OFF, 30 minutes, 60 minutes, 90 minutes, 120 minutes, 150 minutes, 180 minutes, 210 minutes, 240 minutes)

No Signal Auto Power Off – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu. (Options: 5, 10, 15, 30 or 60 minutes)

 PICTURE

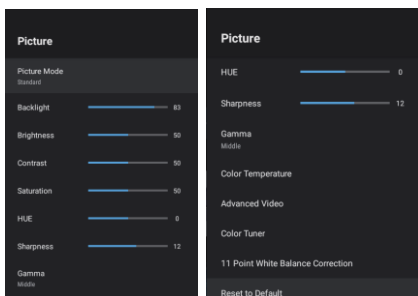

Picture Mode – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.(Options: User, Standard,Vivid, Sport, Movie, Game, Energy saving).

Backlight/Brightness/Contrast/Saturation/HUE/Sharpness –Press ▲/▼ button to select the option.

Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

Gamma – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.(Options: Dark, middle, Bright).

Color Temperature – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Picture format – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Options: Automatic/Super zoom/4:3/Movie expand 14:9/Movie expand 16:9/Wide screen/Full/Unscaled).

HDR – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.(Options: ON/OFF)

 
Advanced Video – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Color Tuner – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

11 Point White Balance Correction – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Reset to Default – Resets all settings to the factory defaults.

SOUND

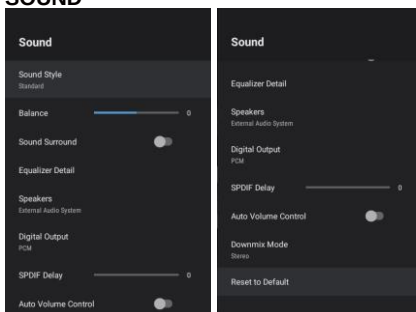

Sound style – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: User, Standard,Vivid,Sports,Movie,Music, News).

Balance/ Bass/ Treble – Press ▲/▼ button to select the option.Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

Sound Surround – Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

Equalizer Detail – Press ▲/▼ button to select the option then press OK button to enter the sub-menu.

Speakers – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional: TV Speaker or external Audio System).

Digital Output – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional:Auto,Bypass,PCM ,Dolby Digital Plus, Dolby Digital).

 
SPDIF Delay – Press ▲/▼ button to select the option.Press ◀ to decrease the parameter. Press ▶ to increase the parameter.

Auto Volume Control – Press ▲/▼ button to select the option then press OK button to choose ON/OFF.

Downmix Mode – Press ▲/▼ button to select the option then press OK button to enter the sub-menu. (Optional:Stereo,Surround).


Reset to Default – Reset all settings to the factory defaults.

STORAGE

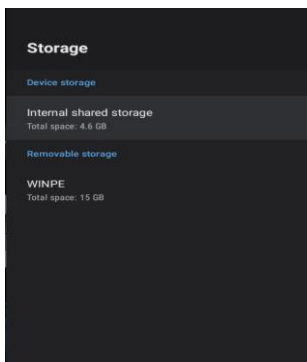

Internal shared storage – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.
Removable Storage – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.
 (Note: Show external devices if available).

 
HOME SCREEN

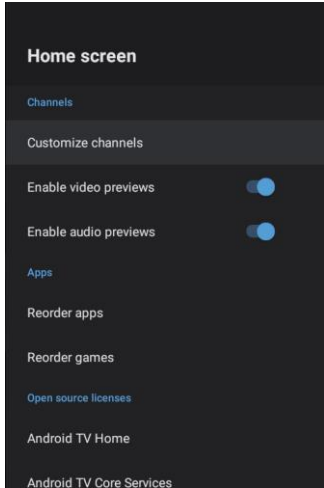

In this menu, you can set channels, apps, open source licenses.


1. Press ▲/▼ button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment, press **BACK** button return to the previous menu.

 STORE MODE

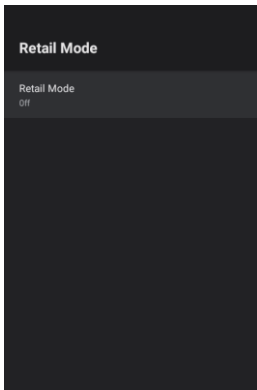

Retail mode – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

 
GOOGLE Assistant

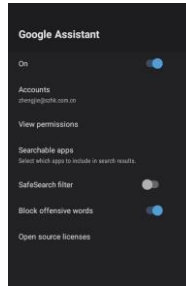

In this menu, you can set searchable apps, safe search filter, block offensive words, open source licenses.

1. Press ▲/▼ button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment, press **BACK** button return to the previous menu.

 
CHROMECAST BUILT-IN

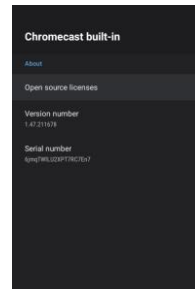

In this menu, you can read the information and settings of Chromecast

1. Press ▲/▼ button to select what you want set.
2. Press **OK** button to adjust.
3. After finishing your adjustment, press **BACK** button return to the previous menu.

 SCREEN SAVER

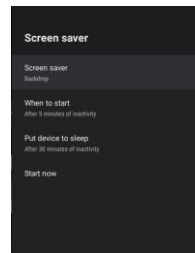

Screen saver – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.
(Optional: Turn screen off, Backdrop, Colors)
When to Start – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.
 (Optional: 5, 15, 30 minutes, 1, 2 hours,).

 
BASIC OPERATION

Put device to sleep – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

(Optional: 30 minutes, 1, 3, 6,12 hours, Never).

Start now – Press ▲/▼ button to select the option then press **OK** button to enter screen saver.


LOCATION

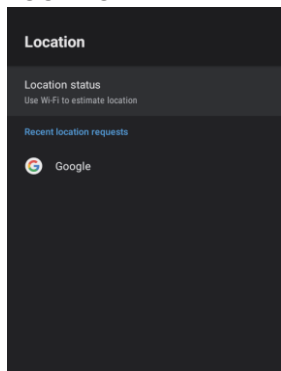

Location status – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.


(Optical:Use Wi-Fi to estimate location,Off)

 USAGE & DIAGNOSTICS

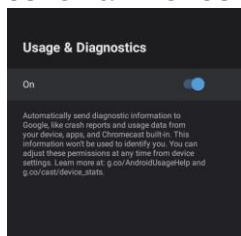

Usage & diagnostics – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.

 ACCESSIBILITY

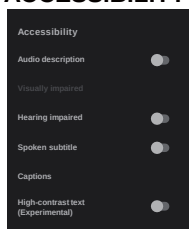


Captions – Press ▲/▼ button to select the option then press **OK** button to enter the sub-menu.

High contrast text – Press ▲/▼ button to select the option then press **OK** button to choose ON/OFF.


RESET

Press **OK** button to enter the sub-menu.

 Reset-Erase everything.

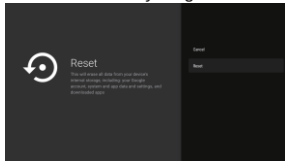


REMOTE&ACCESSORIES

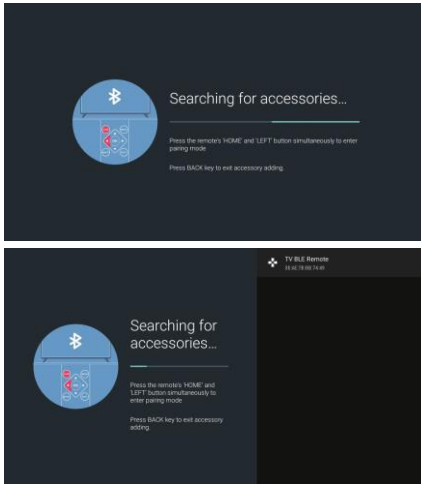 


In this menu, you can pair Bluetooth devices.

1. Press the **"HOME"** and **"LEFT"** buttons at the bottom of the remote control for 5 seconds.
2. When the LED starts to flash, release it. The remote controller will send the pairing signal to the TV and display the information of the remote control on the right side of the screen.
3. Press the **OK** button to display the pairing. If the paired is displayed, the connection is successful.
4. If the couldn't pair appears, the connection fails. Wait 30 seconds and then press the **"HOME"** and **"LEFT"** buttons at the bottom of the remote control for 5 seconds to repeat the previous steps.
5. Press **BACK** or **EXIT** button return to the previous menu.

 ADD AND USE OF MULTI MEDIA PLAYER

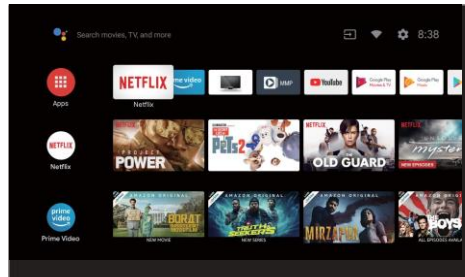

 1. In the HOME interface, select the **+** icon in the APP column to add the application, and click OK. Press up and down to select the DigitalMediaPlayer application, and click OK to add it to the HOME interface.

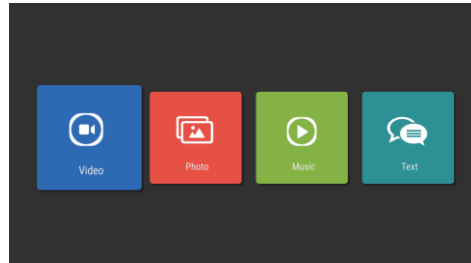

2. Select OK key to enter DigitalMediaPlayer and display Video, Photo, Audio Text. After inserting the usb flash drive, you can view the corresponding files in the usb flash drive.

NOTE

The menu may be different depending on when you purchased the TV.

TROUBLESHOOTING

If your TV does not operate normally or cannot be turned on, please check the following troubleshooting questions. Remember also to check any other connected electronic device, such as DVD or Blu-ray player to pinpoint the problem. If the TV still fails to operate normally, please contact technical support.

The TV does not operate properly

The TV does not respond when pressing any buttons	The TV may freeze up during use. Disconnect the power cord from the power socket for a few minutes. Reconnect the power cord and try to operate it again as usual.
TV cannot be switched on	- Check that the TV is connected to the power supply. - Make sure all connected AV devices are switched off before switching on your TV.
The remote control does not work	- Check to see if there are any objects between the TV and the remote control causing an obstruction. Ensure that you are pointing the remote control directly at the TV. - Ensure that the batteries are installed with the correct polarity (+ to +, - to -). - Install new batteries.
Power is suddenly turned off	- Check the power of the TV. The power supply maybe interrupted. - Check if the sleep timer is set. - Check whether the Auto Standby is activated.

The video function does not work

No picture & No Sound	- Check whether the TV is switched on. - Try another channel. The problem may be caused by the broadcaster.
Picture appears slowly after switching on	This is normal; the image is muted during the TV startup process. Please contact your service centre if the picture has not appeared after five minutes.
No or poor colour or poor picture	- Adjust the settings in the PICTURE menu. - Try another channel. The problem may be caused by the broadcaster. - Check if video cables are connected properly.
Horizontal/Vertical bar or picture shaking	Check for local interference such as an electrical appliance or power tool.
Poor reception on some channels	- The station or cable channel may be experiencing problems; tune to another station. - Station signal may be weak, reposition the antenna for better reception. - Check for sources of possible interference.
Lines or streaks in pictures	Check antenna (change the position of the antenna.)
No pictures when connecting HDMI	Check if the input source is HDMI.
Pictures appear in wrong ratio	Adjust the Aspect Ratio settings in the SETUP menu or press the ASPECT button on the remote control.

The audio function does not work

Picture OK but no sound	• Press the VOL +/- buttons. • Sound muted? Press the MUTE button. • Try another channel. The problem may be caused by the broadcaster.
No output from one of the speakers	• Adjust the Balance settings in the AUDIO menu.
Unusual sound from inside the TV	• A change in ambient humidity or temperature may result in an unusual noise when the TV is switched on or off and does not indicate a fault with the TV.
No sound when connecting HDMI	• Check if the input source is HDMI.
Audio noise	• Keep the RF coaxial cable away from the other connected cables.

Password

Lost password	• If you forget the password, you can resetting a new password after reset the TV.
---------------	--

There is a problem in PC mode

The signal is out of range (invalid format)	• Adjust the resolution, horizontal frequency, or vertical frequency.
Vertical bar or stripe on background and Horizontal Noise and Incorrect position	• Use Auto configures or adjust clock, phase, or H/V position.
Screen colour is unstable or show a single colour	• Check the signal cable. • Reinstall the PC video card.



Maintaining

- Do not use your TV in areas that are too hot or too cold, because the cabinet may warp or the screen may malfunction. Your TV works best in temperatures that are comfortable to you.
 - Storage temperatures are 32° to 122°F(0° to 50°C)
 - Working temperatures are 32° to 95°F(0° to 35°C)
 - Do not place your TV in direct sunlight or near a heat source
- minmum 5 cm distances around the apparatus for sufficient ventilation.
- the ventilation should not be impeded by covering the ventilation openings with items,such as newspapers,table-cloths,curtains, ect;
- no naked flame sources,such as lighted candles,should be placed on the apparatus;
- attention should be drawn to the environmental aspects of battery diaposal.

Plug replacement-UK

Should you need to replace the plug; the wires in the power cable are coloured in the following way:

Blue – Neutral 'N'

 
Brown – Live 'L'

As the colours of the wires in the power cable may not correspond with the coloured markings identifying the terminals in your plug, and proceed as follows:

The blue wire must be connected to the terminal that is marked with the letter N.

The brown wire must be connected to the terminal that is marked with the letter L.

If the power lead is damaged, it must be replaced by a qualified electrician.

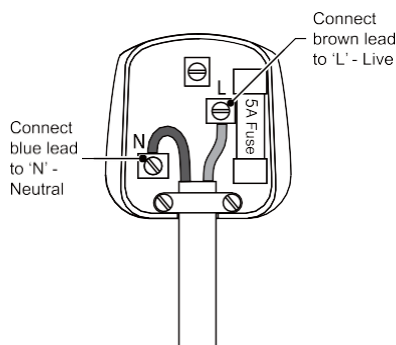

SPECIFICATION

Panel Size	24 inch diagonally
Display Type	LED
Panel Technology	TFT
Panel 60 Hz Vs. 120 Hz	60 Hz
Display Resolution	720P
HDMI Support	Up to 1080P
Panel Resolution	1366 x 768
Aspect Ratio	16:9
Dynamic Contrast Ratio-Panel	2400~3000:1
Response Time (G To G)	9.5 ms
Lamp Life (Typ. Hours)	>30,000 hours
Horizontal Viewing Angle (At CR>10)	178
Vertical Viewing Angle (At CR>10)	178
Wall-mount(LxW-mm)	100* 100(mm)VESA

Reserve the right to change the parameters without prior notice.

DISPOSAL INFORMATION

Instructions for waste disposal:

Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bag, must be kept away from children.

The cold cathode fluorescent lamp in LCD PANEL contains a small amount of mercury; please follow the local laws or regulations for disposal.

Information for Users on Disposal of old Equipment and Batteries (European Union only)

These symbols indicate that equipment with these symbols should not be disposed of as general household waste. If you want to dispose of the product or battery, please consider the collection systems or facilities for appropriate recycling.

Notice: The sign Pb below the symbol for batteries indicates that this battery contains lead.



Products



Battery

Information for Users in European Union Countries

This symbol on the product or on its packaging means that your electrical and electronic device should be disposed of at the end of its service life separately from your household wastes. There are separate collection systems for recycling in EU.

For more information, please contact the local authority or the dealer where you purchased the product.



We hereby declare that this 24" HD LED TV is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Service Hotline:

0-845-658-8290



IMPORTER ADDRESS:

**UNIT 1 KENFIG INDUSTRIAL ESTATE
PORT TALBOT SA13 2PE
UNITED KINGDOM
COMPANY NO. 07230773**

