



Tools Required

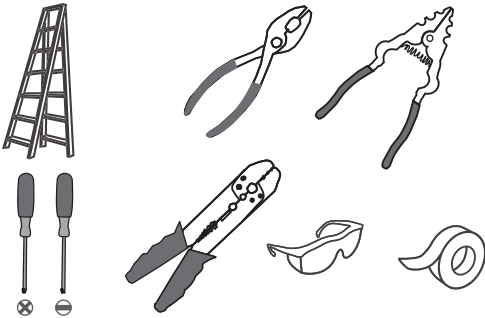

Light Source

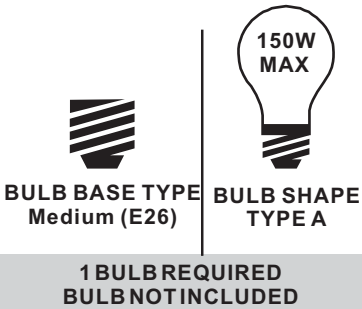

Fixture Height Adjustable
22" to 118"

Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.


Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG

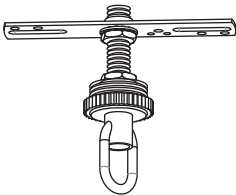


A Crossbar Assembly
x 1



B Outlet Box Screw
x 2



 C Wire Connector
x 3




D Quick Link
x 2



E Fixture Chain
x 1



F Ceiling Canopy
x 1

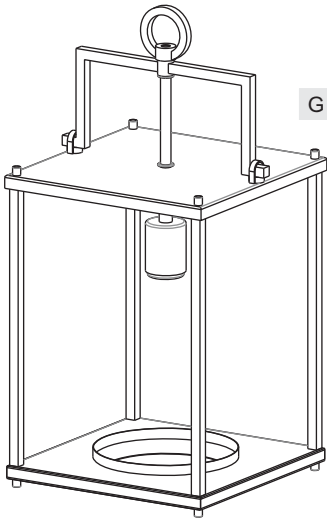

G Fixture Body
x 1




H Glass
x 1

Table of Contents

Glass	Crossbar Assembly	Fixture Chain	Wiring	Ceiling Canopy	Bulb
STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6


STEP 1

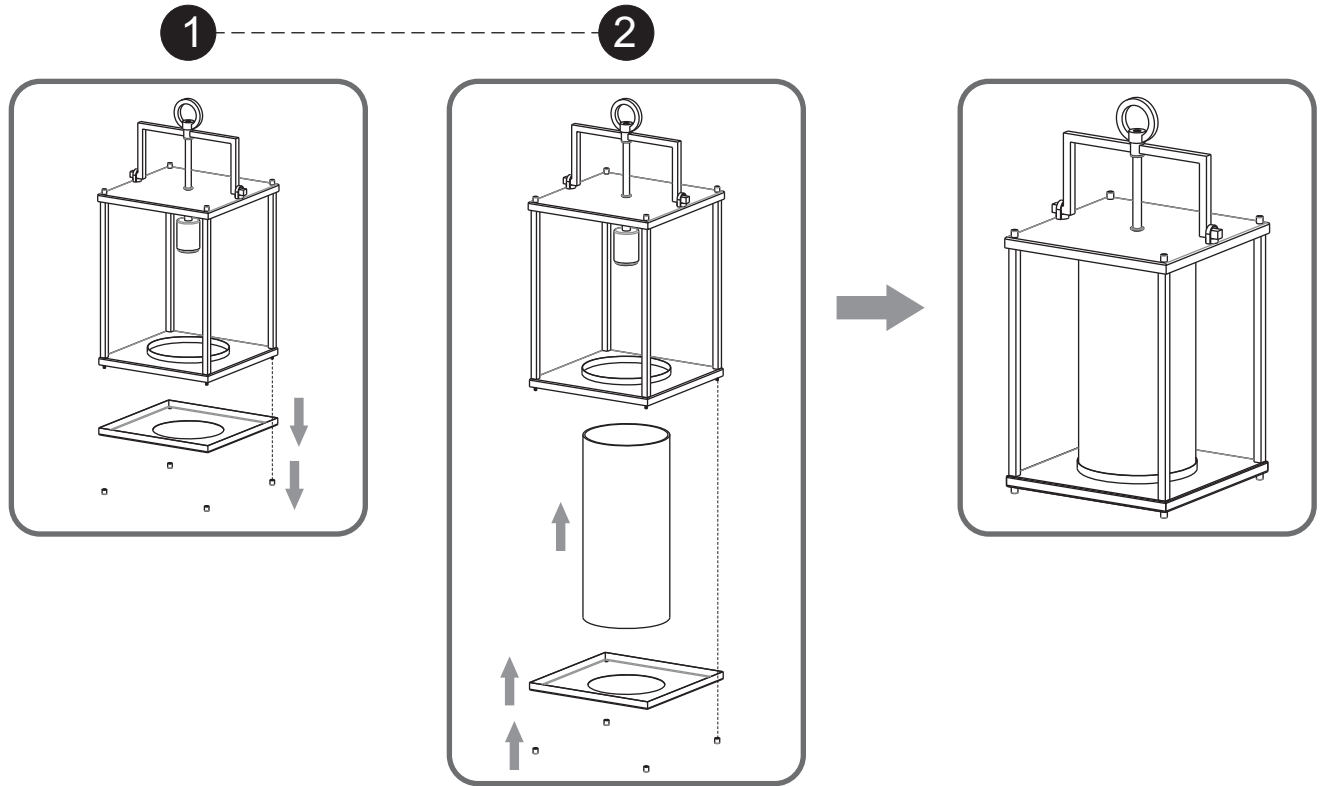

STEP 2


1

Step 1
Install crossbar assembly

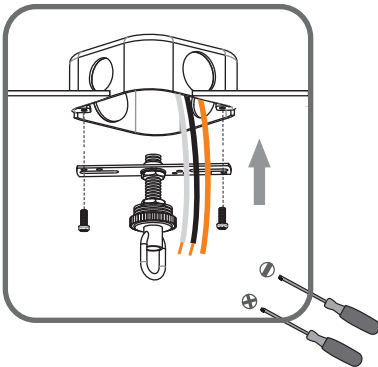


2

Step 2 - 3
Test fitting ceiling canopy to nipple

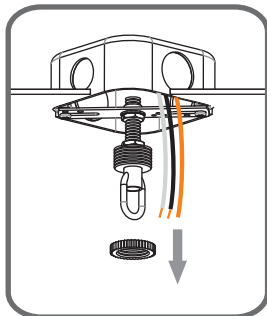


3

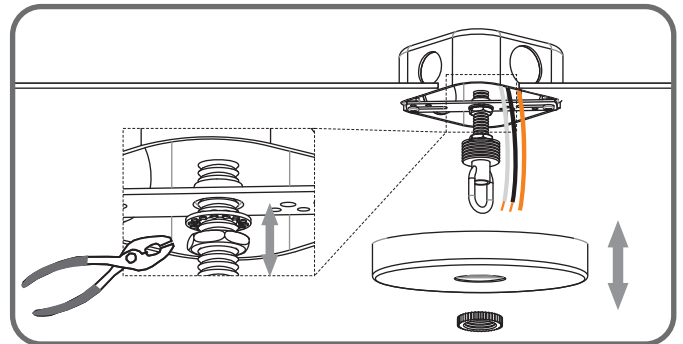

STEP 3

1

Step 1
Adjust fixture chain length


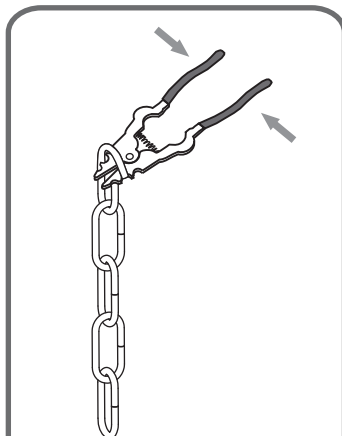


Suggested Chain Length:

8' ceiling: 9.5" Chain
9' ceiling: 10.5" Chain
10' ceiling: 21.5" Chain

2


Step 2 - 3
Install Fixture Chain

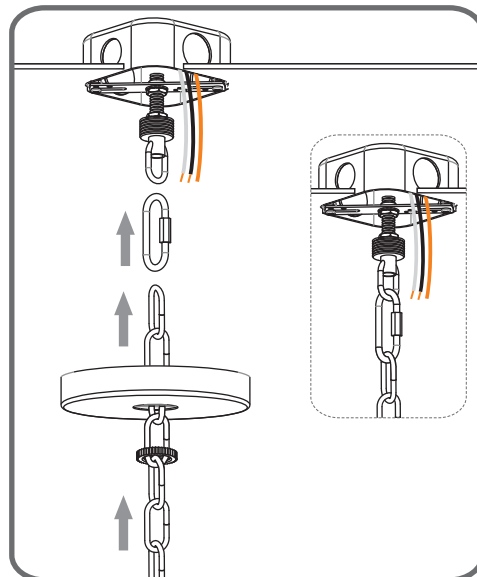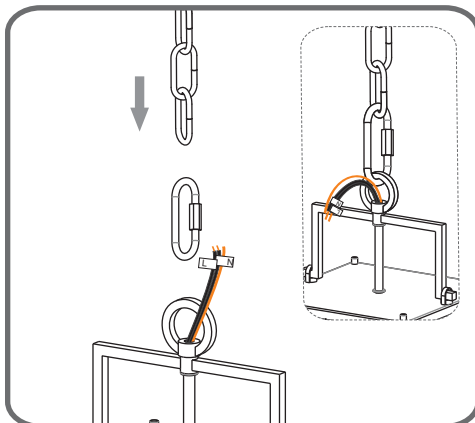


STEP 4

1


Step 1
Feed the fixture wires
through the loop

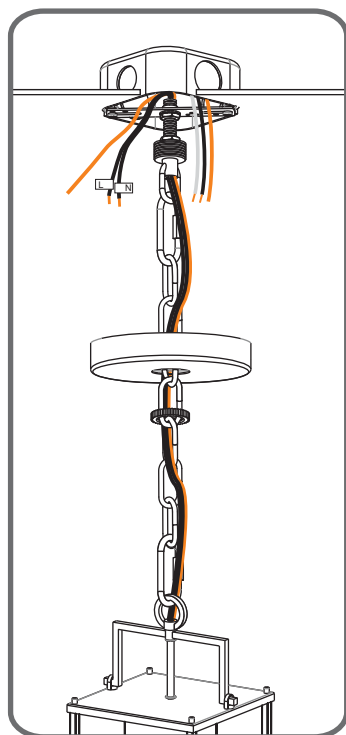

2

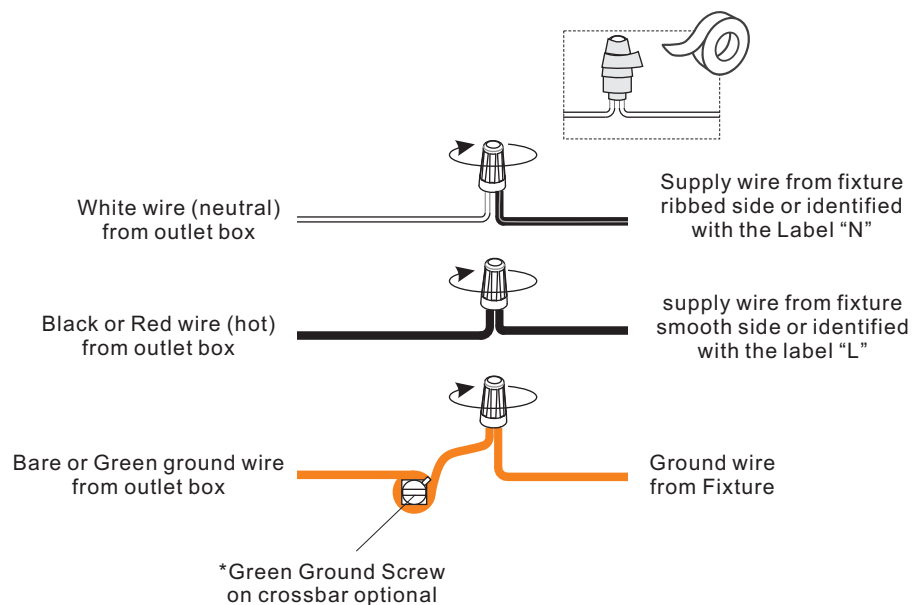

STEP 5

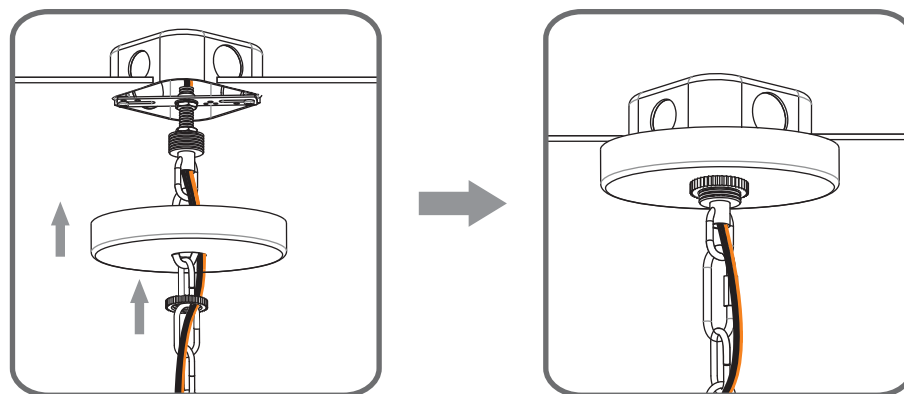

STEP 6

