

Quick Reference Guide

MaxiAP AP2500

DIAGNOSTIC/SERVICE SCAN TOOL



AUTEL®

AUTEL®
Web: www.autel.com

Quick Reference Guide

MaxiAP AP2500

Thank you for purchasing this AUTEL tool. Manufactured to a high standard, our tool will, if used according to these instructions and properly maintained, give you years of trouble-free performance.

Getting Started

- IMPORTANT:** Before operating this unit, please read these instructions and the user manual carefully and pay extra attention to the safety warnings and precautions. Please use this unit as instructed. Failure to do so may cause damage and/or personal injury and will void the product warranty.
- NOTE:** The images and illustrations depicted in this quick guide may differ slightly from the actual ones. The user interfaces for iOS & Android devices might be slightly different. The screenshots in this quick guide are captured from the iOS device app.

1

Download & install app

- Scan the QR code or search for **Autel Link** in App Store or Google Play to download and install the app to your device.

2

Register & log in

- Open the Autel Link app and tap **Register** on the screen.
- Follow the on-screen instructions to complete the registration.
- Log in with your registered email address/ phone number and password.

3

Add the dongle

- On the Main Job, tap **Me > Device Manager > Binding Equipment**, the device will automatically jump to the next screen.
- Tap to scan the QR code imprinted on the Bluetooth dongle or add the dongle by model.

4

Bind VCI with device

- After the scanning is complete and the serial number is automatically retrieved, tap the **Bind Equipment** button at the bottom of the interface to pair dongle with device.

5

Find OBDII Port

Plug the connector of the Bluetooth dongle into the vehicle's OBDII port.

- The vehicle's OBDII port is generally located under the vehicle dashboard (Consult vehicle user manual for specific location).

6

Key On, Engine Off

Turn the vehicle ignition to Key On, Engine Off position.

- The LED on the dongle will light solid green when connected.

NOTE: The interfaces in this quick guide are for reference only.

7

VCI Connection

For both Android and iOS devices, tap **Me > Device Manager > AP2500** to pair the dongle with your device. For iOS devices, tap **Settings > Bluetooth** on your iOS device to open the Bluetooth function. Then tap the Bluetooth name on the screen to pair it with the device. The Bluetooth name starts with AP, followed by the serial number of the dongle.

- Ensure your device's Bluetooth is turned on.
- When the device is successfully paired with the dongle, the LED on the tool will light solid blue.

8

Finish Installation

- Your MaxiAP AP2500 dongle is now ready for use.

UPDATE

Software: When a new version is available, an **Update** button will display. Tap the button to update the software.

VCI Firmware: Tap **Me > Device Manager > AP2500 > Firmware Upgrade** to update the firmware if a new version is available.

For service and support, please contact us:

<http://pro.autel.com> / www.autel.com / support@autel.com
0086-755-2267-2493 (China HQ) / 1-855-AUTEL-US (288-3587) (North America)
0049 (0) 6103-2000520 (Europe) / +045 5948465 (APAC) / +971 585 002709 (IMEA)
© Autel Intelligent Technology Corp., Ltd. All Rights Reserved.



FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.


Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



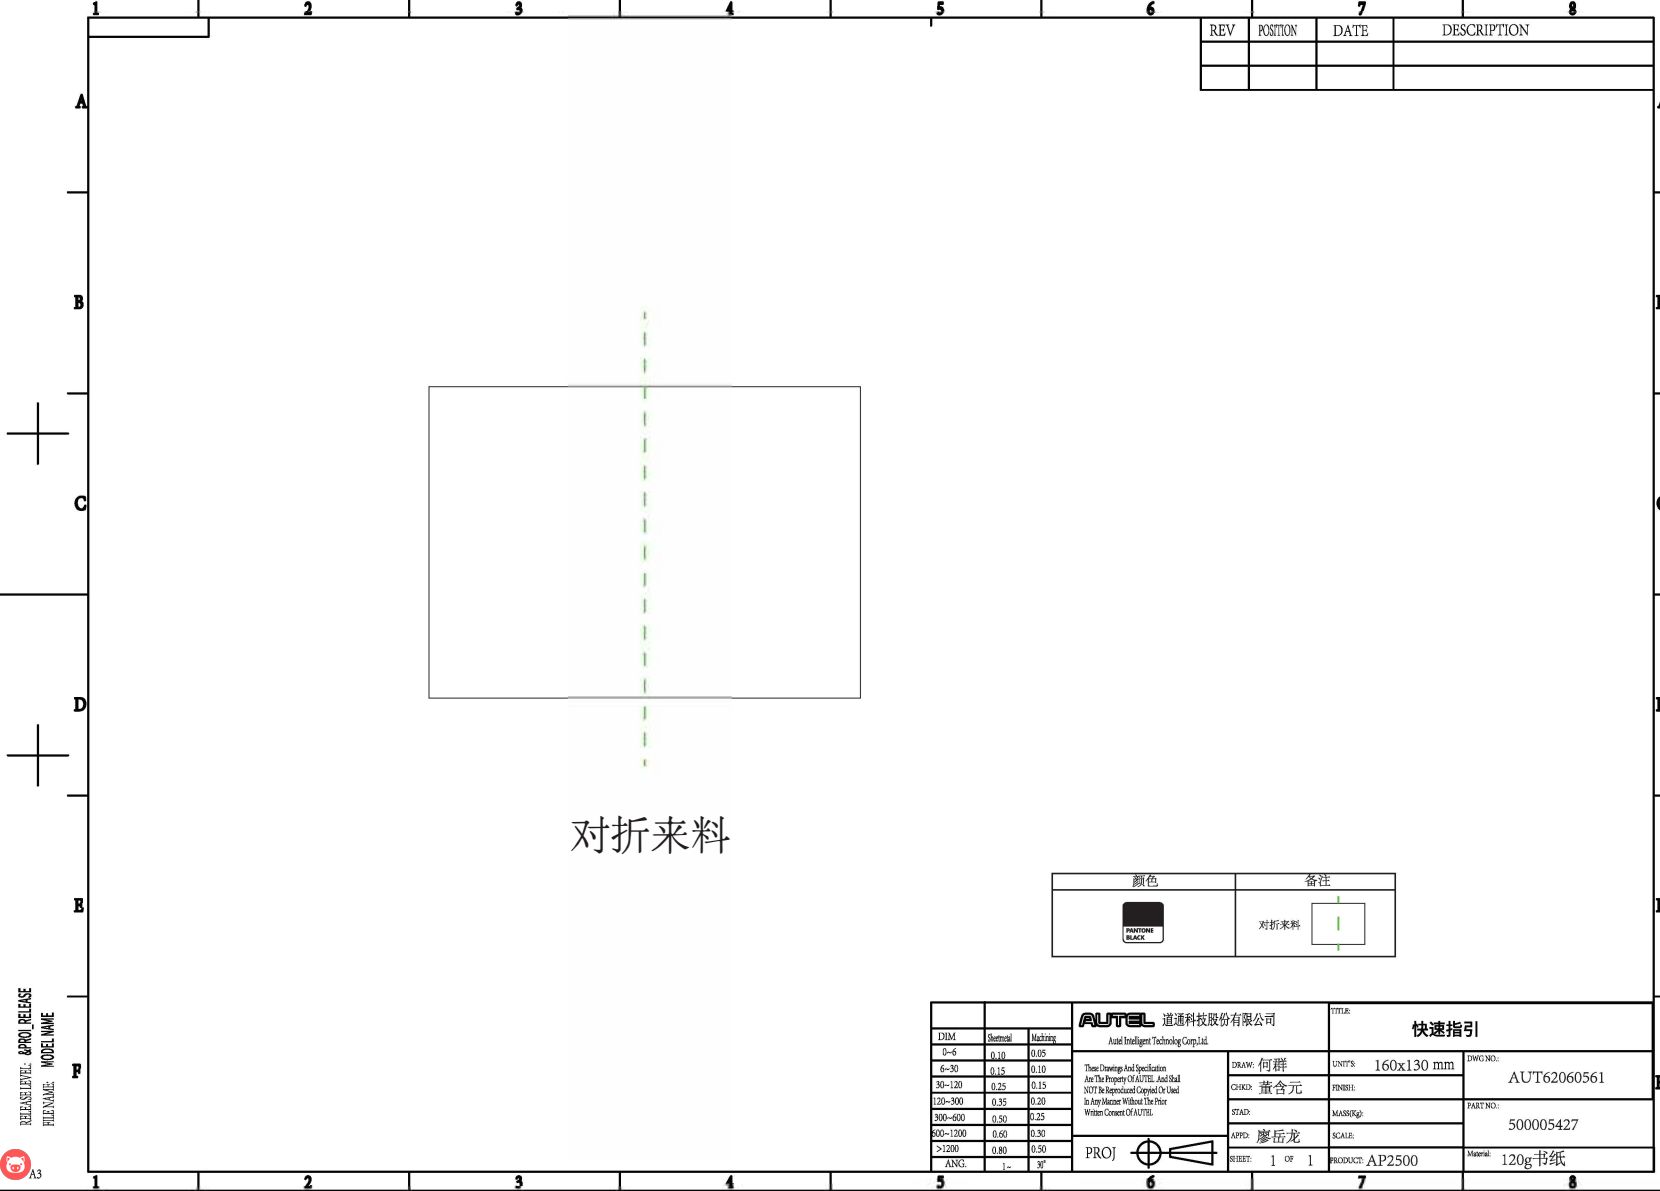

REV	POSITION	DATE	DESCRIPTION

对折来料

颜色	备注
	

			AUTEL 道通科技股份有限公司 Autel Intelligent Technology Corp., Ltd.		快速指引		
DIM	Tolerance	Machine	DRAW: 何群	UNIT'S 160x130 mm	DWG NO:	AUT62060561	
0-6	0.10	0.05	CHECK: 董含元	FINISH:	PART NO:		
6-30	0.15	0.10	These Drawings And Specification Are The Property Of AUTEL And Shall NOT Be Reproduced Copied Or Used In Any Manner Without The Prior Written Consent Of AUTEL.				
30-120	0.25	0.15	STATUS:	MASSAGE:	500005427		
120-300	0.35	0.20	APPRO: 廖岳龙	SCALE:			
300-600	0.50	0.25	SHEET: 1 OF 1	PRODUCT: AP2500			
600-1200	0.60	0.30	PROJ 		Material: 120g书纸		
>1200	0.80	0.50					
ANG:	1~	30°					